



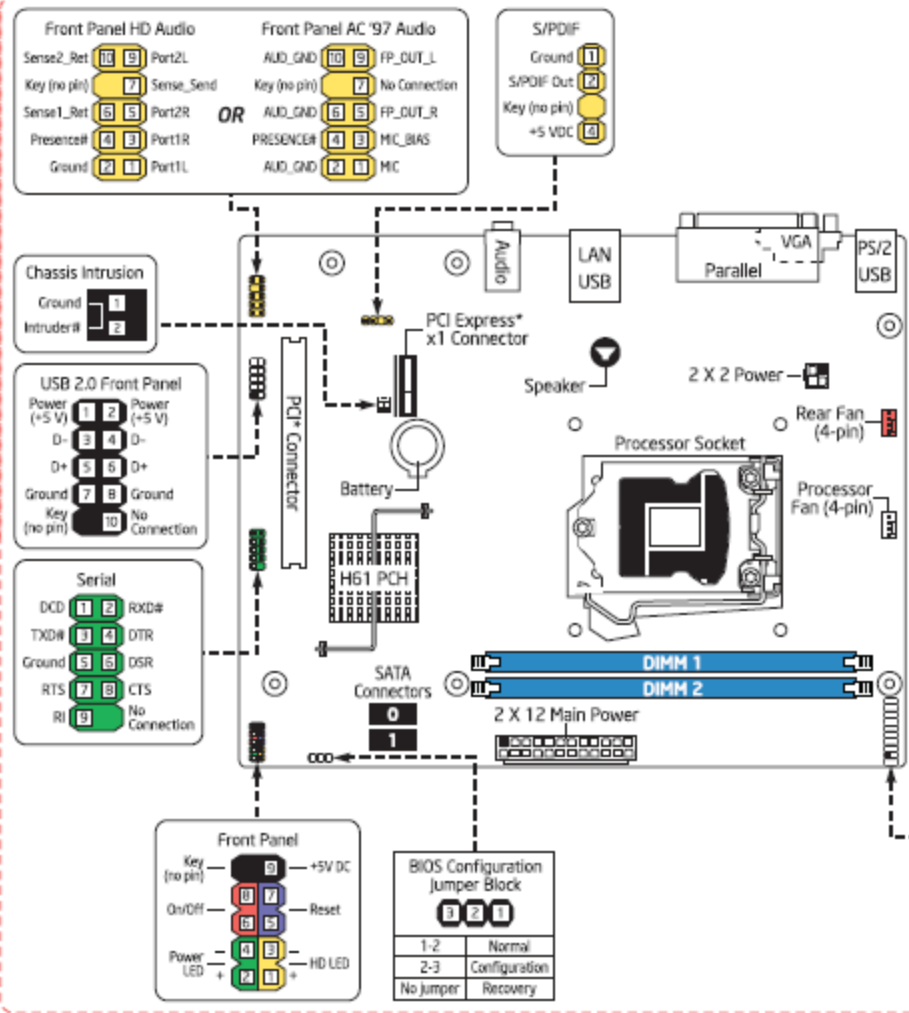

DH61SA

CAUTION
 Risk of explosion if the battery is replaced with an incorrect type. Batteries should be recycled where possible. Disposal of used batteries must be in accordance with local environmental regulations.

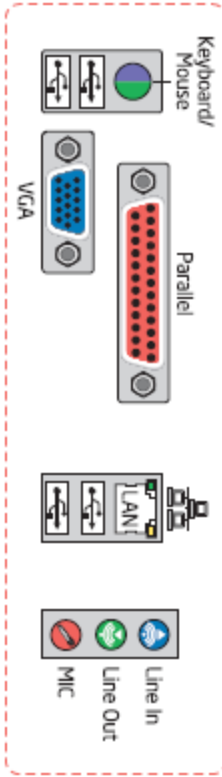

Front Panel HD Audio			Front Panel AC '97 Audio		
Sense2_Ret	16	5	Port2L	10	9
Key (no pin)	7	2	Sense_Send	2	No Connection
Sense1_Ret	6	5	Port2R	6	5
Presence#	4	3	Port1R	4	3
Ground	12	11	Port1L	2	1
			AUD_GND	10	9
			Key (no pin)	7	No Connection
			AUD_GND	6	5
			PRESENCE#	4	3
			AUD_GND	2	1
			MIC		

S/PDIF		
Ground	1	
S/PDIF Out	2	
Key (no pin)	3	
+5 VDC	4	

Chassis Intrusion		
Ground	1	
Intruder#	2	

USB 2.0 Front Panel		
Power (+5 V)	1	2
D-	3	4
D+	5	6
Ground	7	8
Key (no pin)	9	10

Serial		
DCD	1	2
TXD#	3	4
Ground	5	6
RTS	7	8
RI	9	

Front Panel		
Key (no pin)	9	+5V DC
On/Off	1	Reset
Power LED +	2	
	3	HD LED

BIOS Configuration Jumper Block		
1-2	Normal	
2-3	Configuration	
No jumper	Recovery	

TPM Header		
No Connection	20	19
TPM_CLKRUN#	18	17
TPM_SERIRQ	16	15
No Connection	14	13
Ground	12	11
LAD1	10	9
LAD2	8	7
No Connection	6	5
Key (no pin)	3	
Ground	2	1

Attach this label near the back panel connectors.

Attach this label to the inside surface of the chassis.

*Other names and brands may be claimed as the property of others. Copyright © 2011, Intel Corporation. All rights reserved.