
 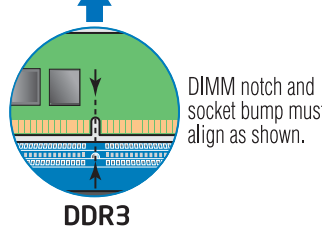


## 7 Install DIMM Memory Modules


### DDR3 DIMM Memory Identification:

- The Intel® Server Board S5520HC supports up to 12 DIMMs.
- The Intel® Server Board S5500HCV supports up to 9 DIMMs.
- Both server boards support DDR3-800/1066/1333 RDIMMs or UDIMMs.



### Memory Configurations and Population Order:

- Minimum of one 1 GB DDR3-800/1066/1333 RDIMM or UDIMM.
- Install from first slot of each channel (A1, B1, C1, D1, E1, or F1).
- Install Quad-Rank DIMM from first slot of each channel.
- Channel D, E, and F are not available when CPU 2 socket is empty.
- DIMM slots D2, E2, and F2 are empty on the Intel® Server Board S5500HCV.
- Mixing of RDIMMs and UDIMMs is not supported.
- Mixing memory type, size, speed and/or rank on this platform has not been validated and is not supported.
- Mixing memory vendors is not supported on this platform by Intel®.
- Non-ECC memory is not supported and has not been validated in a server environment.

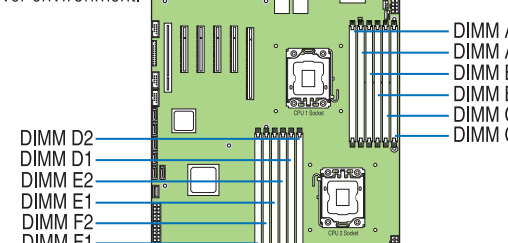

### To Install DIMMs:

**CAUTION:** Avoid touching contacts when handling or installing DIMMs.

- Open both DIMM socket levers.
- Note location of alignment notch.
- Insert DIMM making sure the connector edge of the DIMM aligns correctly with the slot.
- Push down firmly on the DIMM until it snaps into place and both levers close.
- IMPORTANT! Visually check that each latch is fully closed and correctly engaged with each DIMM edge slot.

## 8 Install Heat Sink(s)


Passive processor heat sink(s) (FXXRGTSHINK) is required in the Intel® Server Chassis SC5600LX. Active processor heat sink(s) is required in other Intel® Server Chassis in the SC5600 and SC5650 families.

For a non-Intel chassis, see the documentation accompanying your chassis.

**CAUTION:** The heat sink has thermal interface material (TIM) on the underside of it. Use caution so that you do not damage the thermal interface material. Use gloves to avoid sharp edges. A second heat sink is required for a second processor.


- If a protective film covers the thermal interface material (TIM) on the underside of the heatsink, remove the protective film.
- Align active heat sinks in the Intel® Server Chassis SC5650 and SC5600 to let air flow go through to the center of the board.
- Using a #2 Phillips® screwdriver, finger-tighten each fastener diagonally, according to the white-circled numbers.
- Securely re-tighten each fastener again in the same order as performed in Step C.
- Attach active heatsink fan power cable to server board as shown.

ACTIVE

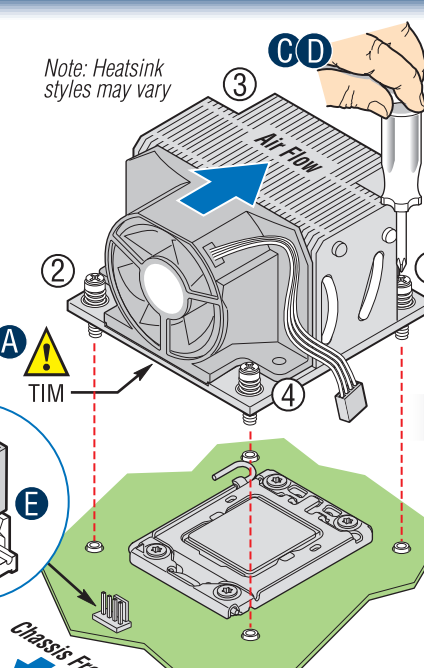

**CAUTION:** Do not over-tighten fasteners.


PASSIVE

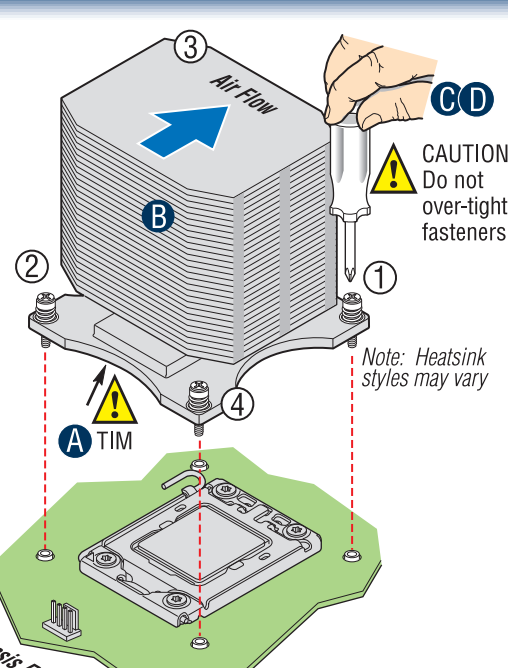

**CAUTION:** Do not over-tighten fasteners.



## 9 Install Optical Drive and Hard Drive(s)

See the documentation that came with your server chassis for drive installation.

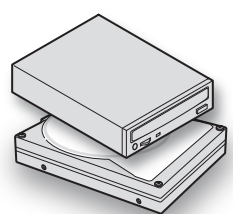


## 10 Install (Optional) RAID 5 Activation Key/Connect (Optional) SGPIO Cable/Connect Hard Drives/Optical Drive to Server Board

 - (Optional) Install optional RAID 5 Activation Key (AXXRAKSW5) on on-board RAID 5 Key connector as shown.
- (Optional) Connect the SGPIO cable to the server board SGPIO Connector as shown. Connect the other end of the SGPIO cable to the hot-swap hard disk backplane if installed.
- Connect SATA Data Cables to the server board as shown.

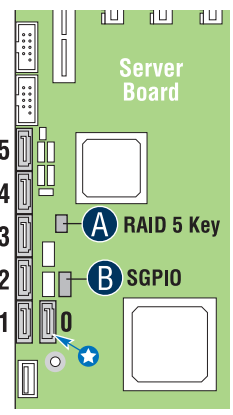

## 11 (Optional) Install Intel® SAS Entry RAID Module AXX4SASMOD


- Insert the three snap-standoffs into the matching holes in the server board.
- Attach the AXX4SASMOD module to the server board SAS module connector. Press firmly to engage the snap standoffs.
- (Optional) Connect SES or SGPIO cable to the matching connector on the AXX4SASMOD as shown. Connect the other end of the SES or SGPIO cable to the hot-swap hard disk backplane if installed. DO NOT connect both cables to the AXX4SASMOD SAS module.
- (Optional) Install optional RAID 5 Activation Key (AXXRAKSW5) to the AXX4SASMOD SAS module RAID 5 key connector as shown.

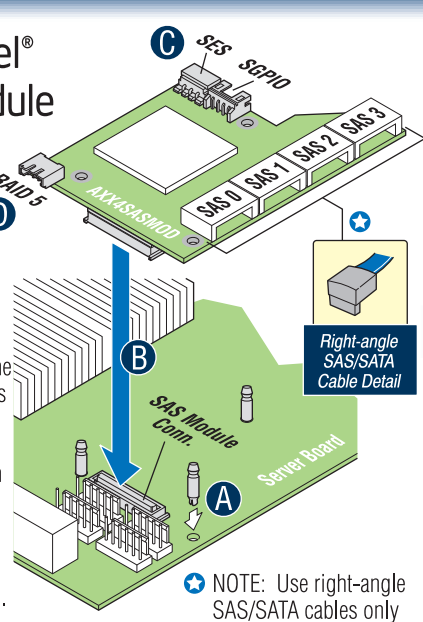

NOTE: Use right-angle SAS/SATA cables only


## 12 Attach Intrusion Switch Cable Accompanying Your Chassis (for Non-Intel Chassis)

Note: For a non-Intel chassis, see your chassis documentation for intrusion switch requirements.

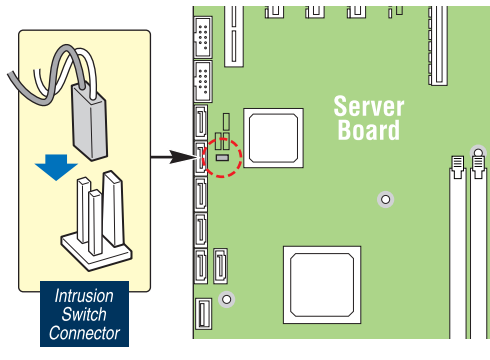

## 13 Attach Front Panel, Serial, and USB Connections

Note: For a non-Intel chassis, see your chassis documentation for intrusion switch requirements.

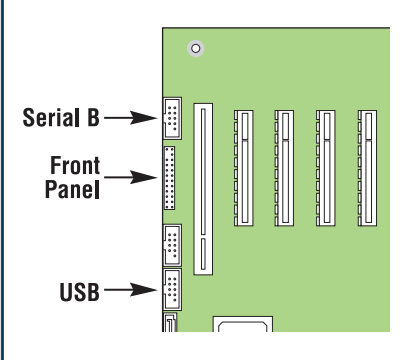



## 14 (Optional) Install Intel® Remote Management Module 3

- Attach the RMM3 module to the add-in card bracket as shown. Note: The RMM3 installs the same way as an add-in card. See your chassis documentation for add-in card installation procedures.
- Install the RMM3 in an add-in card slot near the server board RMM3 header.
- Attach the RMM3 ribbon cable. Make sure each connector end is securely seated.

**IMPORTANT NOTE:** Return to your Intel® Server Chassis Quick Start User's Guide, or your non-Intel chassis documentation to finish installation and configuration of your Intel® Server Board S5520HC and S5500HCV. Return to this document to finish up, including software, BIOS, drivers and operating system installation.

## 15 Chassis Fan Connections


See the documentation accompanying your chassis for specific chassis fan connection requirements. For a non-Intel server chassis, see "Making Connections ... Quick Reference" below and see the Intel® Server Board S5520HC and S5500HCV Service Guide.

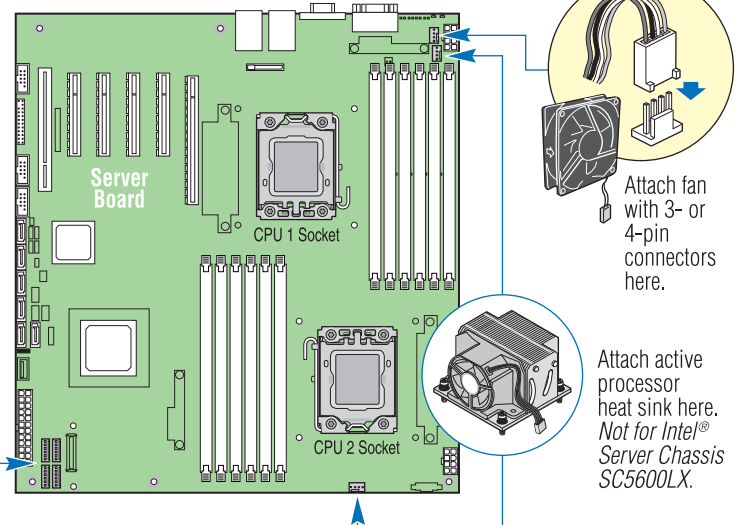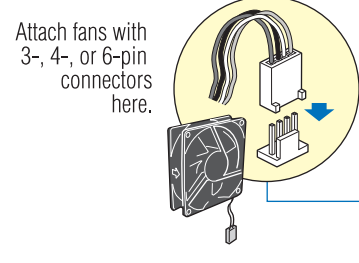

## 16 Install Add-in Cards


See the documentation that came with your server chassis for add-in card installation.

For the Intel® Server Chassis SC5650 and the SC5600, see the Quick Start User's Guide accompanying the chassis.

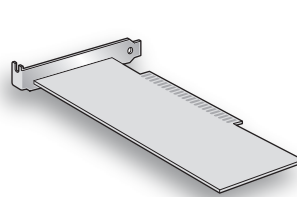

## 17 Finishing Up

Before installing your operating system, you must finish your chassis installation, make I/O connections and plug in AC power.

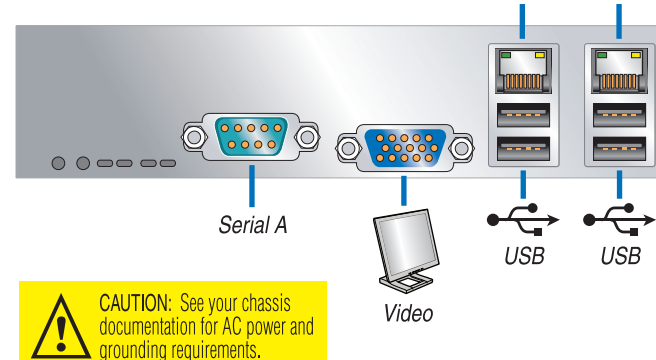

**CAUTION:** See your chassis documentation for AC power and grounding requirements.

## 18 Software - BIOS, Drivers, and Operating System Installation

- Confirm BIOS, BMC, ME, and FRUSDR Versions:** Look on the Server/System Management screen in the BIOS Setup Utility to determine the installed BIOS, BMC firmware, and FRUSDR versions. Compare these to the versions at: <http://support.intel.com/support/motherboards/server/s5520HC/>. If new versions are available, update the BIOS, BMC firmware, and FRUSDR on your server. See the Service Guide on the Intel® Server Deployment Toolkit 3.0 CD for update instructions.
- Configure your RAID Controller:** Use the instructions provided with the RAID controller.
- Install your Operating System:** Use the instructions provided with the RAID controller and with the operating system.
- Install Operating System Drivers:** With the operating system running, insert the Intel® Server Deployment Toolkit 3.0 CD, which comes with production version of the Intel® Server Board S5520HC and S5500HCV. If using a Microsoft Windows® operating system, the Intel® Deployment Assistant (in the Deployment Toolkit 3.0 CD) will autoun and allow you to select the appropriate drivers to install. On other operating systems, browse the CD folders to locate and install the driver files.

## Common Problems and Solutions

- For a list of hardware components that have been tested with this system, see: <http://support.intel.com/support/motherboards/server/s5520HC/>
- The system does not boot or show video at power-on:
- Check that all processor power connectors are plugged-in. Without these connections, the server cannot boot.
  - Beep code 3 means you have bad memory; replace the faulty DDR3 DIMM(s).
  - Remember, all DIMMs must be:
    - DDR3 800/1066/1333-compliant, 240-pin DIMMs.
    - No mixing of DDR3 RDIMMs and UDIMMs.
    - Installed from first slot of each channel.
    - Install Quad-Rank DIMM from first slot of each channel.
- The system sometimes works, but is exhibiting erratic behavior.
- This is probably the result of using an underrated power supply.


Accessories and Order Codes	
Intel® Remote Management Module 3	AXXRM3
Intel® SAS Entry RAID Module	AXX4SASMOD
Intel® RAID Activation Key (SATA / SAS Software RAID 5)	AXXRAKSW5
Intel® Server Chassis SC5600Base	SC5600Base
Intel® Server Chassis SC5600BRP	SC5600BRP
Intel® Server Chassis SC5600LX	SC5600LX
Intel® Server Chassis SC5650DP	SC5650DP
Intel® Server Chassis SC5650BRP	SC5650BRP
Tower Passive Heat Sink for Intel® Server Chassis SC5600LX	FXXRGTSHINK

A complete list of accessories and spares can be found in the Intel® Server Board S5520HC and S5500HCV Configuration Guide.

Available Documents	
Document Type	Content
Technical Product Specification	In-depth technical information
Spares and Configuration Guide	Supported accessories and spares list
Server Configurator Tool	Tested peripherals and operating systems list
	Tested memory list
	Supported processors list
Software and Drivers	Up-to-date firmware, driver and utility information

Additional Reference documents available at: <http://support.intel.com/support/motherboards/server/s5520HC/>

## Making Connections to the Server Board Quick Reference

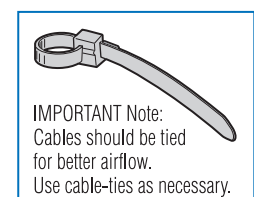

Notes: Not all optional connections are shown in this diagram. Refer to the Reference section of this Quick Start User's Guide, your Intel® Server Boards S5520HC and S5500HCV Service Guide, and your server chassis documentation for additional connection information.

Required Connections	Intel® Server Chassis SC5600	Intel® Server Chassis SC5650
CPU 1 Power Connector	■	■
CPU 2 Power Connector	■	■
Main Power Connector	■	■
Auxiliary Power Connector	■	■
Front Panel Connector	■	■


  

CPU/System Fan Connections	Intel® Server Chassis SC5600	Intel® Server Chassis SC5650
CPU Fan 1 Connector	■ SC5600Base and SC5600BRP only	■
CPU Fan 2 Connector	■ SC5600Base and SC5600BRP only	■
Chassis Fan 1 Connector	■	■
Chassis Fan 2 Connector	■ SC5600LX only	■
Chassis Fan 3 Connector	■	■
Chassis Fan 4 Connector	■ SC5600LX only	■
Chassis Fan 5 Connector	■ SC5600Base and SC5600BRP only	■

Optional Connections	Intel® Server Chassis SC5600	Intel® Server Chassis SC5650
HSBP_A	■	■
HSBP_B	■	■
USB_Front Panel	■	■
SATA Connectors	■	■
SATA Software RAID 5 Key	■	■
SAS Module SAS Connectors (optional)	■	■
Serial B	■	■
SATA SGPIO	■	■
SAS Module SES (optional)	■ Either SAS SES or SGPIO	■ Either SAS SES or SGPIO
SAS Module SGPIO (optional)	■ Either SAS SES or SGPIO	■ Either SAS SES or SGPIO
SAS Software RAID 5 Key (optional)	■	■

Note: For a non-Intel chassis, see your chassis documentation for server board connection information.

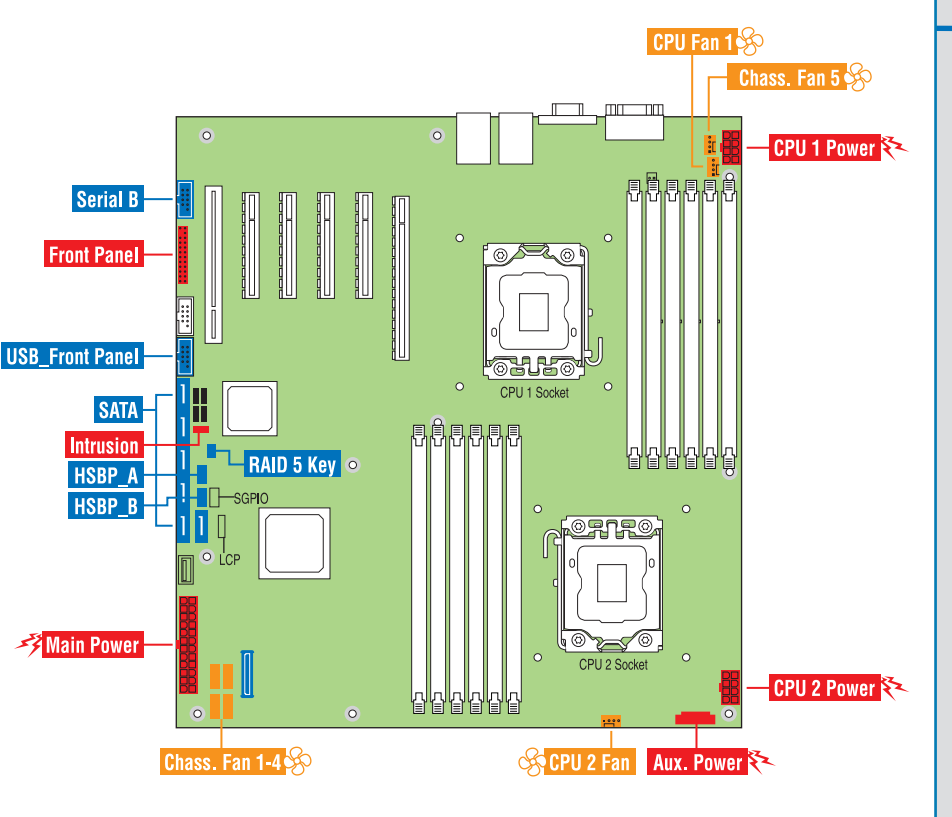

## Intel® Server Board S5520HC and S5500HCV Component Layout

