

System Quick Reference IMPORTANT NOTE: Please read all Warnings and Cautions before servicing this system!

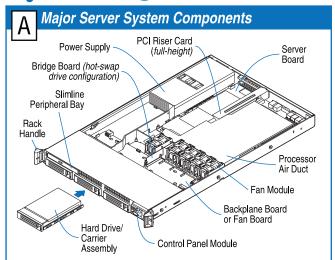


Warning! Prior to performing the listed procedures, you must power down the system and remove the AC power cord.



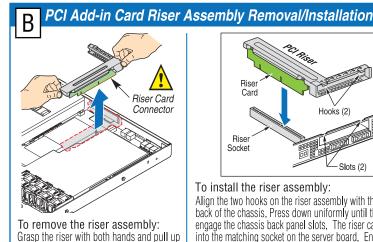



to release riser assembly. Lift straight up.

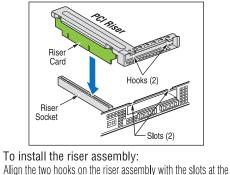


To install the riser assembly:


back of the chassis. Press down uniformly until the two hooks engage the chassis back panel slots. The riser card will plug into the matching socket on the server board. Ensure the riser card is fully seated in the socket.

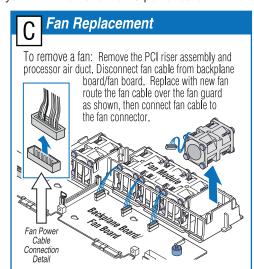


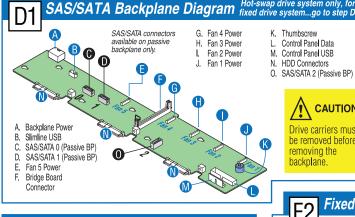


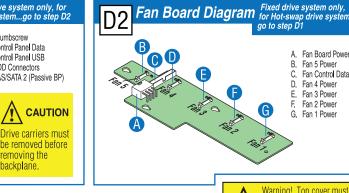




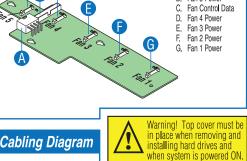

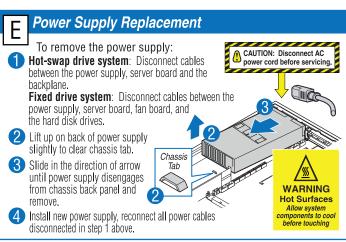

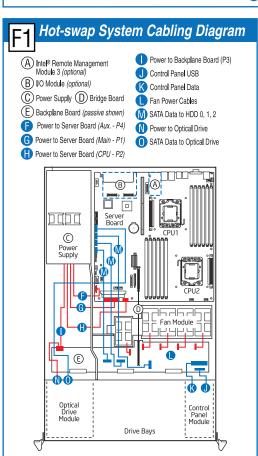

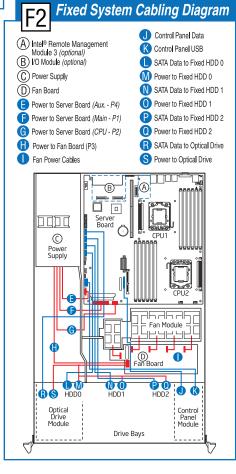

removing the

