

Intel AppUpSM Small Business Service Intel[®] Hybrid Cloud server

Quick Start Guide

Thank you for subscribing to Intel[®] Hybrid Cloud. The following information will help you set up and configure the Intel[®] Hybrid Cloud server and management software.



IMPORTANT:
Read all cautions and warnings before powering-up the system.

For detailed system information,
Download the Intel[®] Hybrid Cloud - User Guide:

<http://www.intel.com/support/motherboards/server/hybrid>

Support:

<http://www.intel.com/support/motherboards/server/hybrid/sb/CS-032313.htm>

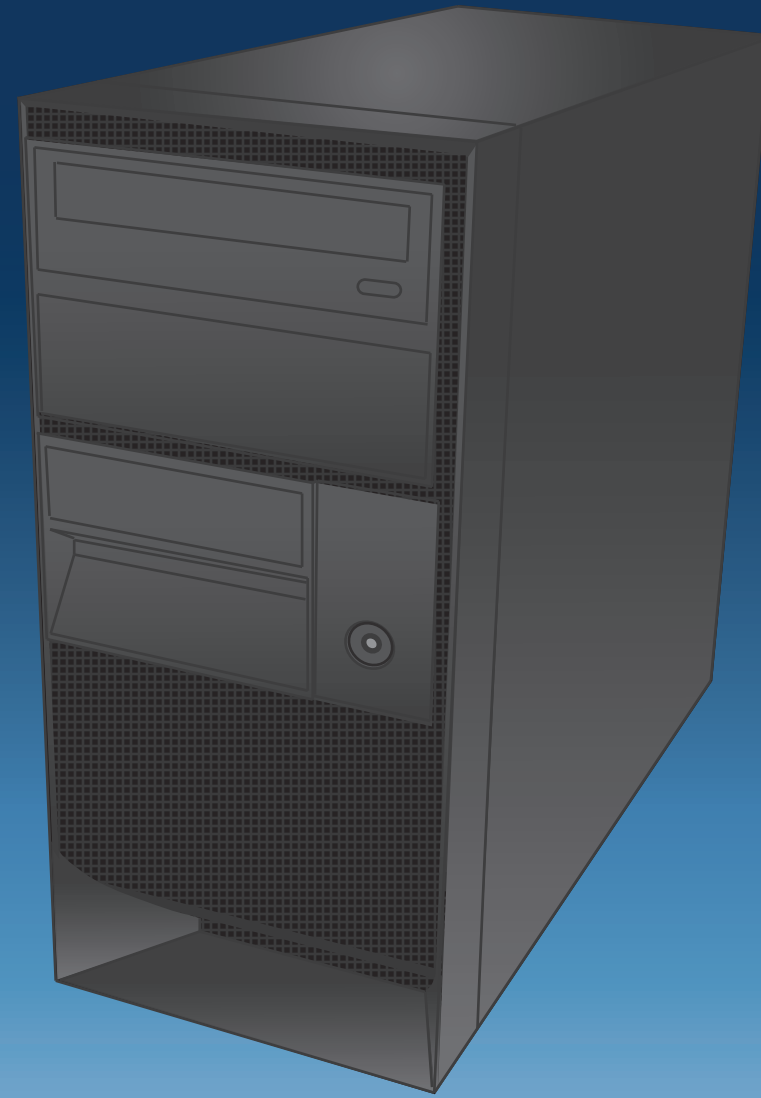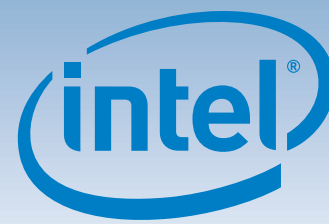

Before You Get Started

You will need the following items:

- **1 Local Computer**
(Windows XP*, Windows Vista*, or Windows 7*)
NOTE: The local computer must have access to ping the Intel[®] Hybrid Cloud Server's IP address.
- **Internet Connection**
- **2 CAT5 Ethernet Cables**
(for LAN & WAN Connections)
- **Your Intel[®] Hybrid Cloud user Login**
- **Port Forwarding Details**
(depending on the firewall configuration)

For a **Static IP Network**, you will need:

- **A Keyboard & Monitor**
- **AMT Configuration Instructions**

1

Connect the Cables

STATIC IP NOTE: If the internet connection at the installation site uses a Static IP address, complete the AMT Configuration steps before proceeding (see AMT Configuration instructions).


A. Connect the Intel[®] Hybrid Cloud server's **WAN** port to your **Internet** source.

B. Connect your **local computer's** network port to the **LAN** port in the **PCI slot** on the Intel[®] Hybrid Cloud server.
NOTE: Remove the Warning sticker & connect to the Local Computer.

C. Connect the power cable to the server and to an appropriate power source.

D. Power-up the Intel[®] Hybrid Cloud server.

E. Before proceeding to the next step, **allow 8 to 10 minutes** for the server to boot completely.

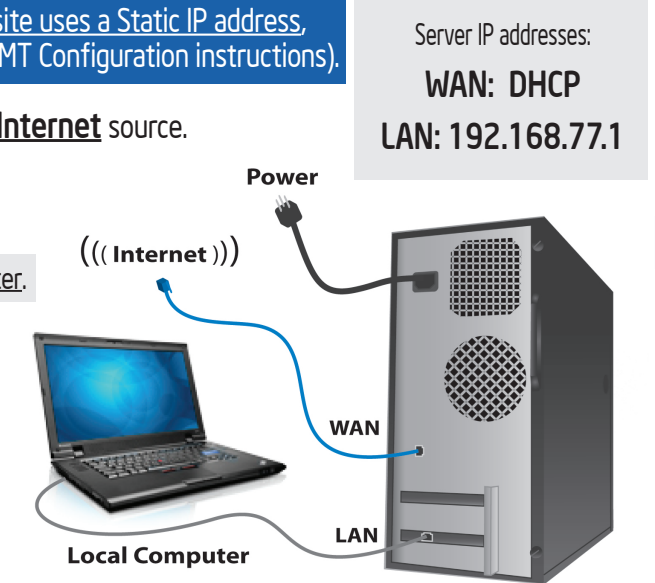

2

Establish Communication & Log In

A. Log into your local computer as the Administrator.

B. Change the network settings on your local computer to:

LAN IP: 192.168.77.42
Subnet Mask: 255.255.255.0

C. Use an Internet browser to navigate to:

https://192.168.77.1:64440/login

D. Choose **"Continue to this website"** at the Security Certificate warning.

E. Enter the default User Name and Password in the **"Connect to Server"** login box:

Username: **admin**

Password: **admin**

F. Click the **"Login"** button.

G. Read and Accept the Intel End User Software License agreement.

3

Configure the Network

- **DHCP** - The values will automatically populate:
a. Select the **"Keep the Same"** button.
- **Static IP:**
a. Enter the appropriate network configuration values.
b. Select the **"Update"** button.

4

Register the Server

- A. Enter a System Name (no spaces allowed).
NOTE: The System Name (Server Name) will differentiate this server from your other servers.
- C. Enter your Intel[®] Hybrid Cloud user ID (i.e. the same ID is used for your Intel[®] Channel account).
ATTENTION: Management of this server will be limited to this Login ID.

5

Download Tools

- ATTENTION: Leave the browser open, after downloading and installing the software (also used in Step 6).**
- NOTE: If the Adobe Shockwave Flash Player* plugin is installed in your browser, a single "Install Now" button will be provided in the "Download Tools" screen (for both Adobe Air Runtime* and Intel[®] Hybrid Cloud server manager).**
- A. Record the data from the **Server Configuration** box on the Intel[®] Hybrid Cloud - Server Management Form (also required for **Step 7 below**).
- B. Under the **Download Tools** heading, select the link to install **Adobe Air Runtime***.
IMPORTANT: Adobe* Air Version 1.5 is required (- Do NOT Update -)
Other versions of Adobe* Air are NOT compatible with the Intel[®] Hybrid Cloud server manager.
- C. Install **Intel[®] Hybrid Cloud server manager:**
1. Install the Certificate in the store titled **"Trusted Root Certification Authorities."**
 2. Follow the prompts to install the Intel[®] Hybrid Cloud server manager.
 3. If the Intel[®] Hybrid Cloud server manager launches after installation, return to the browser window and continue to Step 6.

Intel(R) Hybrid Cloud

Please activate the box on the management portal. Click [here](#) to login.

Server Configuration	Download Tools
<p>System Asset Tag: abc123def456ghi789jkl Registration Status: Pending Remote IP Address: XX.XX.X.XXX Local IP Address: XX.XX.X.XXX Internet IP Address: Not Available Server Name: Your_New_Server</p>	<p>Intel@Hybrid Cloud Software Suite for managing the server</p> <p>Download Intel[®] Hybrid Cloud server manager w. This application requires Adobe Air Runtime* Install Adobe@Shockwave Flash player from Adobe@ site for enhanced appearance.</p> <p>Intel@ Hybrid Cloud Software user guide</p>

6

Activate the Server

- A. Disconnect the local computer's LAN from the Intel[®] Hybrid Cloud server.
- B. **Connect your local computer to the internet.**
ATTENTION: Reconfigure your local computer's network settings so that you can access the internet.
- C. In the upper box, click where it says **"Click here to login."** (or go to <https://hybridcloud.intel.com> in a web browser).
- D. Enter your Intel[®] Hybrid Cloud user ID and Password.
- E. Click the **"Login"** button.
- F. Select the **"Tasks"** menu bar (on the left).
- G. Click the **"activate"** button (for the new server).
- H. Enter your Customer's Name.
- I. Select which appliances to activate.
- J. Click the **"Confirm"** button.

7

Connect to the Server

- A. Launch the **Intel[®] Hybrid Cloud server manager as the Administrator** (e.g. Right-click the icon on your desktop, and select "Run as...").
- B. Select the **"Connect"** tab.
- C. Enter the remote login information in the **"Connect to Server"** screen:
- Server Name:** (created in Step 4)
Username: admin
Password: admin
AMT Password: 4L3n0v0!
- D. Click the **Connect** button.
- E. Enter the Remote IP address.
- F. Press the **"Add"** button.
- G. Install the Certificate in the store titled **"Trusted Root Certification Authorities."**
- TIP: If you are experiencing difficulty with the server connection, refer to the preliminary setup document for details on Port Forwarding and/or Intel[®] AMT Configuration for Static IP Networks.**



Setup Appliances

For appliance setup and activation, download the **Intel[®] Hybrid Cloud - User Guide:**

<http://www.intel.com/support/motherboards/server/hybrid>