

### 8 Install Slimline DVD/CD-ROM Drive (optional)

- If you have not already removed the DVD/CD-ROM tray from the chassis, remove it now. Push the blue release tab in the direction shown to remove.
- Align the two holes on the left edge of the DVD/CD-ROM drive with the two cutouts in the tray.
- Lower opposite side of DVD/CD-ROM drive into tray until it clicks into place.
- Align DVD/CD-ROM connector with connector on interposer board and install.
- Attach interposer board with two screws.
- Attach CD-ROM cable to interposer board. *Note: CD-ROM cable ends are labeled.*
- Install DVD/CD-ROM drive into slimline drive bay until it clicks into place.
- Connect the opposite end of the DVD/CD-ROM cable to the backplane IDE connector.

### 9 Install Slimline Filler Panel

Note: Use this step only if you did not install a slimline floppy or DVD/CD-ROM drive.

- If you have not already removed the DVD/CD-ROM tray from the chassis, remove it now. Push the blue release tab in the direction shown to remove.
- Push the filler panel into the opening as shown.

### 10 Install Add-in Card(s) (optional)

- Open retention clip.
- Remove filler panel.
- Insert add-in card until it seats in riser card connector.
- Make sure add-in card bracket inserts into slot.
- Close retention clip.

**CAUTION:** Observe normal ESD precautions when installing add-in cards.

Left Side Supports Full-Height PCI card.  
Right Side Supports Lo-profile PCI card only.

### 11 Install Intel® Management Module (optional)

Refer to the documentation that shipped with your Intel® Management Module for installation instructions.

### 12 Install Add-in Card Riser Assembly

To install the riser assembly:

- Position riser card edge connectors over the server board riser sockets.
- Press down uniformly until the four hooks engage the chassis back panel.

**CAUTION:** If you did not install add-in cards, the riser assembly still must be installed to ensure proper cooling.

### 13 Preparing to Install Processor Air Duct Over Two Processors

If installing two processors, the plastic tab on the processor air duct must be removed. If installing only one processor, disregard this step and proceed to the next step.

### 14 Install Processor Air Duct

Install processor air duct as shown. Use care to avoid pinching system cables.

### 15 Install the Top Cover

- Place cover onto the chassis and slide forward until it latches.
- Install screw.

### 16 Install the Rack Handles

### 17 Install the Bezel (optional)

Skip this step if you did not order an optional bezel.

Note: The bezel key is taped to the inside of the bezel.

### 18 Install Rail Kit (optional)

See the documentation that came with your selected kit for installation instructions.

### 19 Finishing Up the Hardware

Before installing your operating system, you must finish your system installation and connect back panel I/O connectors and AC power.




- Replace the system cover.
- Connect your keyboard, mouse, video and other I/O cables as shown. Then connect AC power cable.

**CAUTION:** This unit must be operated with the TOP COVER installed to ensure proper cooling.

### 20 Installing the Software

- Confirm BIOS and FRU/SDR Versions**  
Look on the Server/System Management screen in the BIOS Setup Utility to determine the installed BIOS and FRU/SDR versions. Compare these to the versions at: <http://support.intel.com/support/motherboards/server/SE7520JR2/>. If new versions are available, update the BIOS and FRU/SDR on your server. See the User Guide on the Intel® Server Deployment Toolkit CD for update instructions.
- Configure your Server with the Server Configuration Wizard**  
Boot to the Server Board SE7520JR2 Intel® Server Deployment Toolkit CD. Select the Server Configuration Wizard to configure your server for remote server management. Unless you have downloaded a newer version of the FRU/SDR from the Web, use the Server Configuration Wizard also to load the FRU/SDR.
- Configure your RAID Controller (optional)**  
Use the instructions provided with the RAID controller.
- Install your Operating System**  
Use the instructions provided with the RAID controller and with the operating system.
- Install Operating System Drivers**  
With the operating system running, insert the Intel® Server Deployment Toolkit CD. If using a Microsoft® operating system, the Express Installer will autorun and allow you to select the appropriate drivers to install. On other operating systems, browse the CD folders to locate and install the driver files.
- Install Intel® Server Management 8 (optional)**  
With the operating system running, insert the Intel® Server Management 8 CD that came with your server board. On a Windows® operating system, the Setup program will auto-run. Follow the on-screen instructions. For installation details, see Getting Started with Intel® Server Manager 8, located on the ISM CD.
- Install Intel® SmaRT Tool (optional)**  
With the operating system running, insert the Intel® Server Deployment Toolkit CD. The Express Installer will autorun. Click Intel® SmaRT Tool at the left side of the screen. Follow the on-screen instructions. For information about Intel® SmaRT Tool, see: <http://developer.intel.com/design/servers/smartool/index.htm>.

## Reference

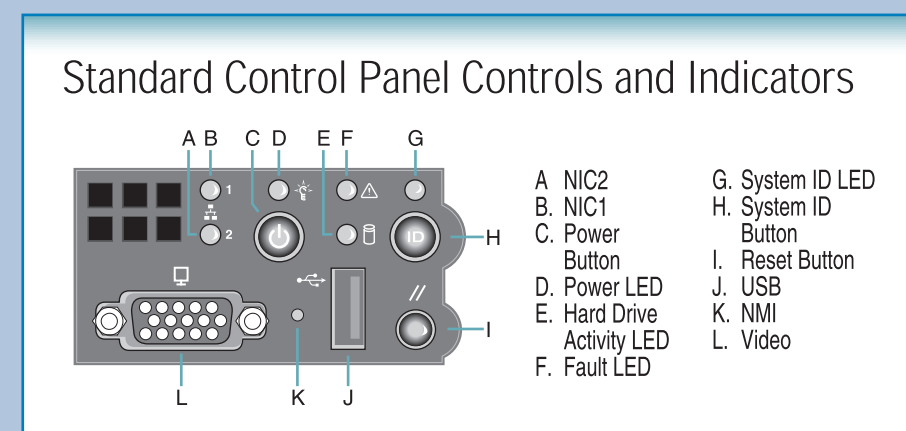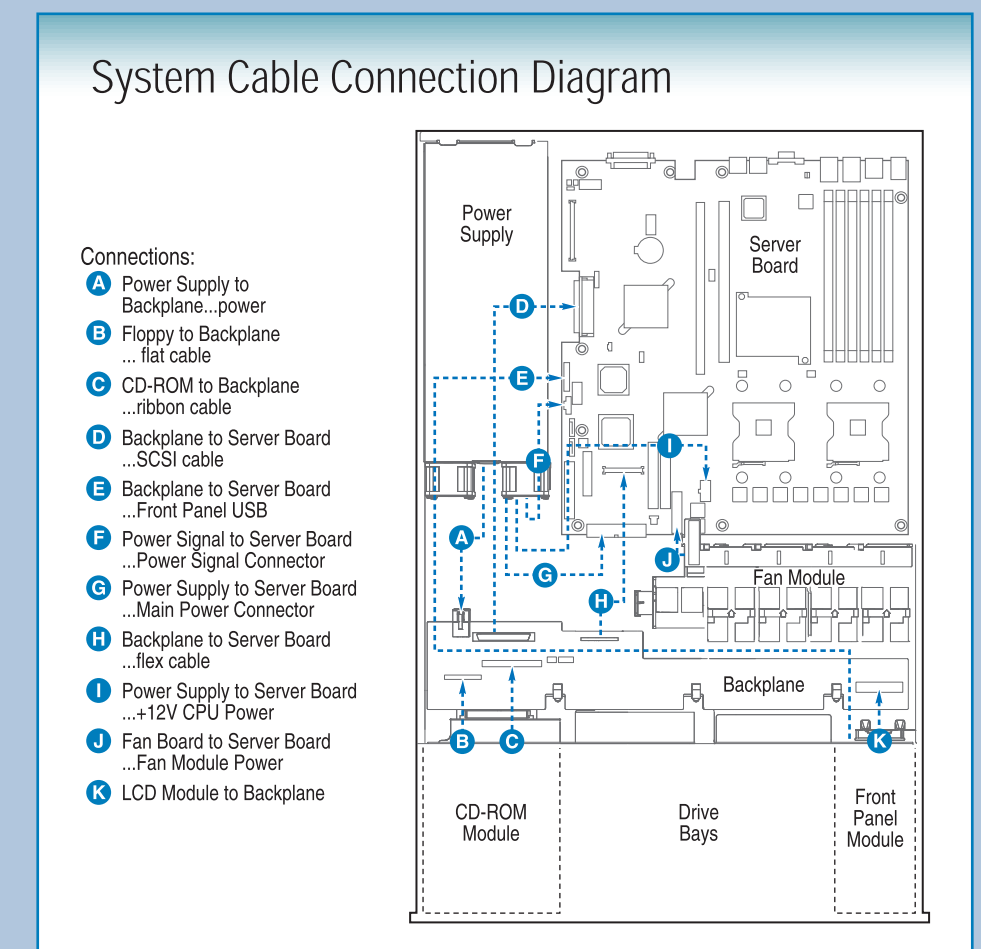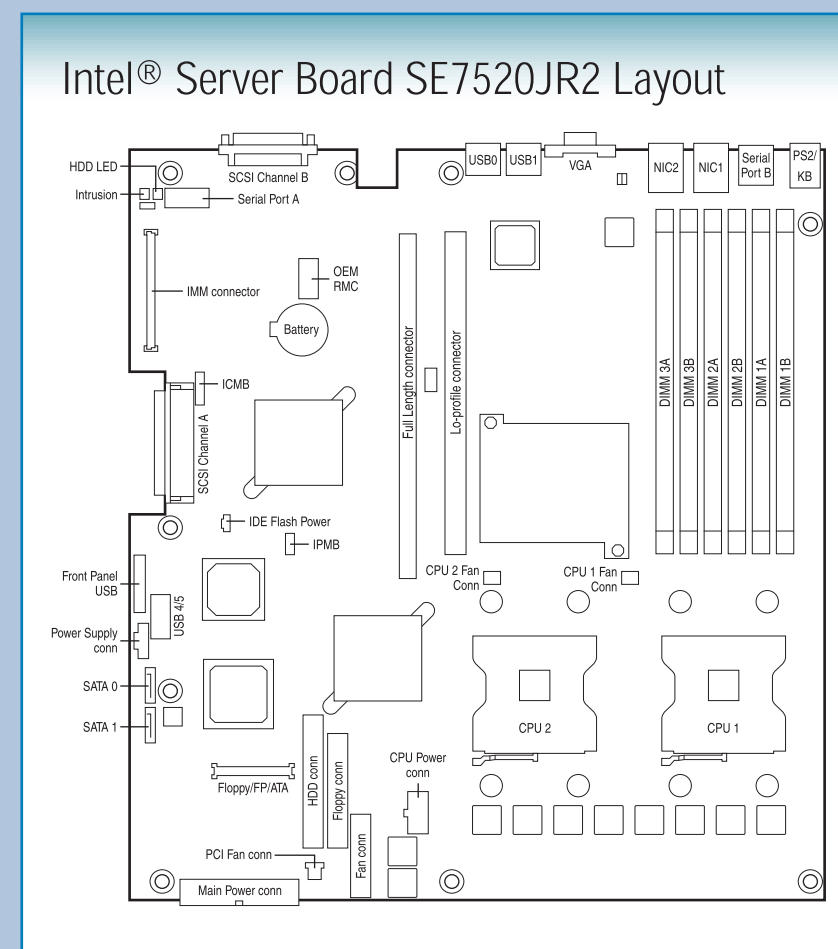

### Accessories and Order Codes

Intel® Local Control Panel	AXXLCPRACK
Bezel for Intel® Local Control Panel	ADWLDBEZEL
Bezel for Standard Control Panel	ADWBZBLACK
Slimline Floppy Drive	AXXFLOPPY
Slimline CD-ROM Drive	AXXSCD
Slimline CD-ROM/DVD-ROM Drive	AXXDVDCDR
Spare Single Fan	ADWFAN
500W Power Supply	FDW500WPS
Full-height PCI-X Riser Connector	ADRPCIXRIS
Full-height PCI-Express Riser Connector	ADRPCIEPR
Tool-less Rail Kit	AXXHERAIL
Rack Brackets	AXXBRACKETS
Cable Management Arm	AXXRACKARM