

# Intel® RealSense™ Training R200

## v1.08

### Release Notes

---

**November 6, 2015**

**DISCLAIMER:** By using this document, in addition to any agreements you have with Intel, you accept the terms set forth below.

You may not use or facilitate the use of this document in connection with any infringement or other legal analysis concerning Intel products described herein. You agree to grant Intel a non-exclusive, royalty-free license to any patent claim thereafter drafted which includes subject matter disclosed herein. INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH INTEL PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN INTEL'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, INTEL ASSUMES NO LIABILITY WHATSOEVER AND INTEL DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF INTEL PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

A "Mission Critical Application" is any application in which failure of the Intel Product could result, directly or indirectly, in personal injury or death. SHOULD YOU PURCHASE OR USE INTEL'S PRODUCTS FOR ANY SUCH MISSION CRITICAL APPLICATION, YOU SHALL INDEMNIFY AND HOLD INTEL AND ITS SUBSIDIARIES, SUBCONTRACTORS AND AFFILIATES, AND THE DIRECTORS, OFFICERS, AND EMPLOYEES OF EACH, HARMLESS AGAINST ALL CLAIMS COSTS, DAMAGES, AND EXPENSES AND REASONABLE ATTORNEYS' FEES ARISING OUT OF, DIRECTLY OR INDIRECTLY, ANY CLAIM OF PRODUCT LIABILITY, PERSONAL INJURY, OR DEATH ARISING IN ANY WAY OUT OF SUCH MISSION CRITICAL APPLICATION, WHETHER OR NOT INTEL OR ITS SUBCONTRACTOR WAS NEGLIGENT IN THE DESIGN, MANUFACTURE, OR WARNING OF THE INTEL PRODUCT OR ANY OF ITS PARTS.

Intel may make changes to specifications and product descriptions at any time, without notice. Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined". Intel reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them. The information here is subject to change without notice. Do not finalize a design with this information.

The products described in this document may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Contact your local Intel sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an order number and are referenced in this document, or other Intel literature, may be obtained by calling 1-800-548-4725, or go to: <http://www.intel.com/design/literature.htm>

\* Intel is a trademark or registered trademark of Intel Corporation or its subsidiaries in the United States and other countries.

\* Intel and Intel RealSense are trademarks of Intel Corporation in the U.S. and/or other countries.

\* Other brands and names are the property of their respective owners.

Copyright © 2015 Intel Corporation. All rights reserved.

## System Requirements

- 4th generation Intel® Core™ processor or later
- Microsoft\* Windows 8.1 or, Windows 10 Build 10240 or later
- 1GB free hard disk space

## Supported Languages

English, Chinese (Simplified), Chinese (Traditional, Taiwan), French, German, Italian, Dutch, Japanese, Korean, Portuguese (Brazil), Russian, Spanish

## Installation Instructions

Manual Installation:

Double click on `Intel RealSense Training-R200-1.08.exe` and follow the setup prompts.

Silent installation:

From the command line, run:

```
Intel RealSense Training-R200-1.08.exe /VERYSILENT
```

Additional command line options (for use with silent install):

- Add the regular start menu icon  
`/METRO=true`
- Add a shortcut to the desktop  
`/DESKTOP=true`
- Add a result code textfile upon completion of installation  
`/RS=C:\path\to\resultcodelog.txt`
- Specify an OEM link parameter for the app store. <oem name> must be all lowercase.  
`/OEM=<oem name>`
- Specify the default number of seconds before the notification of the RealSense camera will display after startup, in seconds.  
`/POPUPDELAY=<timeInSeconds>`

Default value: 3600

- Specify the default number of seconds before the notification of the RealSense camera will display after a user has requested “Not Now” from the notification system.

/POSTPONE=<timeInSeconds>

Default value: 604800

Intel® RealSense™ Training is installed to C:\Program Files(x86)\Intel\Intel RealSense Training R200\.

## Known Issues

- GPU Notice: Machines with multiple GPUs with NVidia Optimus can experience difficulty playing back video. A system with this issue will require the application to have a profile added to run on the onboard graphics card.
- If using Windows 10 Build 10154, the experience videos in the final launcher page do not play and may cause the application to crash.

## Changes From Previous Version

Changes in v1.08:

- Updated copy fixes for French

Changes in v1.07:

- Updated copy fixes for Korean, Chinese, German, Spanish

Changes in v1.06:

- Updated copy fixes for Japanese

Changes in v1.05:

- Updated video subtitle timings to increase readability.
- Updated End User License Agreement.

Changes in v1.04:

- Updated videos.
- Updates to prevent the launcher from showing the title screen when only an upgrade is available.

Changes in v1.03:

- Fixed bugs associated with launching the app store browser with certain registry settings.
- Corrected URLs with OEM tags to direct to the correct pages.

Changes in v1.01:

- Updated video copy.
- Added translations for other languages.
- Security enhancement to upgrade process to utilize SSL.
- Security enhancement to upgrade process to validate signed XML.
- Appropriately return user to the launcher page after first run.