

# Terasic DE10-Nano Kit Release Notes

## Version:

DE10-Nano Image  
BUILD VERSION: 2017.03.31  
DISTRO: Angstrom v2016.12

Note: To discover which version of the design is running on your board:

1. Using a web browser, navigate to the web site served by the board by typing **192.168.7.1** in the URL field.
2. Click the **Develop** tab
3. Open the **Design Files** section
4. Click **"Get The Version of This SD Card"**

## Known issues:

### 1. MRAA libraries for the DE10-Nano kit do not support Java.

**Description:** Java was not included in this build.

**Workaround:** MRAA libraries support C/C++ and JavaScript. Java support will be added in an upcoming release.

### 2. Can't change video output resolution after boot.

**Description:** After the DE10-Nano board boots, if you connect to an HDMI monitor with a different resolution, the output will not be adjusted automatically.

Note: If there is no monitor connected to the DE10-Nano board, or if the monitor resolution cannot be detected, the HDMI output will default to 1024 x 768 resolution.

**Workaround:** Recycle power on the DE10-Nano once the new monitor is connected and powered. There are no plans to change this behavior.

### 3. Need to set password before connecting to DE10-Nano board using SSH.

**Description:** The first time you attempt to access the board using SSH, you will be unable to login due to the absence of a password.

**Workaround:** Before using SSH to connect to the board, set a password. This can be done by connecting to the board using a terminal program (baud 115200, data 8, parity no, stop bits 1, flow control none), logging in as `root`, and typing `passwd`. This requirement will be eliminated in an upcoming release.

**4. Terminal home key does not work with UART over USB.**

**Description:** The home key on the terminal does not work when using UART over USB.

**Workaround:** Connect to the Linux desktop directly, using VNC, or Synergy soft KVM. This issue will be resolved in an upcoming release.

**5. Cut, copy, and paste hangs occasionally when using the serial console.**

**Description** Cut, copy, and paste hangs occasionally when using the serial console.

**Workaround:** Use the Linux desktop. This issue will be resolved in an upcoming release.