# Intel® Rapid Start Technology User Guide

With Intel® Rapid Start Technology, your computer can go from being in a very deep-sleep to fully awake in a flash. This responsiveness capability enables your device to consume lower levels of power when you're not using it, yet resume quickly when you want to use it.

# **System Requirements:**

- Intel® Z87, Q87, H87, B85, Z77, Z75, Q77, or H77 Express Chipset-based desktop board
- Intel® Core<sup>™</sup> Processor in the LGA1155 or LGA1150 package
- Solid State Drive (SSD)
- Hard disk drive (optional for Intel® Smart Response Technology)
- Operating system: Microsoft Windows 8\* or Windows 7\* (32- or 64-bit edition)
- Intel Rapid Start Technology software

# Before you begin

- If you plan to also install Intel Smart Response Technology:
  - Set SATA mode in BIOS to RAID
  - o Install the operating system on a hard disk drive (HDD) instead of the SSD
  - o Install Smart Response Technology BEFORE setting up Rapid Start Technology
- Instructions for enabling Intel Smart Response Technology will not be covered in this user guide.
- If installing the operating system on a solid state drive (SSD), make sure there is enough unallocated partition space on the SSD to create a hibernation partition. The size of the hibernation partition must be equal to or larger than the amount of system memory.

# Setup Guide for Intel Rapid Storage Technology

Configuring your computer for Intel Rapid Start Technology is a 6-step process:

- 1. Install the operating system
- 2. Enable Intel Rapid Start Technology in BIOS Setup
- 3. Create a hibernation partition on the SSD
- 4. Verify the hibernation partition
- 5. Install the Intel Rapid Start Technology software
- 6. Test the Intel Rapid Start Technology

# Step 1: Install the operating system

**1.1**. Install the operating system on the SSD.

**1.2.** Install all required device drivers. **Do not install the Intel Rapid Start Technology software yet.** 

# Step 2: Enable Intel Rapid Start Technology in BIOS Setup

If your computer has Intel® Visual BIOS:

- 2.1. Press the F2 key during boot to enter the Visual BIOS.
- 2.2. Click the button for Advanced Setup, and then click Power.

**2.3.** Locate the setting for **Intel Rapid Start Technology**, and click the check box to enable it.

# 2.4. Set the option for Hibernation Timer to Immediately.

2.5. Press the F10 key to save settings, exit BIOS, and restart the computer.

# If your computer has non-Visual BIOS or Classic Mode:

2.1. Press the F2 key during boot to enter the BIOS setup.

2.2. Scroll to the Power menu.

**2.3**. Locate the setting for **Intel Rapid Start Technology**, and click the check box to enable it.

2.4. Set the option for Hibernation Timer to Immediately.

2.5. Press the F10 key to save settings, exit BIOS, and restart the computer.

Step 3: Create a hibernation partition on the SSD

**3.1.** In the operating system, click the Windows Start button.

3.2. In the Search box, type in cmd.exe.

3.3. Right-click on the cmd.exe file and select Run as administrator.

**3.4.** A command line utility will open. Type in **diskpart.exe** and press Enter.

**3.5.** At the DISKPART> prompt, type the following commands, in the order shown:

DISKPART>list disk

DISKPART> 1	ist disk				
Disk ###	Status	Size	Free	Dyn	Gpt
Disk Ø	Online	10 GB	1781 MB		_
Disk 1 Disk 2	Online Online	1863 GB 29 GB	1716 GB 0 B		

# DISKPART>select disk X

(X is the disk number where you want to create the store partition. Refer to results from "list disk" for the exact disk number. The disk selected must be an SSD)

# DISKPART>create partition primary size=YYYY

(YYYY is the hibernation partition size in megabytes for the partition. For example, for 4 GB of system memory, this value should be 4096 or higher.)

DISKPART>detail disk

DISKPART> deta	ail disk					
	3A40 ne in PCIROOT(0)#PCI on ly State : No No ces : Yes ile Disk : No < : Yes	(1F02)#F	AID < P00T01L0	0>		
Volume ###	Ltr Label	Fs	Туре	Size	Status	Info
Volume 2 ¥ Volume 3	с	NTFS RAW	Partition Partition	51 GB 4096 MB	Healthy Healthy	Boot

# DISKPART>select Volume Z

(*Z* is Volume of your store partition. Refer to results from "detail disk" for exact volume number)

#### DISKPART>set id=84 override

(The id must be set to 84)

DISKPART>exit

**3.6.** Type **Exit** to close the command line utility.

Step 4: Verify the hibernation partition

# **4.1.** Go to **Control Panel > System and Security > Administrative Tools > Computer Management > Disk Management**.

**4.2.** Confirm in Disk Management that there is now a hibernation partition on the SSD with the correct size specified earlier.

Basic 465.76 GB Online	System Rese 100 MB NTFS Healthy (Syst	<b>(D:)</b> 465.66 GB R. Healthy (Pri	AW mary Partition)
Disk 1 Basic 55.90 GB Online	<b>(C:)</b> 51.90 GB NTFS Healthy (Boot, Page File, Cı		4.00 GB Healthy (Hibernatio


**4.3.** Close Disk Management and restart the computer for the BIOS to identify the newly created hibernation partition.

# Step 5: Install the Intel Rapid Start Technology software

5.1. Download the Intel Rapid Storage Technology software from Download Center.

- 5.2. Unzip the download and run the Setup.exe file.
- **5.3.** Complete the installation process.

**5.4.** After installation is complete, click the Task Bar on the bottom right of the desktop and look for the icon for Intel Rapid Start Technology Manager. Click to launch the tool.

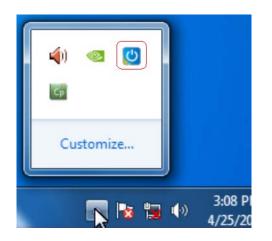

- **5.5.** Check the following items in the Manager tool:
  - Status is **On**.
  - Timer is **On**
  - Timer slider bar is at **position 0.**

This ensures the system will immediately begin utilizing Intel Rapid Start Technology once the system is put into sleep (S3) mode.

Rapid Start Technology Manager			
Intel <sup>®</sup> Rapid Start Technolog	y Manager		(inte
Status			
Intel Rapid Start Technology 🕤	0	On	Off Off
Hide Advanced Settings			
Advanced Settings			
Critical Battery	0	On	Off
Timer 🕜	۲	On	Off
0	0 Minutes		
0			120
	Save	1	Cancel

Step 6: Test the Intel Rapid Start Technology

**6.1**. Click the Windows **Start** button, and then click **Sleep**. This puts the computer into the S3 sleep state.

Observe that the computer goes into sleep mode, and then quickly wakes up again before going into a sleep state again. This is normal behavior as the system first transitions into the S3 state and then Intel Rapid Start Technology briefly wakes the computer and moves it into the S4 sleep state.

When the computer is in the S4 state, it cannot be woken up using USB devices such as keyboard or mouse.

6.2. Press the Power Button to wake the computer.

Observe that the resume time is as fast as a wake from an S3 sleep state.

\* Other names, brands, and logos may be claimed as the property of others. Intel, the Intel logo, Intel Core, and Core Inside are trademarks of Intel Corporation in the U.S. and/or other countries. Copyright © 2013 Intel Corporation. All rights reserved.