



Intel[®] Server Chassis SR2500

Technical Product Specification

Preliminary

Intel order number D31980-002

Revision – 0.9

February 2006

Enterprise Platforms and Services Marketing

Revision History

| Date | Revision Number | Modifications |
|--------------|-----------------|---------------------|
| October 2005 | 0.5 | Preliminary Release |
| January 2006 | 0.9 | Second Release |
| | | |

Preliminary

Disclaimers

Information in this document is provided in connection with Intel® products. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document. Except as provided in Intel's Terms and Conditions of Sale for such products, Intel assumes no liability whatsoever, and Intel disclaims any express or implied warranty, relating to sale and/or use of Intel products including liability or warranties relating to fitness for a particular purpose, merchantability, or infringement of any patent, copyright or other intellectual property right. Intel products are not intended for use in medical, life saving, or life sustaining applications. Intel may make changes to specifications and product descriptions at any time, without notice.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Intel reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

This document contains information for a product that is still in development. Do not finalize a design with this information. Information provided in this preliminary document may be incomplete (as denoted by TBD) or may change. Revised information will be published in a later release of this document and when the product is made available. Verify with your local sales office that you have the latest datasheet before finalizing a design.

The Intel® Server Chassis SR2500SR2500 may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Current characterized errata are available on request.

This document and the software described in it is furnished under license and may only be used or copied in accordance with the terms of the license. The information in this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by Intel Corporation. Intel Corporation assumes no responsibility or liability for any errors or inaccuracies that may appear in this document or any software that may be provided in association with this document.

Except as permitted by such license, no part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means without the express written consent of Intel Corporation.

Intel, Pentium, Itanium, and Xeon are trademarks or registered trademarks of Intel Corporation.

*Other brands and names may be claimed as the property of others.

Copyright © Intel Corporation 2006.

Table of Contents

| | |
|---|-----------|
| 1. Product Overview | 1 |
| 1.1 Chassis Views | 1 |
| 1.2 Chassis Dimensions | 2 |
| 1.3 System Components | 2 |
| 1.4 Platform System Boards | 3 |
| 1.5 Control Panel Options | 4 |
| 1.6 Hard Drive and Peripheral Bays | 6 |
| 1.7 Power Sub-system | 7 |
| 1.8 System Cooling | 7 |
| 1.9 Chassis Security | 7 |
| 1.10 Rack and Cabinet Mounting Options | 8 |
| 1.11 Front Bezel Features | 8 |
| 2. Power Sub-System | 10 |
| 2.1 Mechanical Overview | 10 |
| 2.2 Single Power Supply Module Population | 12 |
| 2.3 Handle and Retention Mechanism | 12 |
| 2.4 Hot-swap Support | 12 |
| 2.5 Airflow | 12 |
| 2.6 Output Cable Harness | 13 |
| 2.6.1 P1 – Server Board Power Connector | 13 |
| 2.6.2 P2 – Processor Power Connector | 14 |
| 2.6.3 P3 – Power Signal Connector | 14 |
| 2.6.4 P4 – Backplane Power Connector | 14 |
| 2.6.5 P5 Mid-plane Power Connector | 15 |
| 2.6.6 P6 Peripheral Power Connector | 15 |
| 2.7 AC Input Requirements | 15 |
| 2.7.1 AC Inlet Connector | 15 |
| 2.7.2 Efficiency | 16 |
| 2.7.3 AC Input Voltage Specification | 16 |
| 2.8 Protection Circuits | 16 |
| 2.8.1 Over-Current Protection (OCP) | 16 |
| 2.8.2 Over-Voltage Protection (OVP) | 17 |
| 2.8.3 Over-Temperature Protection (OTP) | 17 |
| 2.9 Power Supply Status LED | 18 |
| 3. Cooling Subsystem | 19 |

| | | |
|-----------|---|-----------|
| 3.1 | Non-redundant Fan Module | 20 |
| 3.2 | Redundant System Fan Module | 22 |
| 3.3 | Air Flow Support | 24 |
| 3.3.1 | Power Supply Zone | 24 |
| 3.3.2 | Full Height Riser Zone | 24 |
| 3.3.3 | CPU / Memory / Low Profile PCI Zone | 25 |
| 3.4 | Drive Bay Population | 25 |
| 4. | System Board Interconnects..... | 26 |
| 4.1 | Mid-plane | 26 |
| 4.2 | Bridge Board..... | 33 |
| 4.3 | Hot-Swap SATA/SAS Backplane..... | 33 |
| 5. | Peripheral and Hard Drive Sub-System..... | 41 |
| 5.1 | Slimline Optical Drive Bay | 41 |
| 5.2 | Hard Drive Bays..... | 43 |
| 5.2.1 | Hot-swap Drive Trays | 43 |
| 5.3 | Optional Tape Drive or 6 th Hard Drive Flex Bay..... | 44 |
| 5.4 | Mid-plane Options..... | 45 |
| 5.4.1 | Passive Mid-plane | 45 |
| 5.4.2 | Active Mid-plane with Intel® SAS /SAS RAID Support..... | 46 |
| 5.5 | Hot-Swap SAS/SATA Backplane..... | 49 |
| 5.5.1 | SAS/SATA Backplane Layout..... | 49 |
| 5.5.2 | SAS/SATA Backplane Functional Architecture..... | 51 |
| 6. | Standard Control Panel | 53 |
| 6.1 | Control Panel Buttons..... | 53 |
| 6.2 | Control Panel LED Indicators | 54 |
| 6.2.1 | Power / Sleep LED | 56 |
| 6.2.2 | System Status LED..... | 56 |
| 6.2.3 | Drive Activity LED | 57 |
| 6.2.4 | System Identification LED..... | 57 |
| 6.3 | Control Panel Connectors..... | 57 |
| 6.4 | Internal Control Panel Interconnect | 58 |
| 7. | Intel® Local Control Panel..... | 60 |
| 7.1 | LED Functionality..... | 61 |
| 7.1.1 | Power / Sleep LED | 62 |
| 7.1.2 | System Status LED..... | 62 |
| 7.1.3 | Drive Activity LED | 63 |
| 7.1.4 | System Identification LED..... | 63 |
| 7.2 | Intel® Local Control Panel Interconnects | 63 |

| | |
|--|-----------|
| 8. PCI Riser Cards and Assembly | 66 |
| 8.1 Riser Card Options | 67 |
| 8.2 PCI Riser Card Mechanical Drawings | 68 |
| 9. Supported Intel® Server Boards | 72 |
| 9.1 Intel® Server Board S5000PAL | 72 |
| 10. Environmental and Regulatory Specifications | 75 |
| 10.1 System Level Environmental Limits | 75 |
| 10.2 Product Regulatory Compliance | 75 |
| 10.2.1 Product Safety Compliance | 75 |
| 10.2.2 Product EMC Compliance | 76 |
| 10.2.3 Product Regulatory Compliance Markings | 77 |
| 10.3 Electromagnetic Compatibility Notices | 78 |
| 10.3.1 USA | 78 |
| 10.3.2 FCC Verification Statement | 79 |
| 10.3.3 ICES-003 (Canada) | 79 |
| 10.3.4 Europe (CE Declaration of Conformity) | 79 |
| 10.3.5 Japan EMC Compatibility | 79 |
| 10.3.6 BSMI (Taiwan) | 80 |
| 10.3.7 Korean RRL Compliance | 80 |
| 10.3.8 CNCA (CCC-China) | 80 |
| 10.4 Replacing the Back up Battery | 81 |
| 10.5 Serviceability and Availability | 82 |
| 10.6 Restriction of Hazardous Substances (RoHS) Compliance | 82 |
| 10.7 Regulated Specified Components | 82 |
| Appendix A: Chassis Integration and Usage Tips | 85 |
| Glossary | 86 |

List of Figures

| | |
|---|----|
| Figure 1. Front View with Optional Bezel..... | 1 |
| Figure 2. Front View without Bezel (Shown with Standard Control Panel Option) | 1 |
| Figure 3. Back View – (Shown with 1+1 Power Supply Configuration)..... | 1 |
| Figure 4. Major Chassis Components..... | 2 |
| Figure 5. Back Panel Feature Overview | 3 |
| Figure 6. Control Panel Modules | 4 |
| Figure 7. Standard Control Panel Overview | 4 |
| Figure 8. LCD Control Panel Overview | 5 |
| Figure 9. Front Panel Feature Overview | 6 |
| Figure 10. Optional Front Bezel..... | 8 |
| Figure 11. Front Bezel Supporting Standard Control Panel..... | 8 |
| Figure 12. Front Bezel Supporting Intel® Local Control Panel | 9 |
| Figure 13. Mechanical Drawing for Dual (1+1 configuration) Power Supply Enclosure with PDM10 | |
| Figure 14. Mechanical Drawing of 750W Power Supply Module | 11 |
| Figure 15. Mechanical Drawing of Intel® Server Chassis SR2500 Power Distribution Module... 11 | |
| Figure 16. Non-Redundant Fan Module | 20 |
| Figure 17. Non-Redundant Fan Header Assignments on Mid-plane (Layout Subject to Change)21 | |
| Figure 18. Fan Module Assembly | 22 |
| Figure 19. Redudant Fan Header Assignments on Mid-plane (Layout Subject to Change) | 23 |
| Figure 20. CPU Air Duct with Air Baffle | 25 |
| Figure 21. Drive Blank | 25 |
| Figure 22. Passive Mid-plane Board (Layout Subject to Change) | 26 |
| Figure 23. SAS/SAS RAID Mid-plane Board (Layout Subject to Change)..... | 27 |
| Figure 24. Bridge Board..... | 33 |
| Figure 25. Hot-Swap SAS/SATA Backplane (Front Side View)..... | 33 |
| Figure 26. Hot-Swap SAS/SATA Backplane (Back Side View) | 34 |
| Figure 27. Optional 6 th Hard Drive (Front View)..... | 41 |
| Figure 28. Slim-Line Optical Drive Assembly..... | 41 |
| Figure 29. 50-pin Connector to Slimline Optical Device | 42 |
| Figure 30. Hard Drive Tray Assembly..... | 43 |
| Figure 31. Optional 6 th Hard Drive (Front View)..... | 44 |
| Figure 32. Optional Tape Drive (Front View) | 44 |
| Figure 33. Passive Mid-plane Board (Layout Subject to Change) | 45 |
| Figure 34. Active Mid-plane with SAS / SAS RAID Support (Layout Subject to Change)..... | 46 |
| Figure 35. Architecture Overview..... | 48 |

| | |
|--|----|
| Figure 36. Hot-swap SAS/SATA Backplane (Front Side View) | 50 |
| Figure 37. Hot-swap SAS/SATA Backplane (Back Side View)..... | 50 |
| Figure 38. SAS/SATA Backplane Functional Block Diagram | 51 |
| Figure 39. Standard Control Panel Assembly Module | 53 |
| Figure 40. Control Panel Buttons..... | 53 |
| Figure 41. Control Panel LEDs | 54 |
| Figure 42. Standard Control Panel PCB | 58 |
| Figure 43. Intel® Local Control Panel Assembly Module..... | 60 |
| Figure 44. Intel® Local Control Panel Overview | 60 |
| Figure 45. Low Profile PCIe* Riser | 66 |
| Figure 46. Low Profile Passive PCI Express* Riser Card..... | 68 |
| Figure 47. Full Height PCI Express* Riser Card | 69 |
| Figure 48. Full Height Passive PCI-X* Riser Card..... | 70 |
| Figure 49. Full Height Active PCI-X* Riser Card..... | 71 |
| Figure 50. Intel® Server Board S5000PAL..... | 73 |
| Figure 51. Intel® Server Board S5000PAL Components..... | 74 |

List of Tables

| | |
|--|----|
| Table 1. Chassis Dimensions | 2 |
| Table 2. Power Harness Cable Definitions | 13 |
| Table 3. P1 Main Power Connector | 13 |
| Table 4. P2 Processor Power Connector..... | 14 |
| Table 5. P3 Power Signal Connector..... | 14 |
| Table 6. P4 Hard Drive Interface Board Power Connector | 14 |
| Table 7. P5 Mid-plane Power Connector | 15 |
| Table 8. P6 Peripheral Power Connector | 15 |
| Table 9. Efficiency..... | 16 |
| Table 10. AC Input Rating..... | 16 |
| Table 11. Over-Current Protection Limits / 240VA Protection | 17 |
| Table 12. Over-Voltage Protection (OVP) Limits | 17 |
| Table 13. LED Indicators | 18 |
| Table 14. Nonredundant Cooling Zones | 20 |
| Table 15. Non-redundant Fan Connector Pin Assingment | 21 |
| Table 16. Nonredundant Fan Header Assignment | 22 |
| Table 17. Redundant Cooling Zones | 22 |
| Table 18. Redundant Fan Connector Pin Assingment..... | 23 |
| Table 19. Redundant Fan Header Assignment..... | 24 |
| Table 20. 120-pin Server Board-to-Mid-plane Connector Pin-out..... | 27 |
| Table 21. Mid-plane Fan Header Pin-outs | 29 |
| Table 22. Mid-plane Power Connector Pin-out | 29 |
| Table 23. Mid-plane-to-Backplane Card Edge Connector #1 Pin-out..... | 30 |
| Table 24. Mid-plane-to-Backplane Card Edge Connector #2 Pin-out..... | 31 |
| Table 25. Active Mid-plane SAS RAID Battery Backup Connector Pin-out | 32 |
| Table 26. Passive Mid-plane SATA/SAS Connector Pin-outs | 32 |
| Table 27. 2x4 SAS/SATA Backplane Power Connector Pin-out (J7L2) | 34 |
| Table 28. 1x7 6th HDD / Tape Power Connector Pin-out (J2M1)..... | 34 |
| Table 29. 6th HDD Option SATA/SAS I/O Connector Pin-out (J4L1) | 35 |
| Table 30. 2x22 IDE Connector Pin-out (J5N1) | 35 |
| Table 31. Optical Drive Slot Connector (J1A1) | 36 |
| Table 32. IDE Device Master/Slave Configuration Jumper (J6L1) | 36 |
| Table 33. I2C Connector (J6L3)..... | 36 |
| Table 34. PCIe X4 Slot Connector from Mid-plane (J4N1) | 37 |
| Table 35. PCIe X4 Slot Connector from Mid-plane (J6N1) | 38 |

| | |
|--|----|
| Table 36. USB Connector (J2A1) | 38 |
| Table 37. Intel Local Control Panel (LCP) Connector (J9A1) | 39 |
| Table 38. Control Panel Slot Connector (J9B1)..... | 39 |
| Table 39. SAS/SATA Hard Drive Connector Pin-outs (J2C3, J2B1, J4C1, J4B1, J7C1)..... | 40 |
| Table 40. J1L1 50-pin Connector to Slimline Optical Device..... | 42 |
| Table 41. Hard Drive LED Function Definitions | 52 |
| Table 42. Control Button and Intrusion Switch Functions | 54 |
| Table 43. Control Panel LED Functions..... | 55 |
| Table 44. SSI Power LED Operation | 56 |
| Table 45. External USB Connectors (J1B1) | 57 |
| Table 46. Video Connector (J1A1)..... | 58 |
| Table 47. 64-pin Control Panel Connector (J6B1) | 59 |
| Table 48. Control Panel LED Functions..... | 61 |
| Table 49. SSI Power LED Operation | 62 |
| Table 50. 64-pin Card Edge Connector Pin-out (TBD) | 63 |
| Table 51. 50-pin Control Panel Connector..... | 64 |
| Table 52. Internal USB Header..... | 65 |
| Table 53. Internal NMI/Temp Sensor Header | 65 |
| Table 54. System Environmental Limits Summary | 75 |

< This page intentionally left blank. >

Preliminary


1. Product Overview

The Intel® Server Chassis SR2500 is a 2U server chassis that is designed to support the Intel® Server Board S5000PAL. The server board and the chassis have features that are designed to support the high-density server market. This chapter provides a high-level overview of the chassis features. Greater detail for each major chassis component or feature is provided in the following chapters.

The chassis differs from previous generation products in that the majority of cables have been removed from the system and in their place are a series of board-to-board interconnects. The benefits of using board-to-board interconnects are simplification of platform integration and improved airflow for more reliable cooling.


A second significant change from the previous generation is the introduction of the mid-plane circuit board. There are two options for the mid-plane circuit board: the first option provides SAS/RAID support. The second option is a passive SATA only mid-plane that can be used with either the SATA connectors from the server board, or from an add-in card.

1.1 Chassis Views

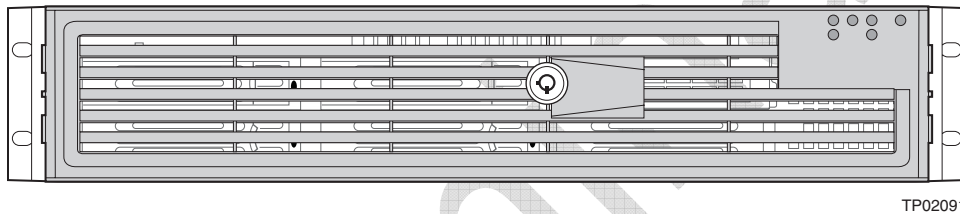


TP02091

Figure 1. Front View with Optional Bezel

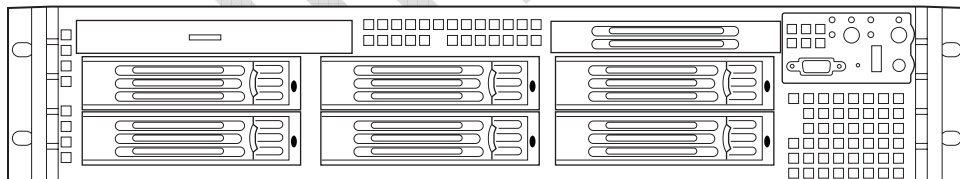

TP02092

Figure 2. Front View without Bezel (Shown with Standard Control Panel Option)

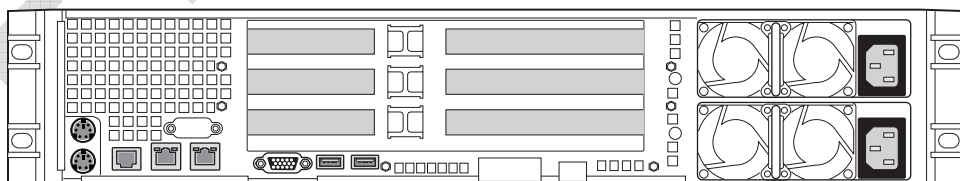

TP02093


Figure 3. Back View – (Shown with 1+1 Power Supply Configuration)

1.2 Chassis Dimensions

Table 1. Chassis Dimensions

| | | |
|-------------|---------|---------|
| Height | 87.3 mm | 3.44 " |
| Width | 430 mm | 16.93 " |
| Depth | 710 mm | 27.95 " |
| Max. Weight | 27.2 kg | 60 lbs |

1.3 System Components

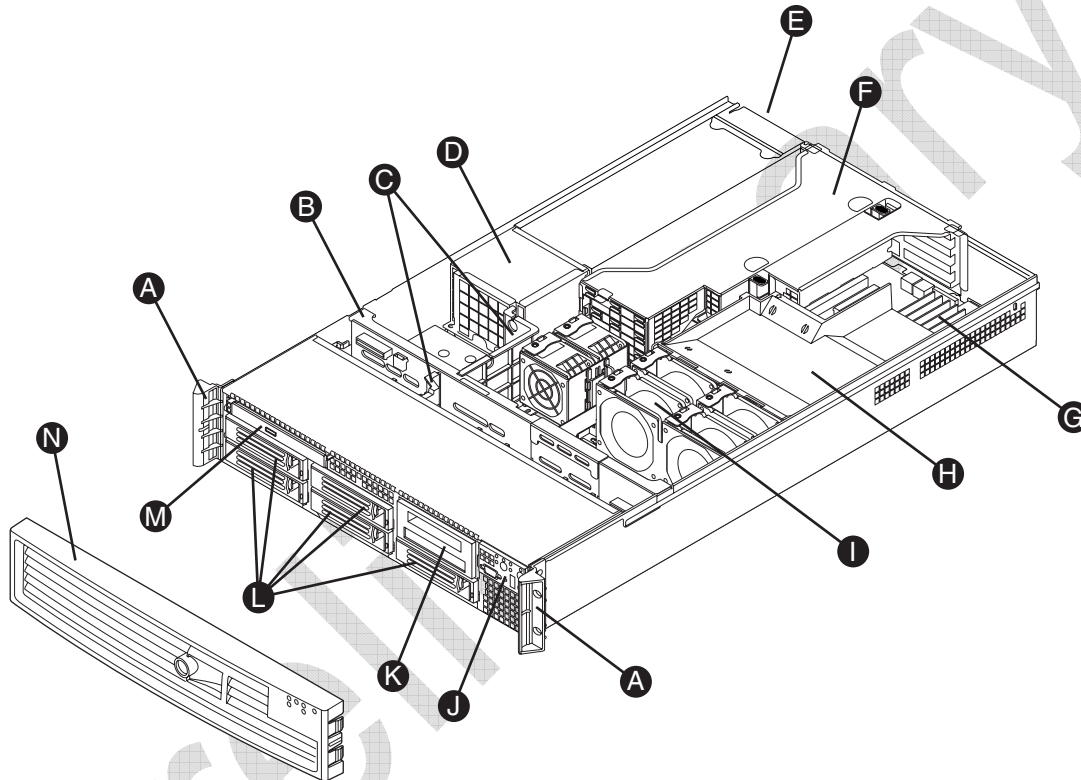

TP02094

Figure 4. Major Chassis Components

- | | |
|------------------------------|--|
| A. Rack Handles | H. CPU Air Duct |
| B. SAS/SATA Backplane | I. System Fan Assembly |
| C. Air Baffles | J. Standard Control Panel |
| D. Power Distribution Module | K. Flex Bay – 6 th HDD or Tape (Optional) |
| E. Power Supply Modules | L. Hard Drive Bays |
| F. Riser Card Assembly | M. Slim-Line Optical Drive Bay |
| G. System Memory | N. Front Bezel (Optional) |

The I/O connector locations on the back of the chassis are pre-cut, so the use of an I/O shield is not required. The supplied EMI gasket must be installed to maintain Electromagnetic Interference (EMI) compliance levels.

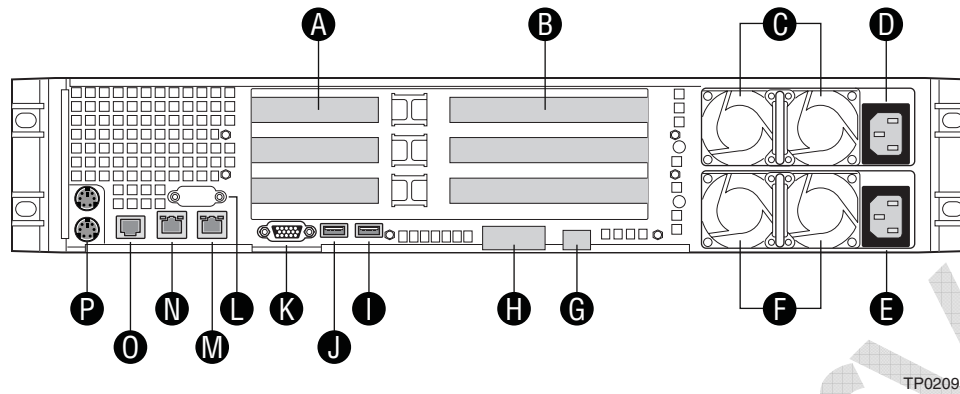


Figure 5. Back Panel Feature Overview

- | | | | |
|----|-------------------------------------|----|------------------------------------|
| A. | Low Profile PCIe* Add-in Card Slots | I. | USB 6 |
| B. | Full Height PCI Add-in Card Slots | J. | USB 5 |
| C. | Upper Power Supply Module | K. | Video |
| D. | Upper Power Receptacle | L. | DB-9 Serial A Connector |
| E. | Lower Power Receptacle | M. | NIC 2 |
| F. | Lower Power supply Module | N. | NIC 1 |
| G. | System Management NIC (Optional) | O. | RJ45 Serial B Connector |
| H. | I/O Module (Optional) | P. | PS2 Key Board and Mouse Connectors |

1.4 Platform System Boards

- Bridge Board
- Mid-planes
- Backplane
- Riser Cards
- CDROM Interposer
- RAID Keys

1.5 Control Panel Options

The chassis can support either of two control panels: a Standard Control Panel and an Intel® Local Control Panel with LCD support. The control panel assemblies are pre-assembled and modular in design. The entire module assembly slides into a predefined slot in the front of the chassis.

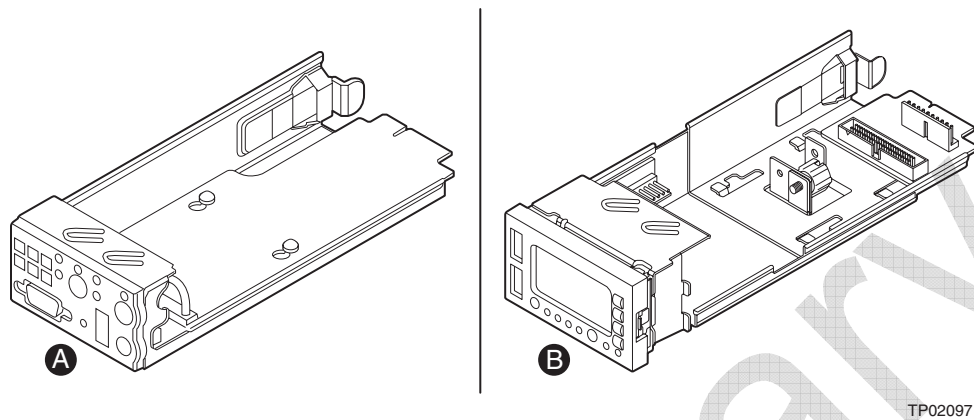


Figure 6. Control Panel Modules

The standard control panel supports several push buttons and status LEDs, along with USB and video ports to centralize system control, monitoring, and accessibility. The following diagram overviews the layout and functions of the control panel.

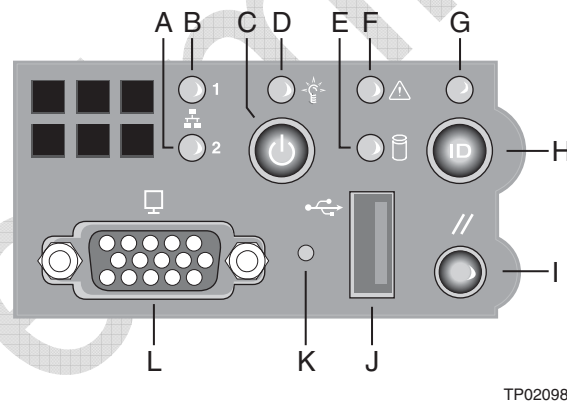


Figure 7. Standard Control Panel Overview

- | | |
|----------------------------|--|
| A. NIC #2 Activity LED | G. System Identification LED |
| B. NIC #1 Activity LED | H. System Identification Button |
| C. Power / Sleep Button | I. System Reset Button |
| D. Power / Sleep LED | J. USB 2.0 Connector |
| E. Hard Drive Activity LED | K. Recessed NMI Button (Tool Required) |
| F. System Status LED | L. Video Connector |

The Intel® Local Control Panel utilizes a combination of control buttons, LEDs, and an LCD display to provide system accessibility, monitoring, and control functions. The following diagram provides an overview of this control panel.

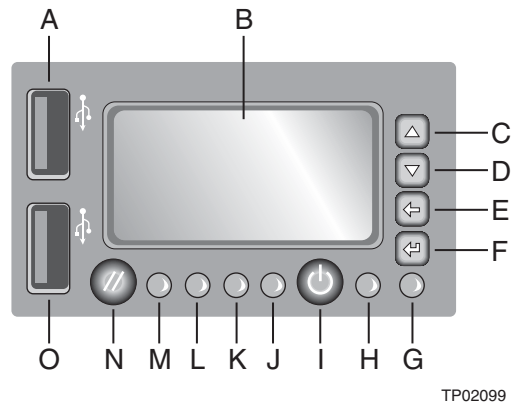


Figure 8. LCD Control Panel Overview

| | | | |
|---|----------------------------------|---|------------------------------|
| A | USB 2.0 Port | I | Power/Sleep Button |
| B | LCD Display | J | System Status LED |
| C | Menu Control Button, Scroll up | K | NIC 2 Activity LED |
| D | Menu Control Button, Scroll down | L | NIC 1 Activity LED |
| E | Menu Control Button, Scroll left | M | Hard Disk Drive Activity LED |
| F | Menu Control Button, Enter | N | Reset Button |
| G | System Identification LED | O | USB 2.0 Port |
| H | Power/Sleep LED | | |

1.6 Hard Drive and Peripheral Bays

The chassis is designed to support several different hard drive and peripheral configurations. The system can be configured to support either hot-swap SAS or SATA drives. Each drive configuration requires an orderable kit which includes the necessary cables and applicable mid-plane and/or backplane. The sixth bay (see letter “B” in the figure below) can optionally be configured to support a sixth hard drive or 3.5” tape drive.

The slimline optical drive bay (A) is capable of supporting one of the following devices: CDROM, DVD, or DVD-CDR.

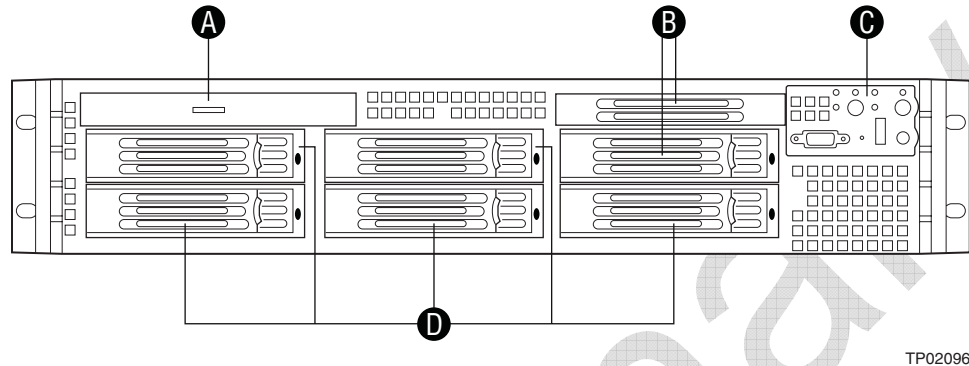


Figure 9. Front Panel Feature Overview

- A. Slimline Optical Drive Bay
- B. 6th HDD Drive or Tape Drive Bay (Optional)
- C. System Control Panel
- D. 3.5" Hard Drive Bays (5)

1.7 Power Sub-system

The power subsystem of the chassis consists of an integrated power distribution board and module enclosure which is capable of housing up to two 750 Watt power supply modules supporting 1+0 or redundant 1+1 power configurations. In a 1+1 redundant configuration, each power supply module is hot-swappable should one fail.

The power sub-system has several integrated management features including:

- Status LED on each power module
- Over-temperature protection circuitry
- Over-voltage protection circuitry

With the addition of server management software, the power subsystem is capable of supporting several system management features including:

- Remote Power On/Off
- Status Alerting
- FRU Information Reporting

Each power supply module operates within the following voltage ranges and ratings:

| PARAMETER | MIN | RATED | MAX | Start-up Vac | Power Off Vac | Max Input AC Current | Max Rated Input AC Current |
|--------------------|---------------------|--------------------------|---------------------|----------------|----------------|-------------------------------------|-----------------------------------|
| Line Voltage (110) | 90V _{rms} | 100-127 V _{rms} | 140V _{rms} | 85Vac ±4Vac | 75Vac ±5Vac | 12 A _{rms} ^{1,3} | 11.0A _{rms} ⁴ |
| Line Voltage (220) | 180V _{rms} | 200-240 V _{rms} | 264V _{rms} | - | - | 6.0 A _{rms} ^{2,3} | 5.5A _{rms} ⁴ |
| Frequency | 47 Hz | 50/60Hz | 63 Hz | | | | |

1.8 System Cooling

The chassis is offered with two system cooling options. The first option is a three fan solution providing sufficient airflow to maintain internal system thermal requirements when the external ambient temperature remains within specified limits. The second option is a 5+1 fan configuration. Refer to section 3.2 for details. Should a single fan failure occur, this option provides support for hot-swap fans and fan redundancy.

In addition to the system fan options, each power supply module installed provides two additional non-redundant fans which pull air from inside the chassis out the back.

1.9 Chassis Security


The chassis provides support for a lockable front bezel which prevents unauthorized access to the system control buttons and hard drives. In addition, a chassis intrusion switch is provided allowing server management software to monitor removal of the top cover from the chassis.

1.10 Rack and Cabinet Mounting Options

The chassis was designed to support 19" wide by up to 30" deep server cabinets. The chassis supports either of two rack mount options: a fixed mount relay rack / cabinet mount, or a tool-less sliding rail kit. The fixed mount relay rack / cabinet mount kit can be configured to support both 2-post racks and 4-post cabinets. The tool-less sliding rail kit is used to mount the chassis into a standard (19" by up to 30" deep) EIA-310D compatible server cabinet.

1.11 Front Bezel Features

The optional front bezel is made of molded plastic and uses a snap-on design. When installed, its design allows for maximum airflow.

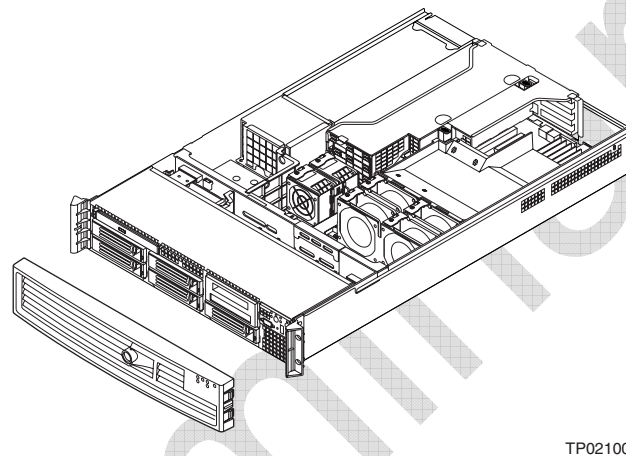


TP02100

Figure 10. Optional Front Bezel

Separate front bezels are available to support systems that use either a standard control panel or the Intel® Local Control Panel with LCD support.


When the standard control panel is used, light pipes on the backside of the front bezel allow the system status LEDs to be monitored with the front bezel in the closed position. The front bezel lock is provided to prevent unauthorized access to hard drives, peripheral devices and the control panel.

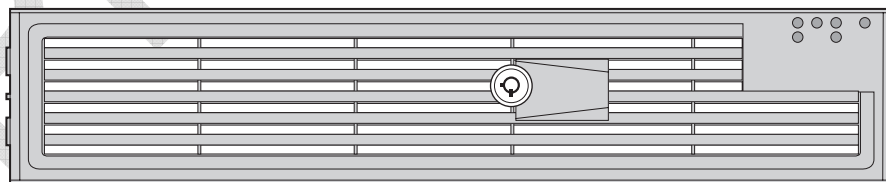

TP02101

Figure 11. Front Bezel Supporting Standard Control Panel

When the local control panel is used, the control panel module can be adjusted to extend further out from the chassis face to allow the LCD panel to protrude from the front bezel.

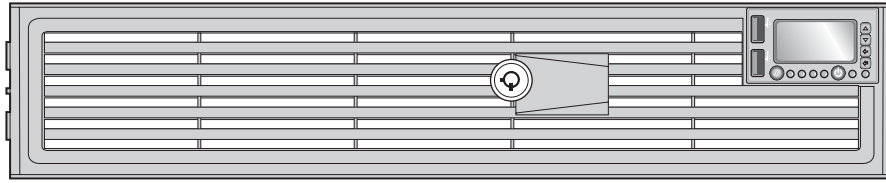

AF000054

Figure 12. Front Bezel Supporting Intel® Local Control Panel

2. Power Sub-System

The power sub-system of the chassis consists of an integrated Power Distribution Module (PDM), a power module enclosure, and support for up to two 750 Watt power supply modules. The power sub-system can be configured to support a single module in a 1+0 non-redundant configuration, or dual modules in a 1+1 redundant power configuration. In a 1+1 configuration, a single failed power module can be hot-swapped with the system running. Either configuration will support up to a maximum of 750 Watts of power.

This chapter provides technical details to the operation of the power supply module and power sub-system. For additional information refer to the *Intel® Server Chassis SR2500 AC Power Supply Specification* and the *Intel® Server Chassis SR2500 Power Distribution Module Specification*.

2.1 Mechanical Overview

The drawing below displays the Power Distribution Module and the power supply module enclosure assembly.

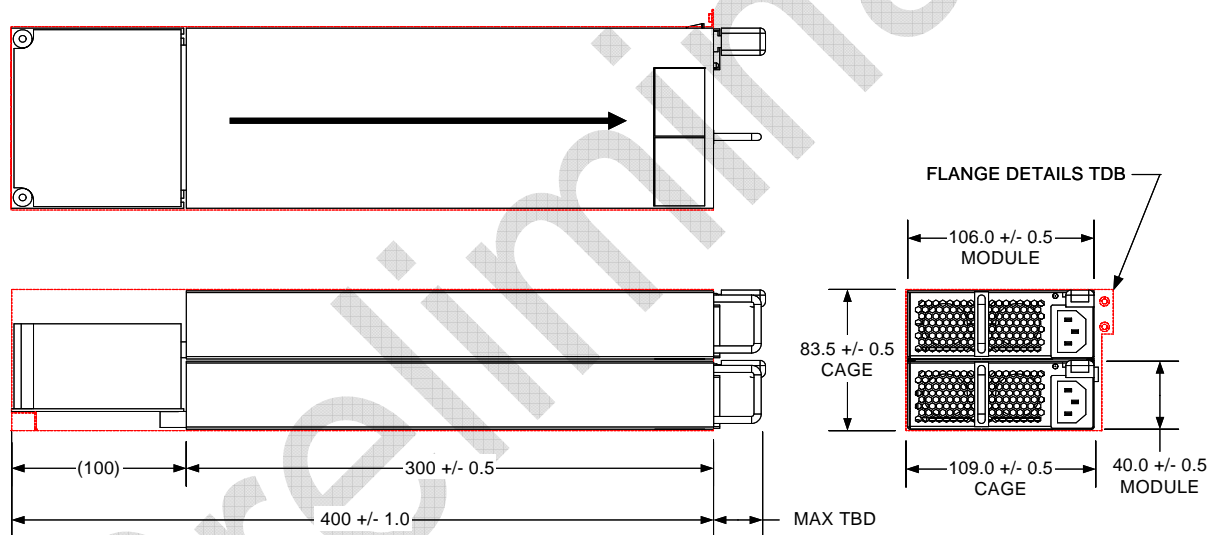


Figure 13. Mechanical Drawing for Dual (1+1 configuration) Power Supply Enclosure with PDM

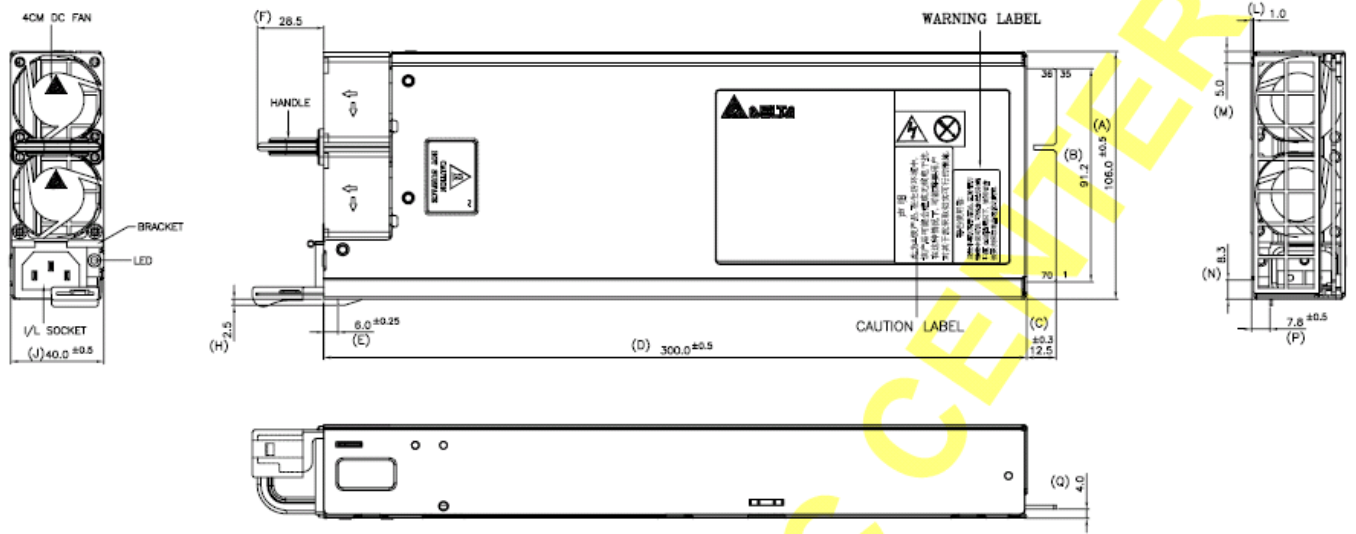


Figure 14. Mechanical Drawing of 750W Power Supply Module

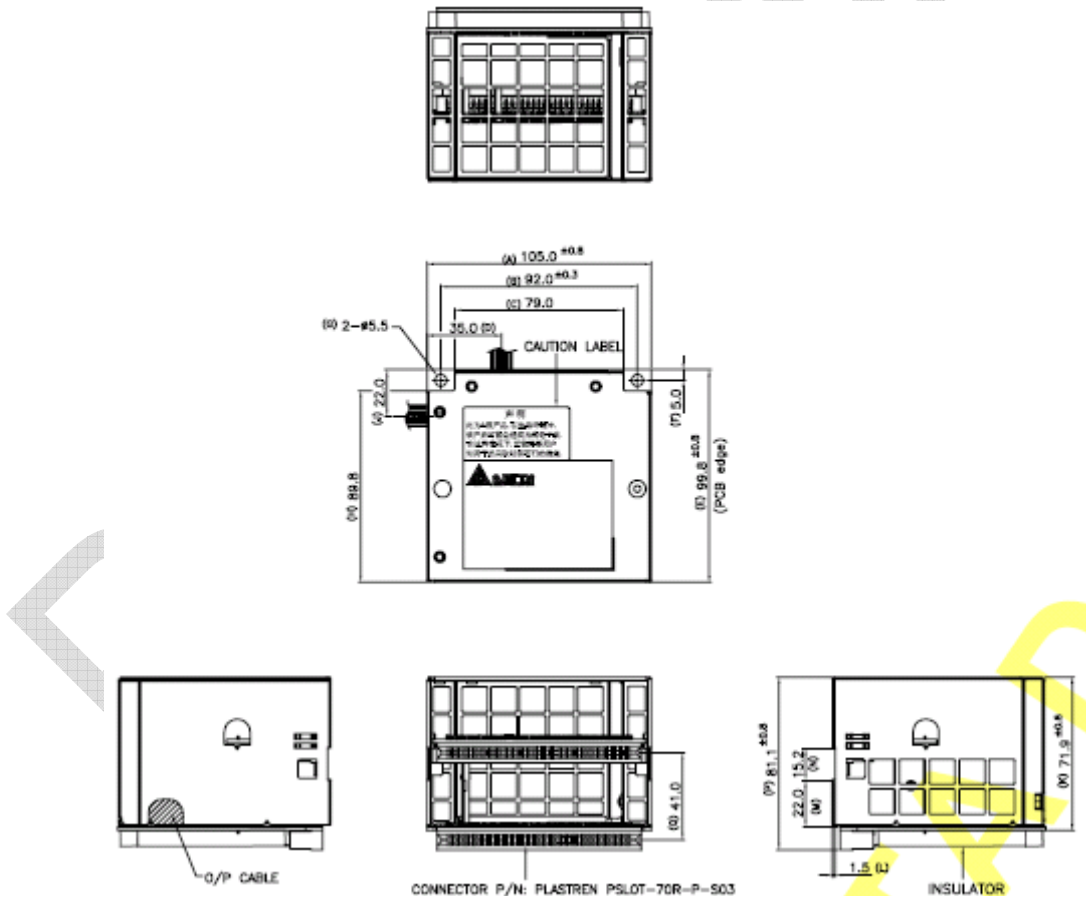


Figure 15. Mechanical Drawing of Intel® Server Chassis SR2500 Power Distribution Module

2.2 Single Power Supply Module Population

In single power module configurations, server management firmware requires that the power supply module be populated in the bottom power module slot. The non-operating slot must have the power supply blank installed.

<TBD>

Configuring a single power supply module in the top location will cause the server management firmware and BIOS to generate a system error during POST and the error will be reported to the System Event Log (SEL).

2.3 Handle and Retention Mechanism

Each power supply module includes a handle for module insertion to or removal from the module enclosure. Each module has a simple retention mechanism to hold the power module in place once it is inserted. This mechanism will withstand the specified platform mechanical shock and vibration requirements. The tab on the retention mechanism is colored **Green** to indicate it is a hot-swap touch point. The latch mechanism is designed to prevent insertion of the module with the power cord plugged in. This will aid the hot-swapping procedure.

2.4 Hot-swap Support

Hot-swapping a power supply module is the process of extracting and re-inserting a power supply module from an operating power system. During this process the output voltages shall remain within specified limits. Up to two power supply modules may be on a single AC line. The power supply module can be hot-swapped by the method listed below.

Extraction: on removal, the power cord is unplugged first, and then the power module is removed. This can be done in standby mode or power-on mode.

Insertion: The module is inserted first, and then the power cord is plugged in. The system and the power supply will power on into standby mode or power-on mode.

2.5 Airflow

Each power supply module incorporates two non-redundant 40mm fans for self cooling and they are also used for partial system cooling. The fans will provide no less than **10 CFM** airflow through the power supply when installed in the system and operating at maximum fan speed. The cooling air will enter the power module from the PDB side (pre-heated air from the system).

2.6 Output Cable Harness

The power distribution board connects to the system via a wire harness. The harness size, connectors, and pin outs are shown below. Listed or recognized component appliance wiring material (AVLV2), CN, rated 105°C min, 300Vdc min shall be used for all output wiring.

Table 2. Power Harness Cable Definitions

| From | Length mm | To connector # | No of pins | Description |
|---------------------------|----------------|----------------|------------|-------------------------------|
| Backplane cover exit hole | 90, 90° angle | P1 | 2x12 | Main Power Connector |
| Backplane cover exit hole | 115, 90° angle | P2 | 2x4 | Processor Power Connector |
| Backplane cover exit hole | 100 | P3 | 1x5 | Server Board Signal Connector |
| Backplane cover exit hole | 150 | P4 | 2x4 | Backplane Power Connector |
| Backplane cover exit hole | 220 | P5 | 2x5 | Mid-plane Power Connector |
| Backplane cover exit hole | 150 | P6 | 1x4 | Peripheral Power Connector |

2.6.1 P1 – Server Board Power Connector

Connector housing: 24- Pin Molex* Mini-Fit Jr. 39-01-2245 or equivalent

Contact: Molex Mini-Fit, HCS, Female, Crimp 44476 or equivalent

Table 3. P1 Main Power Connector

| PIN | SIGNALS | 18 AWG COLOR | PIN | SIGNAL | 18 AWG COLORS |
|-----|-----------|--------------|-----|------------------------------|---------------|
| 1 | +3.3 VDC | Orange | 13 | +3.3 VDC | Orange |
| 2 | +3.3 VDC | Orange | 14 | -12 VDC | Blue |
| 3 | COM (GND) | Black | 15 | COM | Black |
| 4 | 5 VDC | Red | 16 | PS_ON# | Green |
| | 5V RS | Red (24 AWG) | 17 | COM | Black |
| 5 | COM | Black | 18 | COM | Black |
| 6 | +5 VDC | Red | 19 | COM | Black |
| 7 | COM | Black | 20 | <i>Reserved (-5V in ATX)</i> | <i>N.C.</i> |
| 8 | PWR OK | Gray | 21 | +5 VDC | Red |
| 9 | 5Vsb | Purple | 22 | +5 VDC | Red |
| 10 | +12 V3 | Yellow/Blue | 23 | +5 VDC | Red |
| 11 | +12 V3 | Yellow/Blue | 24 | COM | Black |
| 12 | +3.3 VDC | Orange | | | |

2.6.2 P2 – Processor Power Connector

Connector housing: 8- Pin Molex 39-01-2085 or equivalent

Contact: Molex 44476-1111 or equivalent

Table 4. P2 Processor Power Connector

| PIN | SIGNAL | 18 AWG COLORS | PIN | SIGNAL | 18 AWG COLORS |
|-----|--------|---------------|-----|--------|---------------|
| 1 | COM | Black | 5 | +12 V1 | Yellow |
| 2 | COM | Black | 6 | +12 V1 | Yellow |
| 3 | COM | Black | 7 | +12 V2 | Yellow/Black |
| 4 | COM | Black | 8 | +12 V2 | Yellow/Black |

2.6.3 P3 – Power Signal Connector

Connector housing: 5-pin Molex 50-57-9705 or equivalent

Contacts: Molex 16-02-0087 or equivalent

Table 5. P3 Power Signal Connector

| PIN | SIGNAL | 24 AWG COLORS |
|-----|-----------------|---------------|
| 1 | I2C Clock (SCL) | White/Green |
| 2 | I2C Data (SDL) | White/Yellow |
| 3 | SMBAlert# | White |
| 4 | ReturnS | Black |
| 5 | 3.3RS | White/Brown |

2.6.4 P4 – Backplane Power Connector

Connector housing: 8 Pin Molex Mini-Fit Jr. PN# 39-01-2245 or equivalent

Contact: Molex Mini-Fit, HCS, Female, Crimp 44476 or equivalent

Table 6. P4 Hard Drive Interface Board Power Connector

| PIN | SIGNAL | 18 AWG COLORS | PIN | SIGNAL | 18 AWG COLORS |
|-----|--------|---------------|-----|--------|---------------|
| 1 | COM | Black | 5 | +12 V4 | Yellow/Green |
| 2 | COM | Black | 6 | +12 V4 | Yellow/Green |
| 3 | +5V | Red | 7 | +5Vsb | Purple |
| 4 | +5V | Red | 8 | +3.3V | Orange |

2.6.5 P5 Mid-plane Power Connector

Connector housing: 10 Pin Molex Mini-Fit Jr. 43025-1000 or equivalent

Contact: Molex Mini-Fit, HCS, Female, Crimp 43030-0007 or equivalent

Table 7. P5 Mid-plane Power Connector

| PIN | SIGNAL | 20 AWG Colors | PIN | SIGNAL | 20 AWG Colors |
|-----|--------|---------------|-----|--------|---------------|
| 1 | COM | Black | 6 | +12 V4 | Yellow/Green |
| 2 | COM | Black | 7 | +12 V4 | Yellow/Green |
| 3 | +5V | Red | 8 | +12 V4 | Yellow/Green |
| 4 | +3.3V | Orange | 9 | +12 V4 | Yellow/Green |
| 5 | COM | Black | 10 | +5Vsb | Purple |

2.6.6 P6 Peripheral Power Connector

Connector housing: Amp V0 P/N 770827-1 or equivalent

Contact: Amp 61314-1 or equivalent

Table 8. P6 Peripheral Power Connector

| PIN | SIGNAL | 22 AWG Colors |
|-----|--------|---------------|
| 1 | +12V4 | Yellow/Green |
| 2 | COM | Black |
| 3 | COM | Black |
| 4 | +5 VDC | Red |

2.7 AC Input Requirements

The power supply module incorporates universal power input with active power factor correction, which reduces line harmonics in accordance with the EN61000-3-2 and JEIDA MITI standards.

2.7.1 AC Inlet Connector

The AC input connector shall be an *IEC 320 C-14* power inlet. This inlet is rated for 15A / 250VAC. This connector must also operate at higher temperatures (90°C)

2.7.2 Efficiency

The following table provides the required minimum efficiency level at various loading conditions. These are provided at three different load levels; 100%, 50% and 20%. Efficiency is tested over an AC input voltage range of 115VAC to 220VAC.

Table 9. Efficiency

| Loading | 100% of maximum | 50% of maximum | 20% of maximum |
|------------------------|-----------------|----------------|----------------|
| Recommended Efficiency | ~80% | ~83% | ~78% |

2.7.3 AC Input Voltage Specification

The power supply must operate within all specified limits over the input voltage range shown in the following table.

Table 10. AC Input Rating

| PARAMETER | MIN | RATED | MAX | Start-up Vac | Power Off Vac | Max Input AC Current | Max Rated Input AC Current |
|--------------------|---------------------|--------------------------|---------------------|--------------|---------------|-------------------------------------|-----------------------------------|
| Line Voltage (110) | 90V _{rms} | 100-127 V _{rms} | 140V _{rms} | 85Vac ±4Vac | 75Vac ±5Vac | 12 A _{rms} ^{1,3} | 11.0A _{rms} ⁴ |
| Line Voltage (220) | 180V _{rms} | 200-240 V _{rms} | 264V _{rms} | - | - | 6.0 A _{rms} ^{2,3} | 5.5A _{rms} ⁴ |
| Frequency | 47 Hz | 50/60Hz | 63 Hz | | | | |

Notes:

1. Maximum input current at low input voltage range shall be measured at 90Vac, at max load.
2. Maximum input current at high input voltage range shall be measured at 180VAC, at max load.
3. This is not to be used for determining agency input current markings.
4. Maximum rated input current is measured at 100VAC and 200VAC.

Harmonic distortion of up to 10% of the rated AC input voltage must not cause the power supply to go out of specified limits. The power supply shall power off at or below 75Vac ±5Vac. The power supply shall start up at or above 85VAC ±4Vac. Application of an input voltage below 85VAC shall not cause damage to the power supply or blow a fuse.

2.8 Protection Circuits

Protection circuits inside the PDB and the power supply shall cause the power supply's main +12V output to shut down, or shall cause a shut down of any of the three outputs on the PDB. Either of these shutdowns will result in shutting down the entire power supply / PDB combination. If the power supply latches off due to a protection circuit tripping, an AC cycle OFF for 15 seconds and a PSON[#] cycle HIGH for 1 second shall be able to reset the power supply and the PDB.

2.8.1 Over-Current Protection (OCP)

Each DC/DC converter output on the PDB shall have individual OCP protection circuits. The power supply and power distribution board (PS and PDB) shall shutdown and latch off after an over-current condition occurs. This latch shall be cleared by toggling the PSON[#] signal, or by an AC power interruption. The following table provides the over-current limits. The values are measured at the PDB harness connectors. The DC/DC converters shall not be damaged from repeated power cycling in this condition. The +12V output from the power supply is divided on the PDB into four channels and each is limited to 240VA of power. There shall be current

sensors and limit circuits to shut down the entire PS and PDB if the limit is exceeded. The limits are listed below.

Table 11. Over-Current Protection Limits / 240VA Protection

| Output Voltage | MIN OCP TRIP LIMITS | MAX OCP TRIP LIMITS |
|----------------|--------------------------|-----------------------|
| +3.3V | 110% min (= 26.4A min) | 150% max (= 36A max) |
| +5V | 110% min (= 33A min) | 150% max (= 45A max) |
| -12V | 125% min (= 0.625A min) | 400% max (= 2.0A max) |
| +12V1 | 112.5% min (= 18.0A min) | 20A max |
| +12V2 | 112.5% min (= 18.0A min) | 20A max |
| +12V3 | 112.5% min (= 18.0A min) | 20A max |
| +12V4 | 112.5% min (= 18.0A min) | 20A max |

2.8.2 Over-Voltage Protection (OVP)

Each DC/DC converter output on the PDB shall have individual OVP circuits built in and they shall be locally sensed. The PS and PDB shall shutdown and latch off after an over-voltage condition occurs. This latch shall be cleared by toggling the PSON[#] signal or by an AC power interruption. The following table provides the over-voltage limits. The values are measured at the PDB harness connectors. The voltage shall never exceed the maximum levels when measured at the power pins of the output harness connector during any single point of fail. The voltage shall never trip any lower than the minimum levels when measured at the power pins of the PDB connector.

Table 12. Over-Voltage Protection (OVP) Limits

| Output Voltage | OVP MIN (V) | OVP MAX (V) |
|----------------|-------------|-------------|
| +3.3V | 3.9 | 4.5 |
| +5V | 5.7 | 6.5 |
| -12V | -13.3 | -14.5 |
| +12V1/2/3/4 | See PS spec | |

2.8.3 Over-Temperature Protection (OTP)

The power supply will be protected against over-temperature conditions caused by loss of fan cooling or excessive ambient temperature. In an OTP condition the power supply will shutdown. When the power supply temperature drops to within specified limits, the power supply shall restore power automatically, while the 5 Vsb remains constantly on. The OTP trip level shall have a minimum of 4°C of ambient temperature hysteresis, so that the power supply will not oscillate on and off due to a temperature recovery condition. The power supply shall alert the system of the OTP condition via the power supply FAIL signal and the PWR LED.

2.9 Power Supply Status LED

Each power supply module will have a single bi-color LED to indicate power supply status. The LED operation is defined below.

Table 13. LED Indicators

| Power Supply Condition | Bi-Color LED |
|---|------------------------|
| No AC power to all power supplies | OFF |
| No AC power to this PSU only (for 1+1 configuration) or Power supply critical event causing a shutdown: failure, fuse blown (1+1 only), OCP, OVP, Fan Failed | AMBER |
| Power supply warning events where the power supply continues to operate: high temp, high power, high current, slow fan. | 1Hz Blink AMBER |
| AC present / Only 5VSB on (PS Off) | 1Hz Blink GREEN |
| Output ON and OK | GREEN |

The LED is visible on the rear panel of each installed power supply module.

3. Cooling Subsystem

Several components and configuration requirements make up the cooling sub-system of the chassis. These include the system fan module, the power supply fans, air baffles, CPU air duct, and drive bay population. All are necessary to provide and regulate the air flow and air pressure needed to maintain the system's thermals when operating at or below maximum specified thermal limits. See Table 54. System Environmental Limits.

The chassis is offered with two cooling solutions. The first option is a non-redundant three fan solution providing sufficient airflow to maintain internal system thermal requirements when the external ambient temperature remains within specified limits. The second option is a redundant fan solution housed in a fan module assembly. Three parallel sets of fans are arranged in series to provide redundant cooling in the event of a single fan failure. Each cooling option utilizes two fan types: a 60mm variable speed fan and an 80mm variable speed fan.

The chassis uses a variable fan speed control engine to provide adequate cooling for the system at various ambient temperature conditions, under various server workloads, and with the least amount of acoustic noise possible. The fans operate at the lowest speed for any given condition in order to minimize acoustics. The Baseboard Management Controller (BMC) integrated on the Intel® Server Board S5000PAL is used for the variable fan speed control function. The controller monitors selective component temperatures and the ambient temperature, as well as each fan's RPM to determine the necessary airflow. The BMC sets the fan speeds to the appropriate RPM in order to maintain proper cooling. The BMC controller will also log errors into the System Event Log (SEL) when temperature sensors exceed their safe operating ranges, or if any of the fans fail to operate at safe airflow speeds. In the event of a fan failure, the BMC will boost the remaining fans to compensate for the lost air flow. Chassis with redundant fans can continue to operate in this degraded condition while the non-redundant chassis may not. If the cooling is not sufficient under a failed fan condition the system will eventually shutdown to protect itself from thermal damage.

3.1 Non-redundant Fan Module

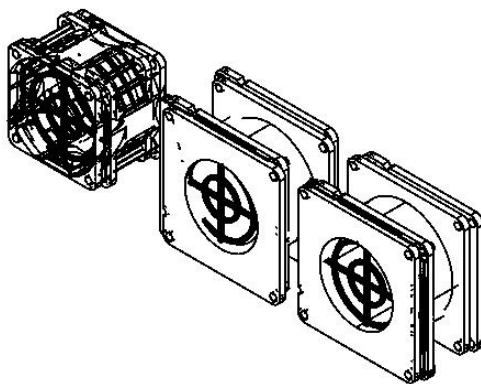


Figure 16. Non-Redundant Fan Module

This option provides the primary airflow for systems that do not support redundant cooling.

Table 14 Nonredundant Cooling Zones

| Fan | Cooling Zone | Description of greatest cooling influence |
|-------------------------------------|--------------|--|
| System Fan #1 | CPU1 | Primary cooling for CPU1 and memory |
| System Fan #2 | CPU2 | Primary cooling for hard drives hard drives 3 thru 6, CPU2, the BNB, and the low profile PCI cards |
| System Fan #3 | PCI | Primary cooling for hard drives 3 and 4, Full Height PCI cards, PXH and IOP80333 chipset |
| Power Supply Fans 2 fans per module | Power Supply | Primary cooling for hard drives 1 and 2, and the power supply module(s) |

The system fan module has been designed for ease of use and has support for several management features that can be utilized by the server board management system.

- The fan module houses two different fan sizes. System fans 1 and 2 use an 80mm fan, while system fan 3 uses a 60mm fan.
- Each fan is designed for tool-less insertion to or removal from the fan module. Note: The fans are NOT hot-swappable. The system must be turned off in order to replace a failed fan.
- Each fan within the module is capable of supporting multiple speeds. If the internal ambient temperature of the system exceeds the value programmed into the thermal sensor data record (SDR), the BMC firmware will increase the speed for all the fans within the fan module.
- Each fan connector within the module supplies a tachometer signal that allows the BMC to monitor the status of each fan. If one of the fans should fail, the remaining fans will increase their rotation and attempt to maintain the thermal requirements of the system.
- Each fan has an associated fault LED on the mid-plane located next to the fan header. In the event of a fan failure, the fault LED for the failing fan can be illuminated by server management.

Table 15. Non-redundant Fan Connector Pin Assingment

| Pin | Signal Name | Description |
|-----|--------------|---|
| 1 | Tachometer B | Reserved, unused by the non-redundant fan |
| 2 | PWM | Fan speed control signal |
| 3 | 12V | Power for fan |
| 4 | 12V | Power for fan |
| 5 | Tachometer A | Fan RPM sensor output Two pulse per revolution for the 80mm fan Four pulses per revolution for the 60mm fan |
| 6 | Return | Return path to ground |
| 7 | Return | Return path to ground |
| 8 | Fan Presence | Reserved, unused by the non-redundant fan |
| 9 | LED Cathode | Loopback signal to pin 10 |
| 10 | LED Anode | Loopback signal to pin 9 |

The system fans plug into headers on the mid-plane board according to the following diagram.

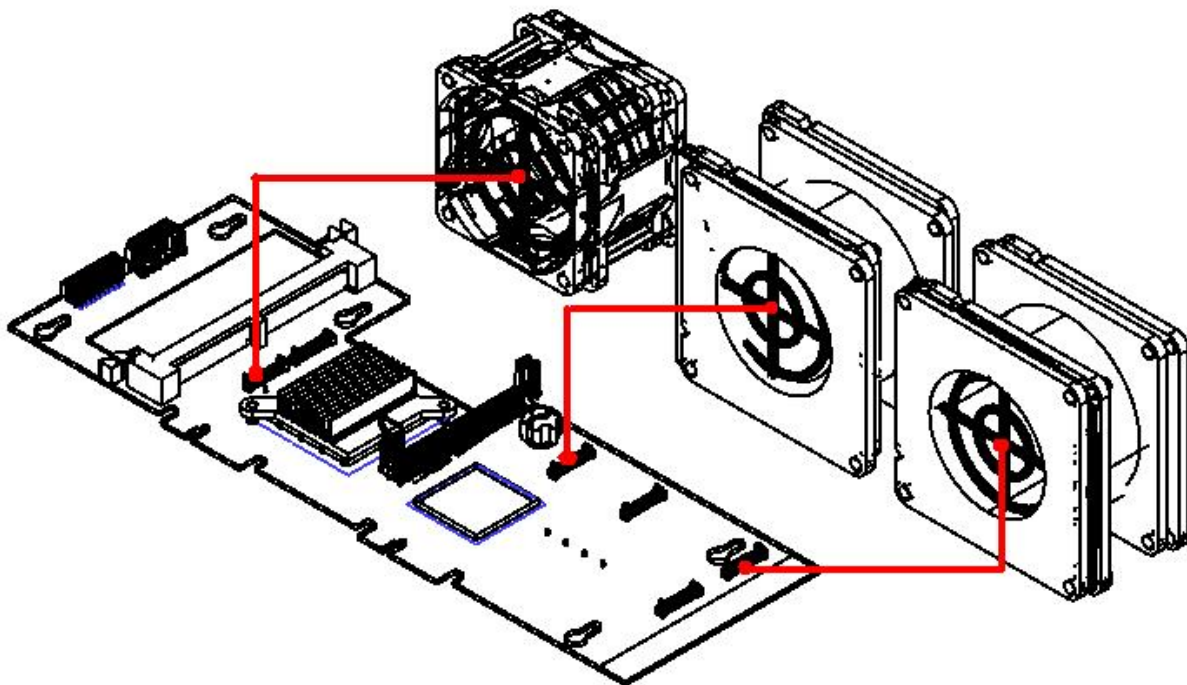
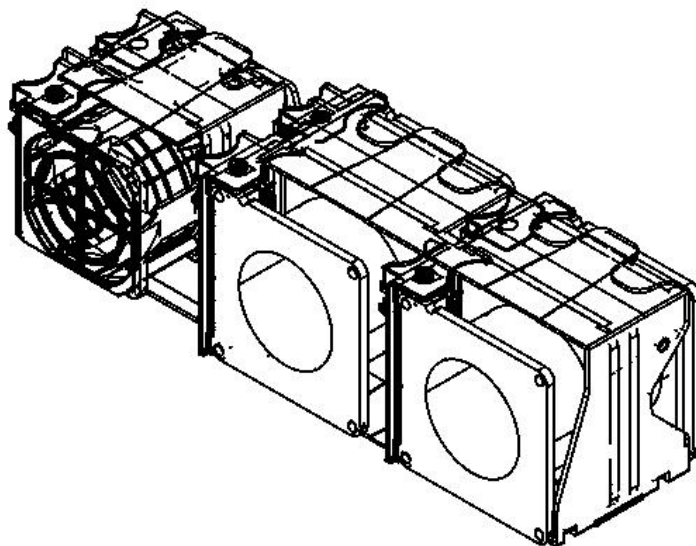


Figure 17. Non-Redundant Fan Header Assignments on Mid-plane (Layout Subject to Change)

Table 16. Nonredundant Fan Header Assignment

| Fan ID | Mid-plane Fan Header Name |
|-----------------------|---------------------------|
| Fan #1 - CPU1 cooling | FAN_2 |
| Fan #2 - CPU2 cooling | FAN_3 |
| Fan #3 - PCI Cooling | FAN_5 |

3.2 Redundant System Fan Module

**Figure 18. Fan Module Assembly****Table 17 Redundant Cooling Zones**

| Fan | Cooling Zone | Description of greatest cooling influence |
|-------------------------------------|--------------|--|
| System Fan #1 & #2 | CPU1 | Primary cooling for CPU1 and memory |
| System Fan #2 & #3 | CPU2 | Primary cooling for hard drives hard drives 3 thru 6, CPU2, the BNB, and the low profile PCI cards |
| System Fan #5 & #6 | PCI | Primary cooling for hard drives 3 and 4, Full Height PCI cards, PXH and IOP80333 chipset |
| Power Supply Fans 2 fans per module | Power Supply | Primary cooling for hard drives 1 and 2, and the power supply module(s) |

Each 10-pin fan connector provides power and ground, PWM control, tachometer output, a fan present detection signal, and a fault LED signal allowing it to be monitored independently by server management software. The following table provides the pin-out and description for the connectors on each fan.

Table 18 Redundant Fan Connector Pin Assingment

| Pin | Signal Name | Description |
|-----|--------------|--|
| 1 | Tachometer B | Reserved, unused by redundant fan |
| 2 | PWM | Fan speed control signal |
| 3 | 12V | Power for fan |
| 4 | 12V | Power for fan |
| 5 | Tachometer A | Fan RPM sensor output Two pulses per revolution for the 80mm fan Four pulses per revolution for the 60mm fan |
| 6 | Return | Return path to ground |
| 7 | Return | Return path to ground |
| 8 | Fan Presence | Detection if fan is installed in system |
| 9 | LED Cathode | LED in fan |
| 10 | LED Anode | Reserved, unused by the redundant fan |

The system fans plug into headers on the mid-plane board according the following diagram.

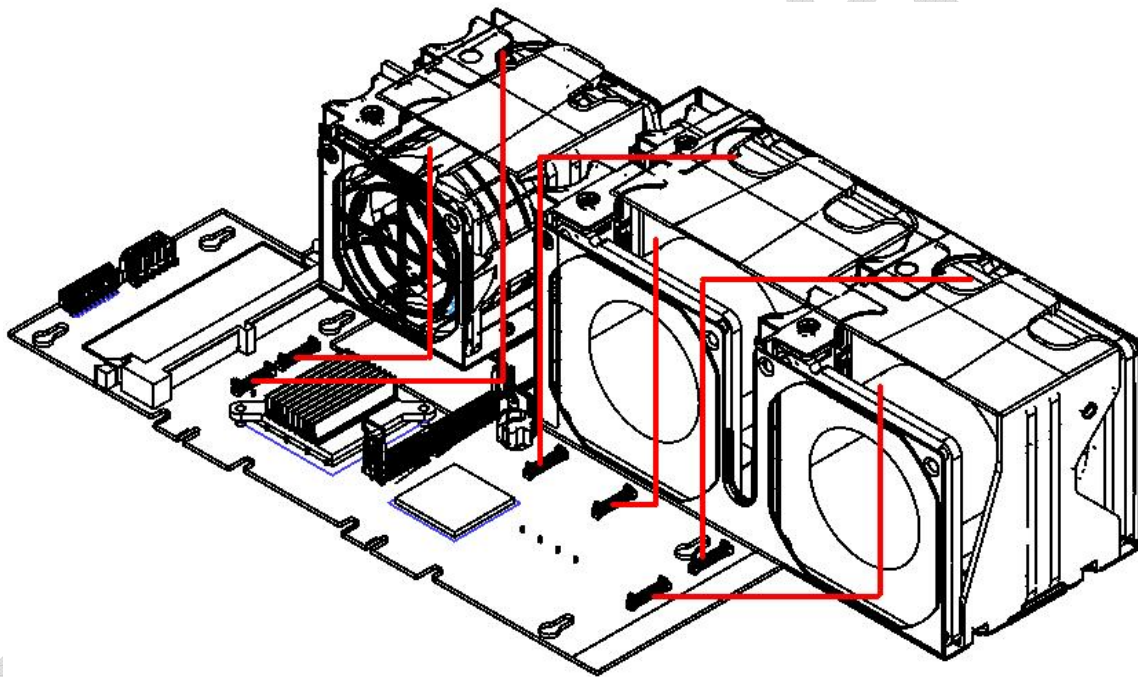


Figure 19. Redudant Fan Header Assignments on Mid-plane (Layout Subject to Change)

Table 19 Redundant Fan Header Assignment

| Fan ID | Mid-plane Fan Header Name |
|-----------------------|---------------------------|
| Fan #1 - CPU1 Cooling | FAN_1 |
| Fan #2 - CPU1 Cooling | FAN_2 |
| Fan #3 - CPU2 Cooling | FAN_3 |
| Fan #4 - CPU2 Cooling | FAN_4 |
| Fan #5 - PCI Cooling | FAN_5 |
| Fan #6 - PCI Cooling | FAN_6 |

The system fan module has been designed for ease of use and has support for several management features that can be utilized by the server board management system.

- The fan module houses two different fan sizes. System fans 1, 2, 3 and 4 use an 80mm fan, while system fans 5 and 6 use a 60mm fan.
- Each fan is designed for tool-less insertion to or removal from the fan module and can be hot-swapped in the event of failure.
- Each fan within the module is equipped with a failure LED. In the event of a fan failure, the failure LED on the failing fan can be illuminated by server management.
- Each fan within the module is capable of supporting multiple speeds. If the internal ambient temperature of the system exceeds the value programmed into the thermal sensor data record (SDR), the BMC firmware will increase the speed for all the fans within fan module.
- Each fan connector within the module supplies a tachometer signal that allows the BMC to monitor the status of each fan. If one of the fans should fail, the remaining fans will increase their rotation and attempt to maintain the thermal requirements of the system.

3.3 Air Flow Support

To control airflow within the system, the chassis uses an air baffle and a CPU air duct to isolate and direct airflow to three critical zones: the power supply zone, the full height PCI riser zone, and the CPU/memory/low profile PCI riser zone.

3.3.1 Power Supply Zone

An air baffle is used to isolate the air flow of the main system board zones from the zone directly behind the power supply. As the power supply fans pull pre-heated air through the power supply from inside the chassis, the zone behind it must remain as cool as possible by drawing air from the leftmost drive bays only.

3.3.2 Full Height Riser Zone

The full height riser zone is the area between the power supply assembly and the full height riser card of the riser assembly. The air flow through this area is generated by system fan 3 of the fan module in a non-redundant fan configuration. In a redundant fan configuration, the air flow for this zone is provided by system fans 5 and 6. Air is drawn from the drive bay area through the fan and pushed out of the system through ventilation holes the back side of the chassis.

3.3.3 CPU / Memory / Low Profile PCI Zone

The CPU / memory / low profile PCI zone is the area between the low profile riser card of the riser assembly and the right chassis wall. In a non-redundant fan configuration, the air flow for this zone is generated by system fans 1 and 2 of the fan module. In a redundant fan configuration, the air flow for this zone is provided by system fans 1, 2, 3 and 4. Air is drawn from the drive bay area, through the fans, directed through the CPU air duct, and out through ventilation holes on both the back wall and rear side wall of the chassis.

The CPU air duct is used to direct air flow through the processor heat sinks for both single and dual processor configurations. For single processor configurations, a flexible air baffle is attached to the air duct as shown in the following diagram.

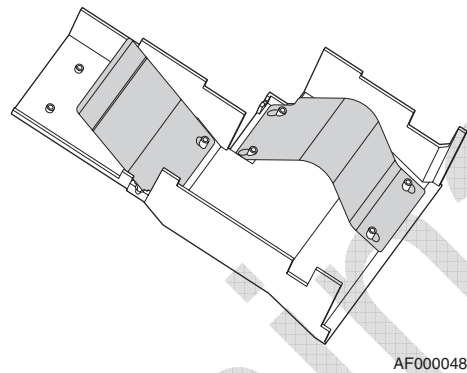


Figure 20. CPU Air Duct with Air Baffle

Operating a single processor configuration without the air baffle installed will result in the processor over heating and may cause the system to shutdown.

3.4 Drive Bay Population

To maintain the proper air pressure within the system, all hard drive bays must be populated with either a hard drive, or drive blank.

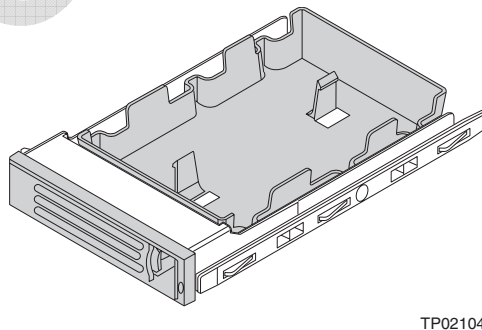


Figure 21. Drive Blank

4. System Board Interconnects

The chassis incorporates several design changes from the previous generation Intel 2U server chassis, resulting in improved cable routing. System boards within the chassis include the mid-plane, bridge board, hot-swap backplane, and control panel. This chapter describes the interconnect features of each, and defines the pin-outs for each of their connectors. Functional details of each system board are described in later chapters.

4.1 Mid-plane

The mid-plane is new to this generation of Intel high density server platforms. Its design and use, along with that of the bridgeboard and hot-swap backplane, improve cable routing within the system. The mid-plane is the key system board of the chassis. It serves as the primary interface between the server board, hot-swap backplane, and control panel. Two mid-planes are offered for this chassis: a passive SATA only, and an active SAS/SAS RAID.

The following diagram shows the location for each connector found on the passive mid-plane board.

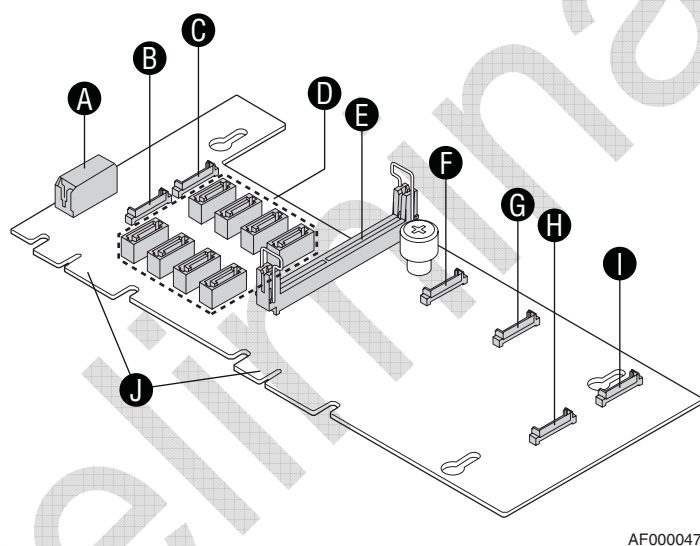


Figure 22. Passive Mid-plane Board (Layout Subject to Change)

The chassis also supports an active SAS / SAS RAID mid-plane. This system board incorporates an LSI* LSISAS1068 SAS controller onto the board. See Chapter 5 for details describing SAS / SAS RAID support. The following diagram shows the location for each connector found on this board.

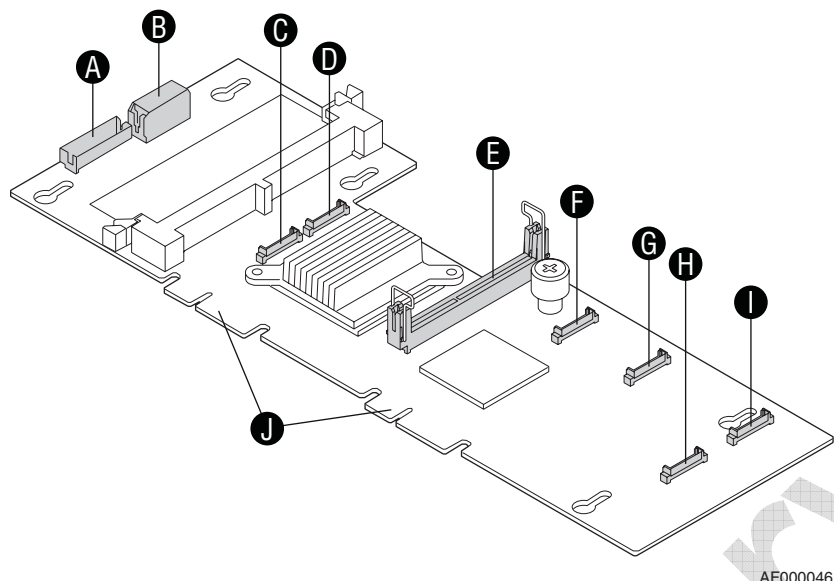


Figure 23. SAS/SAS RAID Mid-plane Board (Layout Subject to Change)

The following tables define the connector pin-outs for both mid-plane boards.

Table 20. 120-pin Server Board-to-Mid-plane Connector Pin-out

| PIN | SIGNAL NAME | PIN | SIGNAL NAME |
|-----|----------------|-----|--------------------------|
| 1 | GND | 61 | SMB_SENSOR_3V3SB_CLK_BUF |
| 2 | PE1_ESB_TX_DN3 | 62 | SMB_SENSOR_3V3SB_DAT_BUF |
| 3 | PE1_ESB_TX_DP3 | 63 | FM_BRIDGE_PRSNT_N |
| 4 | GND | 64 | GND |
| 5 | PE_WAKE_N | 65 | PE1_ESB_RX_DN_C3 |
| 6 | GND | 66 | PE1_ESB_RX_DP_C3 |
| 7 | PE1_ESB_TX_DN2 | 67 | GND |
| 8 | PE1_ESB_TX_DP2 | 68 | FAN_PRSNT6_N |
| 9 | GND | 69 | GND |
| 10 | FAN_PRSNT5_N | 70 | PE1_ESB_RX_DN_C2 |
| 11 | GND | 71 | PE1_ESB_RX_DP_C2 |
| 12 | PE1_ESB_TX_DN1 | 72 | GND |
| 13 | PE1_ESB_TX_DP1 | 73 | FAN_PRSNT4_N |
| 14 | GND | 74 | GND |
| 15 | RST_PS_PWRGD | 75 | PE1_ESB_RX_DN_C1 |
| 16 | GND | 76 | PE1_ESB_RX_DP_C1 |
| 17 | PE1_ESB_TX_DN0 | 77 | GND |
| 18 | PE1_ESB_TX_DP0 | 78 | RAID_KEY_PRES |
| 19 | GND | 79 | GND |
| 20 | FM_RAID_MODE | 80 | PE1_ESB_RX_DN_C0 |
| 21 | GND | 81 | PE1_ESB_RX_DP_C0 |
| 22 | CLK_IOP_DN | 82 | GND |
| 23 | CLK_IOP_DP | 83 | FAN_PRSNT1_N |
| 24 | GND | 84 | FAN_PRSNT3_N |
| 25 | SGPIO_DATAOUT1 | 85 | FAN_PRSNT2_N |
| 26 | SGPIO_DATAOUT0 | 86 | GND |

| PIN | SIGNAL NAME | PIN | SIGNAL NAME |
|-----|-------------------------|-----|--------------------|
| 27 | SGPIO_LOAD | 87 | USB1_ESB_DP |
| 28 | SGPIO_CLOCK | 88 | USB1_ESB_DN |
| 29 | GND | 89 | GND |
| 30 | USB2_ESB_DP | 90 | USB1_ESB_OC_N |
| 31 | USB2_ESB_DN | 91 | USB0_ESB_OC_N |
| 32 | GND | 92 | GND |
| 33 | USB2_ESB_OC_N | 93 | USB0_ESB_DP |
| 34 | NIC1_LINK_LED_N | 94 | USB0_ESB_DN |
| 35 | NIC1_ACT_LED_N | 95 | GND |
| 36 | LED_STATUS_AMBER_R1 | 96 | FP_NMI_BTN_N |
| 37 | NIC2_LINK_LED_N | 97 | BMC_RST_BTN_N |
| 38 | NIC2_ACT_LED_N | 98 | FP_PWR_BTN_N |
| 39 | LED_STATUS_GREEN_BUF_R1 | 99 | FP_ID_SW_L |
| 40 | GND | 100 | GND |
| 41 | SMB_PBI_5VSB_DAT | 101 | SMB_IPMB_5VSB_DAT |
| 42 | SMB_PBI_5VSB_CLK | 102 | SMB_IPMB_5VSB_CLK |
| 43 | GND | 103 | GND |
| 44 | V_IO_HSYNC2_BUF_FP | 104 | LED_HDD_ACTIVITY_N |
| 45 | V_IO_VSYNC2_BUF_FP | 105 | LED_HDD_5V_A |
| 46 | GND | 106 | FP_PWR_LED_R_N |
| 47 | V_IO_BLUE_CONN_FP | 107 | FP_PWR_LED_3VSB |
| 48 | V_IO_GREEN_CONN_FP | 108 | FP_ID_LED_R1_N |
| 49 | V_IO_RED_CONN_FP | 109 | FM_SIO_TEMP_SENSOR |
| 50 | GND | 110 | LED_FAN3_FAULT |
| 51 | LED_FAN6_FAULT | 111 | LED_FAN2_FAULT |
| 52 | LED_FAN5_FAULT | 112 | LED_FAN1_FAULT |
| 53 | LED_FAN4_FAULT | 113 | FAN_PWM_CPU1 |
| 54 | FAN_PWM3 | 114 | GND |
| 55 | GND | 115 | FAN_PWM_CPU2 |
| 56 | PCI_FAN_TACH10 | 116 | PCI_FAN_TACH9 |
| 57 | FAN_TACH8 | 117 | FAN_TACH7 |
| 58 | FAN_TACH6 | 118 | FAN_TACH5 |
| 59 | FAN_TACH4_H7 | 119 | FAN_TACH3_H7 |
| 60 | FAN_TACH2_H7 | 120 | FAN_TACH1_H7 |

Table 21. Mid-plane Fan Header Pin-outs

| J2B1 - FAN_1 | | J2B3 - FAN_3 | | J7B1 - FAN_5 | |
|--------------|----------------|--------------|----------------|--------------|----------------|
| PIN | SIGNAL NAME | PIN | SIGNAL NAME | PIN | SIGNAL NAME |
| 1 | FAN_TACH5 | 1 | FAN_TACH7 | 1 | FAN_TACH10 |
| 2 | FAN_PWM_CPU1 | 2 | FAN_PWM_CPU2 | 2 | FAN_PWM3 |
| 3 | P12V | 3 | P12V | 3 | P12V |
| 4 | P12V | 4 | P12V | 4 | P12V |
| 5 | FAN_TACH1_H7 | 5 | FAN_TACH3_H7 | 5 | FAN_TACH9 |
| 6 | GND | 6 | GND | 6 | GND |
| 7 | GND | 7 | GND | 7 | GND |
| 8 | FAN_PRSNT1_N | 8 | FAN_PRSNT3_N | 8 | FAN_PRSNT5_N |
| 9 | LED_FAN1_FAULT | 9 | LED_FAN3_FAULT | 9 | LED_FAN5_FAULT |
| 10 | LED_FAN1 | 10 | LED_FAN3 | 10 | LED_FAN5 |

| J2B2 - FAN_2 | | J3B1 - FAN_4 | | J7B2 - FAN_6 | |
|--------------|----------------|--------------|----------------|--------------|----------------|
| PIN | SIGNAL NAME | PIN | SIGNAL NAME | PIN | SIGNAL NAME |
| 1 | FAN_TACH6 | 1 | FAN_TACH8 | 1 | UNUSED |
| 2 | FAN_PWM_CPU1 | 2 | FAN_PWM_CPU2 | 2 | FAN_PWM3 |
| 3 | P12V | 3 | P12V | 3 | P12V |
| 4 | P12V | 4 | P12V | 4 | P12V |
| 5 | FAN_TACH2_H7 | 5 | FAN_TACH4_H7 | 5 | FAN_TACH10 |
| 6 | GND | 6 | GND | 6 | GND |
| 7 | GND | 7 | GND | 7 | GND |
| 8 | FAN_PRSNT2_N | 8 | FAN_PRSNT4_N | 8 | FAN_PRSNT6_N |
| 9 | LED_FAN2_FAULT | 9 | LED_FAN4_FAULT | 9 | LED_FAN6_FAULT |
| 10 | LED_FAN2 | 10 | LED_FAN4 | 10 | LED_FAN6 |

Table 22. Mid-plane Power Connector Pin-out

| PIN | Signal Description |
|-----|--------------------|
| 1 | GND |
| 2 | GND |
| 3 | P5V |
| 4 | P3V3 |
| 5 | GND |
| 6 | P12V |
| 7 | P12V |
| 8 | P12V |
| 9 | P12V |
| 10 | P5V_STBY |

Table 23. Mid-plane-to-Backplane Card Edge Connector #1 Pin-out

| J7A1 - HSBP#1 I/F | | | |
|-------------------|---------------|-----|------------------|
| PIN | SIGNAL NAME | PIN | SIGNAL NAME |
| A1 | RST_PS_PWRGD | B1 | GND |
| A2 | GND | B2 | SATA0_RX_N |
| A3 | GND | B3 | SATA0_RX_P |
| A4 | SATA1_RX_N | B4 | GND |
| A5 | SATA1_RX_P | B5 | GND |
| A6 | GND | B6 | SATA0_TX_N |
| A7 | GND | B7 | SATA0_TX_P |
| A8 | SATA1_TX_P | B8 | GND |
| A9 | SATA1_TX_N | B9 | GND |
| A10 | GND | B10 | USB2_ESB_DN |
| A11 | GND | B11 | USB2_ESB_DP |
| A12 | USB2_ESB_OC_N | B12 | GND |
| A13 | GND | B13 | SATA2_RX_N |
| A14 | GND | B14 | SATA2_RX_P |
| A15 | SATA3_RX_N | B15 | GND |
| A16 | SATA3_RX_P | B16 | NC_RESERVEDB16 |
| A17 | GND | B17 | SMB_SAS_EDGE_DAT |
| A18 | GND | B18 | NC_RESERVEDB18 |
| A19 | GND | B19 | SMB_SAS_EDGE_CLK |
| A20 | SATA3_TX_P | B20 | NC_RESERVEDB20 |
| A21 | SATA3_TX_N | B21 | GND |
| A22 | GND | B22 | SATA2_TX_P |
| A23 | GND | B23 | SATA2_TX_N |
| A24 | SATA5_RX_N | B24 | GND |
| A25 | SATA5_RX_P | B25 | GND |
| A26 | GND | B26 | SATA4_RX_N |
| A27 | GND | B27 | SATA4_RX_P |
| A28 | SATA5_TX_P | B28 | GND |
| A29 | SATA5_TX_N | B29 | GND |
| A30 | GND | B30 | SATA4_TX_P |
| A31 | GND | B31 | SATA4_TX_N |
| A32 | P5V_STBY | B32 | GND |

Table 24. Mid-plane-to-Backplane Card Edge Connector #2 Pin-out

| J4A1 - HSBP#2 I/F | | | |
|-------------------|--------------------|-----|-------------------------|
| PIN | SIGNAL NAME | PIN | SIGNAL NAME |
| A1 | SGPIO_DATAOUT0 | B1 | SGPIO_CLOCK |
| A2 | SGPIO_DATAOUT1 | B2 | GND |
| A3 | GND | B3 | SATA_ADDIN1_RX_N |
| A4 | GND | B4 | SATA_ADDIN1_RX_P |
| A5 | SATA_ADDIN2_RX_N | B5 | GND |
| A6 | SATA_ADDIN2_RX_P | B6 | GND |
| A7 | GND | B7 | SATA_ADDIN1_TX_N |
| A8 | GND | B8 | SATA_ADDIN1_TX_P |
| A9 | SATA_ADDIN2_TX_P | B9 | GND |
| A10 | SATA_ADDIN2_TX_N | B10 | GND |
| A11 | GND | B11 | SGPIO_LOAD |
| A12 | SMB_PBI_3VSB_DAT | B12 | SMB_IPMB_5VSB_DAT |
| A13 | SMB_PBI_3VSB_CLK | B13 | SMB_IPMB_5VSB_CLK |
| A14 | USB0_ESB_OC_N | B14 | GND |
| A15 | GND | B15 | USB1_ESB_DP |
| A16 | GND | B16 | USB1_ESB_DN |
| A17 | USB0_ESB_DP | B17 | GND |
| A18 | USB0_ESB_DN | B18 | GND |
| A19 | GND | B19 | USB1_ESB_OC_N |
| A20 | LED_NIC1_ACT_N | B20 | LED_HDD_ACTIVITY_N |
| A21 | LED_NIC1_LINK_N | B21 | LED_HDD_5V_A |
| A22 | FM_SIO_TEMP_SENSOR | B22 | FP_ID_SW_L |
| A23 | LED_NIC2_LINK_N | B23 | BMC_RST_BTN_N |
| A24 | LED_NIC2_ACT_N | B24 | FP_PWR_BTN_N |
| A25 | GND | B25 | FP_NMI_BTN_N |
| A26 | V_BLUE_CONN_FP | B26 | FP_PWR_LED_3VSB |
| A27 | V_GREEN_CONN_FP | B27 | FP_PWR_LED_R_N |
| A28 | V_RED_CONN_FP | B28 | FP_ID_LED_R1_N |
| A29 | GND | B29 | GND |
| A30 | V_HSYNC2_BUF_FP | B30 | LED_STATUS_AMBER_R1 |
| A31 | V_VSYNC2_BUF_FP | B31 | LED_STATUS_GREEN_BUF_R1 |
| A32 | GND | B32 | FP_LED |

Table 25. Active Mid-plane SAS RAID Battery Backup Connector Pin-out

| PIN | Signal Description |
|-----|--------------------|
| 1 | P12V |
| 2 | GND |
| 3 | NC_P5V_MONITOR |
| 4 | GND |
| 5 | P1V8_VBAT_RAID |
| 6 | GND |
| 7 | PWRGD_P3V3_STBY |
| 8 | GND |
| 9 | P1V8_VBAT_RAID |
| 10 | GND |
| 11 | PX_RESET_N |
| 12 | GND |
| 13 | SMB_CLK_P3V3 |
| 14 | GND |
| 15 | SMB_DAT_P3V3 |
| 16 | BBU_PFAIL_N |
| 17 | BBU_DDR_SEL |
| 18 | BBU_BBE |
| 19 | BBU_BBSTROBE |
| 20 | BBU_BBSTATUS |

Table 26. Passive Mid-plane SATA/SAS Connector Pin-outs

| J5A2 - SAS_7 | | J6A1 - SAS_6 | | J5B1 - SAS_4 | | J6B1 - SAS_2 | |
|--------------|------------------|--------------|-------------|--------------|-------------|--------------|-------------|
| PIN | SIGNAL NAME | PIN | SIGNAL NAME | PIN | SIGNAL NAME | PIN | SIGNAL NAME |
| 1 | GND | 1 | GND | 1 | GND | 1 | GND |
| 2 | SATA_ADDIN1_TX_P | 2 | SATA5_TX_P | 2 | SATA3_TX_P | 2 | SATA1_TX_P |
| 3 | SATA_ADDIN1_TX_N | 3 | SATA5_TX_N | 3 | SATA3_TX_N | 3 | SATA1_TX_N |
| 4 | GND | 4 | GND | 4 | GND | 4 | GND |
| 5 | SATA_ADDIN1_RX_N | 5 | SATA5_RX_N | 5 | SATA3_RX_N | 5 | SATA1_RX_N |
| 6 | SATA_ADDIN1_RX_P | 6 | SATA5_RX_P | 6 | SATA3_RX_P | 6 | SATA1_RX_P |
| 7 | GND | 7 | GND | 7 | GND | 7 | GND |

| J5A1- SAS_8 | | J6A2 - SAS_5 | | J5B2 - SAS_3 | | J6B2 - SAS_1 | |
|-------------|------------------|--------------|-------------|--------------|-------------|--------------|-------------|
| PIN | SIGNAL NAME | PIN | SIGNAL NAME | PIN | SIGNAL NAME | PIN | SIGNAL NAME |
| 1 | GND | 1 | GND | 1 | GND | 1 | GND |
| 2 | SATA_ADDIN2_TX_P | 2 | SATA4_TX_P | 2 | SATA2_TX_P | 2 | SATA0_TX_P |
| 3 | SATA_ADDIN2_TX_N | 3 | SATA4_TX_N | 3 | SATA2_TX_N | 3 | SATA0_TX_N |
| 4 | GND | 4 | GND | 4 | GND | 4 | GND |
| 5 | SATA_ADDIN2_RX_N | 5 | SATA4_RX_N | 5 | SATA2_RX_N | 5 | SATA0_RX_N |
| 6 | SATA_ADDIN2_RX_P | 6 | SATA4_RX_P | 6 | SATA2_RX_P | 6 | SATA0_RX_P |
| 7 | GND | 7 | GND | 7 | GND | 7 | GND |

4.2 Bridge Board

The chassis utilizes a bridge board to route signals from the server board to the mid-plane board. The bridge board carries signals for three USB ports, SSI front panel control signals, video, various I2C buses, fan control signals, and a PCIe* x4 bus for SAS controller function. See Table 20. 120-pin Server Board-to-Mid-plane Connector Pin-out.

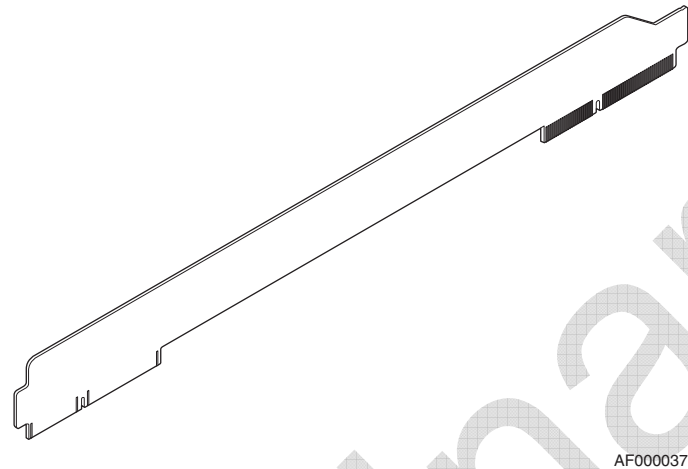


Figure 24. Bridge Board

4.3 Hot-Swap SATA/SAS Backplane

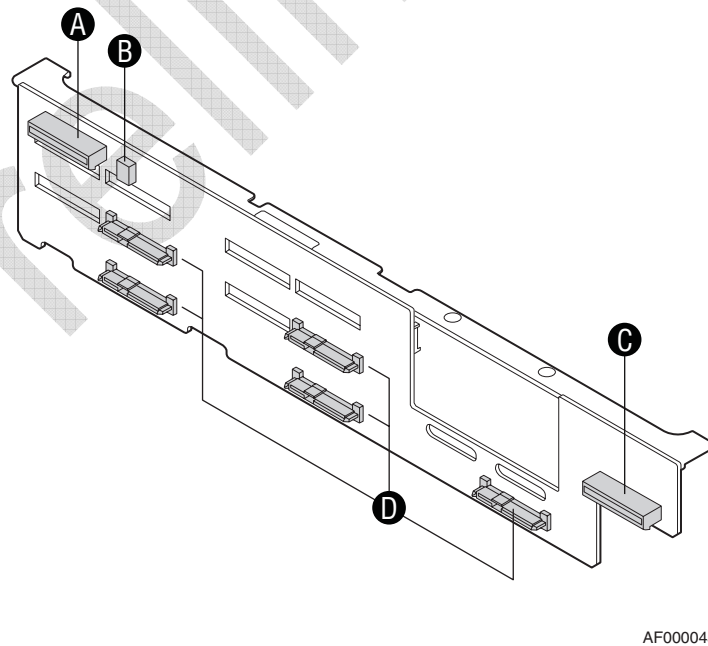


Figure 25. Hot-Swap SAS/SATA Backplane (Front Side View)

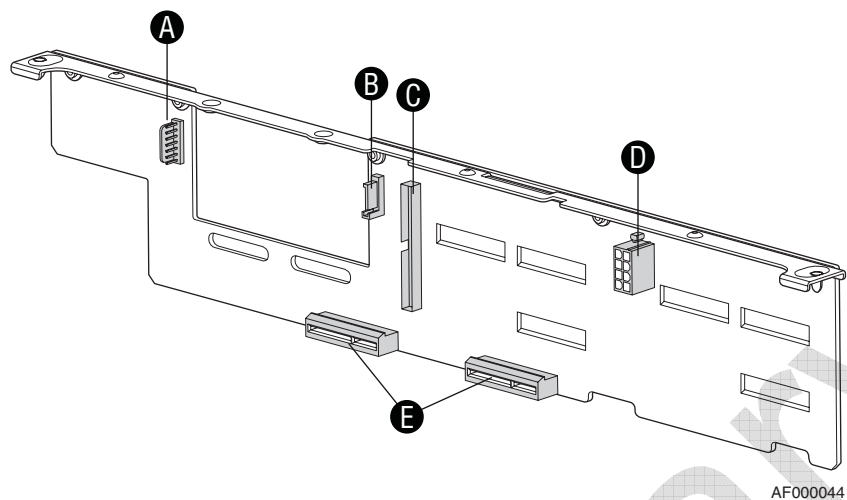


Figure 26. Hot-Swap SAS/SATA Backplane (Back Side View)

Table 27. 2x4 SAS/SATA Backplane Power Connector Pin-out (J7L2)

| Pin # | Signal Name |
|-------|-------------|
| 1 | Ground |
| 2 | Ground |
| 3 | P5V |
| 4 | P5V |
| 5 | P12V |
| 6 | P12V |
| 7 | P5V_STBY |
| 8 | P3V3 |

Table 28. 1x7 6th HDD / Tape Power Connector Pin-out (J2M1)

| Pin # | Signal Name |
|-------|----------------|
| 1 | P12V |
| 2 | Ground |
| 3 | Ground |
| 4 | P5V |
| 5 | SASS_PRSTNT_L |
| 6 | LED_SASS_ACT_L |
| 7 | P3V3 |

Table 29. 6th HDD Option SATA/SAS I/O Connector Pin-out (J4L1)

| Pin # | Signal Name |
|-------|-------------|
| 1 | Ground |
| 2 | SASS_TX_DP |
| 3 | SASS_TX_DN |
| 4 | Ground |
| 5 | SASS_RX_DN |
| 6 | SASS_RX_DP |
| 7 | Ground |

Table 30. 2x22 IDE Connector Pin-out (J5N1)

| Pin # | Signal Name | Pin # | Signal Name |
|-------|--------------------|-------|----------------|
| 1 | RST_IDE_L | 23 | RIDE_DIOW_N |
| 2 | Ground | 24 | Ground |
| 3 | RIDE_DD <15..0> 7 | 25 | RIDE_DIOR_N |
| 4 | RIDE_DD <15..0> 8 | 26 | Ground |
| 5 | RIDE_DD <15..0> 6 | 27 | RIDE_DIORDY |
| 6 | RIDE_DD <15..0> 9 | 28 | IDE_ALE_H |
| 7 | RIDE_DD <15..0> 5 | 29 | RIDE_DDACK_N |
| 8 | RIDE_DD <15..0> 10 | 30 | Ground |
| 9 | RIDE_DD <15..0> 4 | 31 | IRQ_IDE |
| 10 | RIDE_DD <15..0> 11 | 32 | TP_PIDE_32 |
| 11 | RIDE_DD <15..0> 3 | 33 | RIDE_DA1 |
| 12 | RIDE_DD <15..0> 12 | 34 | IDE_PRI_CBLSNS |
| 13 | RIDE_DD <15..0> 2 | 35 | RIDE_DA0 |
| 14 | RIDE_DD <15..0> 13 | 36 | RIDE_DA2 |
| 15 | RIDE_DD <15..0> 1 | 37 | RIDE_DCS1_N |
| 16 | RIDE_DD <15..0> 14 | 38 | RIDE_DCS3_N |
| 17 | RIDE_DD <15..0> 0 | 39 | LED_IDE_L |
| 18 | RIDE_DD <15..0> 15 | 40 | Ground |
| 19 | Ground | 41 | Not Used |
| 20 | Not Used | 42 | Not Used |
| 21 | RIDE_DDREQ | 43 | Not Used |
| 22 | Ground | 44 | Not Used |

Table 31. Optical Drive Slot Connector (J1A1)

| Pin # | Signal Name | | Pin # | Signal Name |
|-------|------------------|---------------|-------|-------------------|
| A1 | RST_IDE_L | PRSNT1_N | B1 | RIDE_DD<15..0> 8 |
| A2 | Ground | 12V | B2 | Ground |
| A3 | RIDE_DD<15..0> 7 | 12V | B3 | RIDE_DD<15..0> 9 |
| A4 | Ground | RSVD | B4 | Ground |
| A5 | RIDE_DD<15..0> 6 | GND | B5 | RIDE_DD<15..0> 10 |
| A6 | Ground | JTAG2 | B6 | Ground |
| A7 | RIDE_DD<15..0> 5 | SMCLK | B7 | RIDE_DD<15..0> 11 |
| A8 | Ground | JTAG3 | B8 | Ground |
| A9 | RIDE_DD<15..0> 4 | JTAG4 | B9 | RIDE_DD<15..0> 12 |
| A10 | Ground | JTAG5 | B10 | Ground |
| A11 | RIDE_DD<15..0> 3 | 3_3V | B11 | RIDE_DD<15..0> 13 |
| A12 | Ground | 3_3V | B12 | Ground |
| A13 | RIDE_DD<15..0> 2 | JTAG1 | B13 | RIDE_DD<15..0> 14 |
| A14 | Ground | 3_3VAUX | B14 | Ground |
| A15 | RIDE_DD<15..0> 1 | PERST_N | B15 | RIDE_DD<15..0> 15 |
| A16 | Ground | -----KEY----- | B16 | Ground |
| A17 | RIDE_DD<15..0> 0 | GND | B17 | RIDE_DDREQ |
| A18 | Ground | REFCLK+ | B18 | Ground |
| A19 | RIDE_DIOW_N | GND | B19 | RIDE_DIOR_N |
| A20 | Ground | REFCLK- | B20 | Ground |
| A21 | RIDE_DIORDY | GND | B21 | RIDE_DDACK_N |
| A22 | Ground | PETP0 | B22 | TP_PIDE 32 |
| A23 | IRQ_IDE | PETN0 | B23 | IDE_PRI_CBLSNS |
| A24 | Ground | GND | B24 | Ground |
| A25 | RIDE_DA1 | PERP0 | B25 | RIDE_DA2 |
| A26 | Ground | GND | B26 | Ground |
| A27 | RIDE_DA0 | PERN0 | B27 | RIDE_DCS3_N |
| A28 | Ground | PRSNT2_N | B28 | P5V |
| A29 | RIDE_DCS1_N | GND | B29 | P5V |
| A30 | P5V | RSVD | B30 | P5V |
| A31 | P5V | PETP1 | B31 | IDE_ALE_S_H |
| A32 | LED_IDE_L | PETN1 | B32 | Ground |
| | | GND | | |
| | | PETP2 | | |
| | | PETN2 | | |
| | | GND | | |
| | | PERP2 | | |
| | | PERN2 | | |
| | | GND | | |
| | | PETP3 | | |
| | | PETN3 | | |
| | | GND | | |
| | | PERP3 | | |
| | | PERN3 | | |
| | | RSVD | | |
| | | PRSNT2_N | | |
| | | GND | | |
| | | RSVD | | |

Table 32. IDE Device Master/Slave Configuration Jumper (J6L1)

| Jumper Setting | Configuration |
|----------------|---------------|
| 1-2 | IDE Master |
| 2-3 | IDE Slave |

Table 33. I2C Connector (J6L3)

| Pin # | Signal Description |
|-------|--------------------|
| 1 | SMB_VSC_12C_DAT0 |
| 2 | GROUND |
| 3 | SMB_VSC_12C_CLK0 |
| 4 | Not Used |

Table 34. PCIe X4 Slot Connector from Mid-plane (J4N1)

| Pin # | Signal Name | Pin # | Signal Name |
|-------|----------------------|-------|---------------------|
| A1 | SGPIO_DATA0 | B1 | SGPIO_CLOCK |
| A2 | SGPIO_DATA1 | B2 | Ground |
| A3 | Ground | B3 | SAS6_RX_DN |
| A4 | Ground | B4 | SAS6_RX_DP |
| A5 | SAS7_RX_DN | B5 | Ground |
| A6 | SAS7_RX_DP | B6 | Ground |
| A7 | Ground | B7 | SAS6_TX_DN |
| A8 | Ground | B8 | SAS6_TX_DP |
| A9 | SAS7_TX_DP | B9 | Ground |
| A10 | SAS7_TX_DN | B10 | Ground |
| A11 | Ground | B11 | SGPIO_LOAD |
| A12 | SMB_PB1_5VSB_DAT | B12 | SMB_IPMB_5VSB_DAT |
| A13 | SMB_PB1_5VSB_CLK | B13 | SMB_IPMB_5VSB_CLK |
| A14 | USB_OC1_N | B14 | Ground |
| A15 | Ground | B15 | USB_P2P |
| A16 | Ground | B16 | USB_P2N |
| A17 | USB_P1P | B17 | Ground |
| A18 | USB_P1N | B18 | Ground |
| A19 | Ground | B19 | USB_OC2_N |
| A20 | LED_NIC1_ACT_L | B20 | LED_HDD_ACT_R_L |
| A21 | LED_NIC1_LINK_R_L | B21 | PV_HDD_LED_3V_A |
| A22 | FP_THERM_SENSOR | B22 | FP_ID_SW_L |
| A23 | LED_NIC2_LINK_R_L | B23 | RST_FP_BTN_L |
| A24 | LED_NIC2_ACT_L | B24 | FP_PWR_BTN_L |
| A25 | Ground | B25 | FP_NMI_BTN_L |
| A26 | V_IO_BLUE_CONN_FP | B26 | FP_PWR_LED_5VSB |
| A27 | V_IO_GREEN_CONN_FP | B27 | LED_FP_PWR_R_L |
| A28 | V_IO_RED_CONN_FP | B28 | LED_FP_ID_R_L |
| A29 | Ground | B29 | Ground |
| A30 | V_IO_HSYNC_BUFF_FP_L | B30 | LED_FP_SYS_FLT1_R_L |
| A31 | V_IO_VSYNC_BUFF_FP_L | B31 | LED_FP_SYS_FLT2_R_L |
| A32 | Ground | B32 | FP_FLT_LED_5VSB |

Table 35. PCIe X4 Slot Connector from Mid-plane (J6N1)

| Pin # | Signal Name | Pin # | Signal Name |
|-------|--------------|-------|-----------------|
| A1 | RST_PWRGD_PS | B1 | Ground |
| A2 | Ground | B2 | SAS0_RX_DN |
| A3 | Ground | B3 | SAS0_RX_DP |
| A4 | SAS1_RX_DN | B4 | Ground |
| A5 | SAS1_RX_DP | B5 | Ground |
| A6 | Ground | B6 | SAS0_TX_DN |
| A7 | Ground | B7 | SAS0_TX_DP |
| A8 | SAS1_TX_DP | B8 | Ground |
| A9 | SAS1_TX_DN | B9 | Ground |
| A10 | Ground | B10 | USB_P3N |
| A11 | Ground | B11 | USB_P3P |
| A12 | USB_OC3_N | B12 | Ground |
| A13 | Ground | B13 | SAS2_RX_DN |
| A14 | Ground | B14 | SAS2_RX_DP |
| A15 | SAS3_RX_DN | B15 | Ground |
| A16 | SAS3_RX_DP | B16 | Not Used |
| A17 | Ground | B17 | SMB_SAS_3V3_SDA |
| A18 | Ground | B18 | Not Used |
| A19 | Ground | B19 | SMB_SAS_3V3_SCL |
| A20 | SAS3_TX_DP | B20 | Not Used |
| A21 | SAS3_RT_DN | B21 | Ground |
| A22 | Ground | B22 | SAS2_TX_DP |
| A23 | Ground | B23 | SAS2_TX_DN |
| A24 | SAS5_RX_DN | B24 | Ground |
| A25 | SAS5_RX_DP | B25 | Ground |
| A26 | Ground | B26 | SAS4_RX_DN |
| A27 | Ground | B27 | SAS4_RX_DP |
| A28 | SAS5_TX_DP | B28 | Ground |
| A29 | SAS5_TX_DN | B29 | Ground |
| A30 | Ground | B30 | SAS4_TX_DP |
| A31 | Ground | B31 | SAS4_TX_DN |
| A32 | P5V_STBY | B32 | Ground |

Table 36. USB Connector (J2A1)

| Pin # | Signal Description |
|-------|--------------------|
| 1 | P5V_USB_FP_P3 |
| 2 | USB_P3N |
| 3 | USB_P3P |
| 4 | Ground |

Table 37. Intel Local Control Panel (LCP) Connector (J9A1)

| Pin # | Signal Description |
|-------|--------------------|
| 1 | SMB_IPMB_5VSB_DAT |
| 2 | Ground |
| 3 | SMB_IPMB_5VSB_CLK |
| 4 | P5V_STBY_R |

Table 38. Control Panel Slot Connector (J9B1)


| Pin # | Signal Name | | Pin # | Signal Name | |
|-------|----------------------|-----------------|----------|-------------|---------------------|
| A1 | Ground | PRSNT1_N | 12V | B1 | FP_THERM_SENSOR |
| A2 | V_IO_VSYNC_BUFF_FP_L | 12V | 12V | B2 | P5V |
| A3 | Ground | 12V | RSVD | B3 | P5V |
| A4 | V_IO_HSYNC_BUFF_FP_L | GND | GND | B4 | P5V |
| A5 | Ground | JTAG2 | SMCLK | B5 | V_VIDEO_IN_USE |
| A6 | V_IO_BLUE_BUFF_FP_L | JTAG3 | SMDAT | B6 | Ground |
| A7 | Ground | JTAG4 | GND | B7 | P5V_STBY |
| A8 | V_IO_GREEN_BUFF_FP_L | JTAG5 | 3_3V | B8 | Ground |
| A9 | Ground | 3_3V | JTAG1 | B9 | FP_FLT_LED_5VSB |
| A10 | V_IO_RED_BUFF_FP_L | 3_3V | 3_3VAUX | B10 | Ground |
| A11 | Ground | PERST_N | WAKE_N | B11 | LED_FP_SYS_FLT1_R_L |
| A12 | Ground | ----- KEY ----- | | B12 | FP_ID_SW_L |
| A13 | RST_FP_BTN_L | GND | RSVD | B13 | LED_FP_ID_R_L |
| A14 | Ground | REFCLK + | GND | B14 | SMB_IPMB_5VSB_DAT |
| A15 | FP_CHASSIS_INTRU | REFCLK - | PETP0 | B15 | SMB_IPMB_5VSB_CLK |
| A16 | Ground | GND | PETN0 | B16 | Ground |
| A17 | SMB_PB1_5VSB_DAT | PERP0 | GND | B17 | LED_NIC1_ACT_L |
| A18 | SMB_PB1_5VSB_CLK | PERN0 | PRSNT2_N | B18 | LED_NIC1_LINK_R_L |
| A19 | Ground | GND | GND | B19 | FP_PWR_BTN_L |
| A20 | FP_NMI_BTN_L | RSVD | PETP1 | B20 | FP_PWR_LED_5VSB |
| A21 | Ground | GND | PETN1 | B21 | PV_HDD_LED_3V_A |
| A22 | USB_P1P | PERP1 | GND | B22 | Ground |
| A23 | USB_P1N | PERN1 | GND | B23 | Ground |
| A24 | Ground | GND | PETP2 | B24 | LED_NIC2_ACT_L |
| A25 | Ground | PERP2 | GND | B25 | LED_NIC2_LINK_R_L |
| A26 | P5V_USB_P1 | PERN2 | GND | B26 | LED_HDD_FLT_R_L |
| A27 | P5V_USB_P2 | GND | PETP3 | B27 | LED_HDD_ACT_RR_L |
| A28 | Ground | GND | PETN3 | B28 | LED_FP_PWR_R_L |
| A29 | Ground | PERP3 | GND | B29 | LED_FP_SYS_FLT2_R_L |
| A30 | USB_P2P | PERN3 | RSVD | B30 | Ground |
| A31 | USB_P2N | GND | PRSNT2_N | B31 | Ground |
| A32 | Ground | RSVD | GND | B32 | RST_PWRGD_PS |

Table 39. SAS/SATA Hard Drive Connector Pin-outs (J2C3, J2B1, J4C1, J4B1, J7C1)

| Pin# | Signal Description |
|------|----------------------------|
| S1 | Ground |
| S2 | SAS#_TX_DP (# = 0...4) |
| S3 | SAS#_TX_DN (# = 0...4) |
| S4 | Ground |
| S5 | SAS#_RX_DN (# = 0...4) |
| S6 | SAS#_RX_DP (# = 0...4) |
| S7 | Ground |
| S8 | Not Used |
| S9 | Not Used |
| S10 | Not Used |
| S11 | Not Used |
| S12 | Not Used |
| S13 | Not Used |
| S14 | Not Used |
| P1 | Not Used |
| P2 | Not Used |
| P3 | Not Used |
| P4 | Ground |
| P5 | Ground |
| P6 | P3V3 |
| P7 | P5V |
| P8 | P5V |
| P9 | P5V |
| P10 | Ground |
| P11 | LED_SAS#_ACT_L (# = 0...4) |
| P12 | Ground |
| P13 | P12V |
| P14 | P12V |
| P15 | P12V |
| PTH0 | Ground |
| PTY1 | Ground |

5. Peripheral and Hard Drive Sub-System

The chassis can be configured to support several different hard drive and peripheral configurations. The peripheral/hard drive sub-system consists of a drive bay, supporting a slimline optical drive, hard drives, and flex bay; a mid-plane; and hot-swap backplane. This chapter describes the details for each sub-system component.

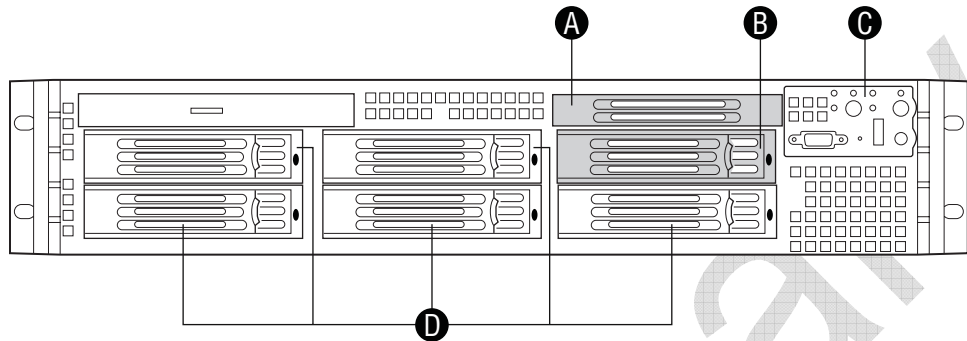


TP02108

- A. Slimline IDE Optical Drive Bay
- B. Optional 6th HDD Drive or Tape Drive Bay
- C. System Control Panel
- D. 3.5" Hard Drive Bays x5

Figure 27. Optional 6th Hard Drive (Front View)

5.1 Slimline Optical Drive Bay

The chassis provides a slimline drive bay that is designed to support a single slimline optical drive. The drive is mounted to a tool-less tray which allows for easy installation into and removal from the chassis. Once inserted into the chassis, the assembly locks into place. For removal, the chassis top cover must be removed and the locking latch disengaged.

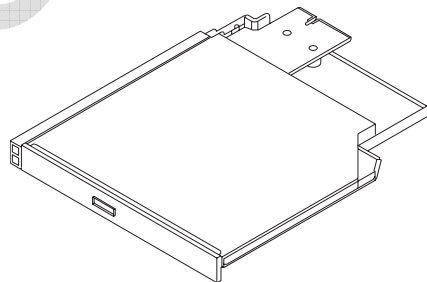

AF000043

Figure 28. Slim-Line Optical Drive Assembly

The drive assembly includes an interposer board which plugs into the back of the optical drive. The interposer board is a card-edge type card that eliminates the need for cable connections. As the drive assembly is inserted into the drive bay, the edge connector is blind mated to a slot connector on the backplane.

The interposer board has two connectors. The first connector is the industry standard 50 pin IDE interface used by all slim-line optical devices. The second connector is the card edge used to connect directly to the hot-swap backplane board.

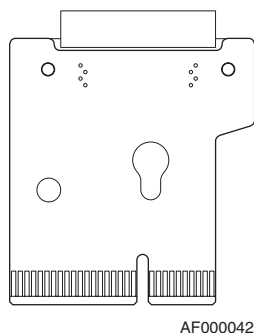


Figure 29. 50-pin Connector to Slimline Optical Device

Table 40. J1L1 50-pin Connector to Slimline Optical Device

| PIN | SIGNAL NAME | PIN | SIGNAL NAME |
|-----|-------------|-----|------------------|
| 1 | TP_LCH | 26 | GND |
| 2 | TP_RCH | 27 | IDE_SIORDY |
| 3 | TP_GND | 28 | IDE_SDDACK_L |
| 4 | GND | 29 | IRQ_IDE_S |
| 5 | RST_IDE_S_L | 30 | IDEIO16_L |
| 6 | IDE_SDD8 | 31 | IDE_SDA1 |
| 7 | IDE_SDD7 | 32 | IDE_CBL_DET_S |
| 8 | IDE_SDD9 | 33 | IDE_SDA0 |
| 9 | IDE_SDD6 | 34 | IDE_SDA2 |
| 10 | IDE_SDD10 | 35 | IDE_SDCS0_L |
| 11 | IDE_SDD5 | 36 | IDE_SDCS1_L |
| 12 | IDE_SDD11 | 37 | IDE_SEC_HD_ACT_L |
| 13 | IDE_SDD4 | 38 | P5V |
| 14 | IDE_SDD12 | 39 | P5V |
| 15 | IDE_SDD3 | 40 | P5V |
| 16 | IDE_SDD13 | 41 | P5V |
| 17 | IDE_SDD2 | 42 | P5V |
| 18 | IDE_SDD14 | 43 | GND |
| 19 | IDE_SDD1 | 44 | GND |
| 20 | IDE_SDD15 | 45 | GND |
| 21 | IDE_SDD0 | 46 | GND |
| 22 | IDE_SDDREQ | 47 | IDEP_ALE_H |
| 23 | GND | 48 | GND |
| 24 | IDE_SDIOR_L | 49 | UNUSED |
| 25 | IDE_SDIOW_L | 50 | UNUSED |

5.2 Hard Drive Bays

The chassis can be configured to support up to 6¹ hot-swap 3.5" x1" SAS or SATA hard disk drives. Hard drives are mounted to hot-swap drive trays for easy insertion to or extraction from the drive bay.

5.2.1 Hot-swap Drive Trays

Each hard drive must be mounted to a hot-swap drive tray, making insertion and extraction of the drive from the chassis very simple. Each drive tray has its own dual purpose latching mechanism which is used to both insert/extract drives from the chassis and lock the tray in place. Each drive tray supports a light pipe providing a drive status indicator, located on the backplane, to be viewable from the front of the chassis.

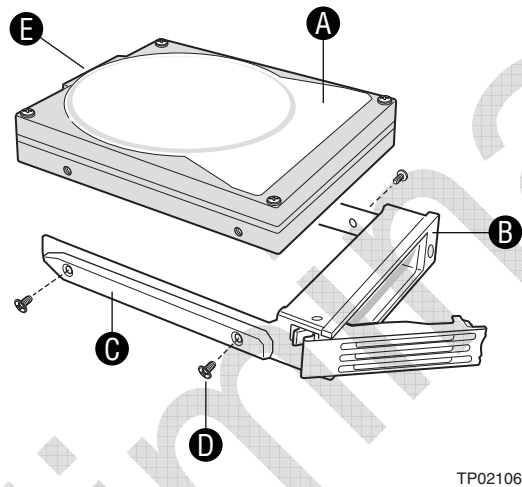


Figure 30. Hard Drive Tray Assembly

- A. Hard Drive
- B. Drive Carrier
- C. Side Rail
- D. Mounting Screw
- E. Hard Drive Connector

¹ Default 5 Hard Drives + one optional 6th Hard Drive using Flex Bay

5.3 Optional Tape Drive or 6th Hard Drive Flex Bay

For system configurations that require either a Tape Drive or a 6th hard disk drive, a dual purpose drive bay is provided. By default this drive bay is covered by two face plates as shown in the following diagram. The drive bay is located next to the control panel.

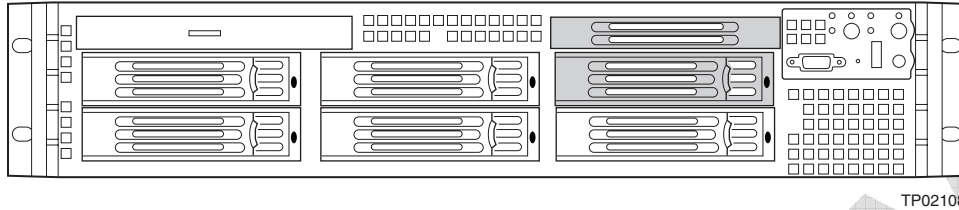


Figure 31. Optional 6th Hard Drive (Front View)

To configure a 6th hard drive, the lower face plate is removed and the appropriate 6th hard drive accessory kit is installed.

To install a 3.5" tape drive, both face plates are removed and the optional tape drive kit is installed.

Note: To remove the tape drive tray from the chassis, a spring latch located inside the chassis on the back right side of the carrier must be released to allow the drive tray to slide free. Do not attempt to pull out the drive tray without first releasing the spring latch. Doing so may damage the plastic faceplate.

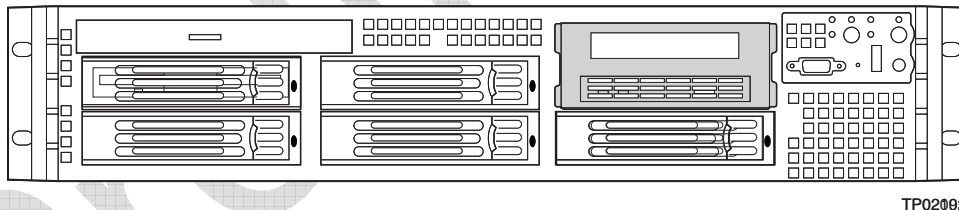


Figure 32. Optional Tape Drive (Front View)


5.4 Mid-plane Options

New to this generation of high density server platform is the concept of the mid-plane. The mid-plane is the interconnect between the server board and both the hot-swap backplane and control panel. It is also used to determine which hard drive technology is to be supported. Two different Mid-plane options are available for this platform 1) a passive mid-plane capable of supporting SATA ports from the server board or SAS using ports from an add-in card; 2) an active SAS / SAS RAID mid-plane. This section will describe the hard drive interface support of each of the mid-plane boards.

5.4.1 Passive Mid-plane

The passive mid-plane is used to connect SATA ports from the server board to the hot-swap backplane. The SATA port signals are directed to the hot-swap backplane through two edge connectors that plug directly into it. See Table 23. Mid-plane-to-Backplane Card Edge Connector #1 Pin-out and Table 24. Mid-plane-to-Backplane Card Edge Connector #2 Pin-out.

NOTE: The passive mid-plane can also be used to attach SATA or SAS ports from an add-in card. However, cables supplied with the chassis are designed to support SATA ports from the server board only. Intel will not make available cables to support add-in cards.

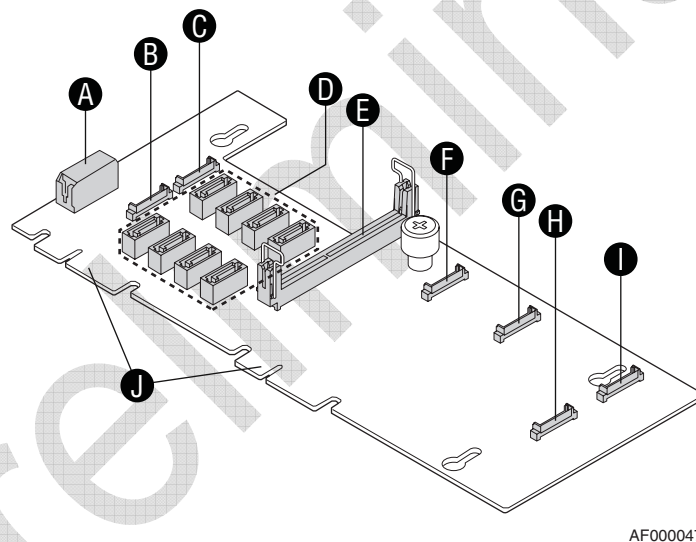


AF000047

Figure 33. Passive Mid-plane Board (Layout Subject to Change)

5.4.2 Active Mid-plane with Intel® SAS /SAS RAID Support

The active mid-plane is used to provide SAS / SAS RAID support. It has integrated on to it an Intel IOP80333 IO processor and an LSI* LSLSAS1068 3Gb/s SAS controller. Together they provide support for up to six SAS drives in this chassis. By default, this mid-plane option provides software RAID support for levels 0,1,and 10. With the addition of an optional RAID key, RAID support changes from software based to hardware based and expands the RAID levels supported to 0,1,5,6,10, and 50. The mid-plane attaches to the hot-swap backplane by two card edge connectors which eliminates the need for any hard drive cables. The following sub-sections describe the board level SAS / SAS RAID functionality.

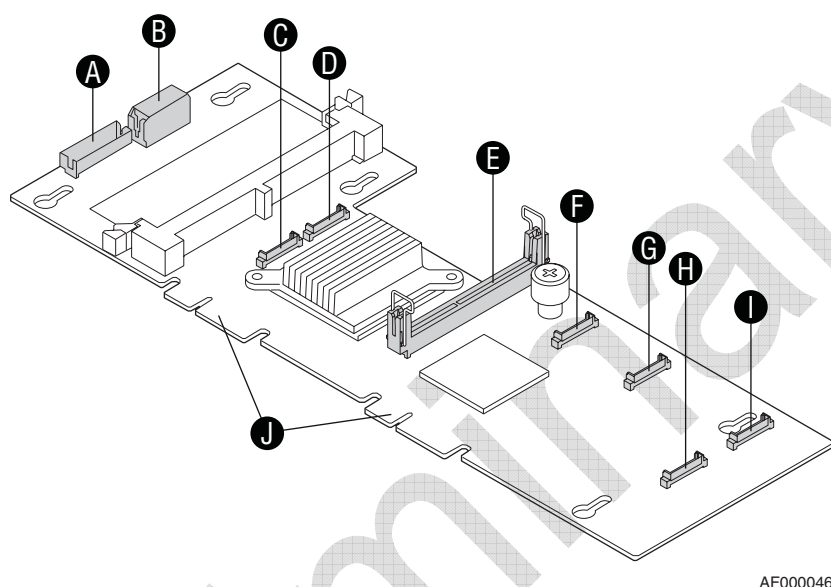

AF000046

Figure 34. Active Mid-plane with SAS / SAS RAID Support **(Layout Subject to Change)**

5.4.2.1 Features

5.4.2.1.1 IOP80333 IO processor

The Intel 80333 IO processor is a multi-function device that integrates the Intel Xscale core with intelligent peripherals and two PCIe* to PCI-X* bridges. The IO processor will be connected to system's x4 PCIe lane and serve as bridge for PCI-X 133MHz secondary bus. The IOP80333 also include fully functioned RAID support.

5.4.2.1.2 LSI* LSI SAS1068 SAS Controller

The LSI LSI SAS1068 controller resides on the Channel A PCI-X bus of the IOP80333 supporting transfer rates of up to 3GB/s. It includes an Address Translation Unit (ATU) supporting transactions between PCI address space and 80333 address space. Address translation for the ATU is controlled through programmable registers accessible from both the PCI interface and the Xscale core. The LSI SAS1068 controller includes its own Flash ROM and NVSRAM to support SAS only software RAID. Software RAID Levels supported include 0, 1, and 10.

5.4.2.1.3 *Optional Hardware RAID Key (I-Button)*

With the additional of an optional hardware RAID key (I-Button), the active mid-plane is capable of expanding its RAID support by enabling the hardware RAID functionality of the Intel IOP80333 and the LSI LSISAS1068 controller. Hardware RAID levels supported include 0, 1, 5, 6, 10, and 50.

5.4.2.1.4 *Optional RAID Controller Cache*

For full hardware RAID support, the active mid-plane provides a mini DIMM slot for Intel RAID caching. The 244-pin mini DIMM socket supports a single registered ECC non-parity DDR2-400 MHz DIMM with capacities ranging from 256MB to 1GB.


5.4.2.1.5 *Optional Battery Backup Unit*

To prevent data loss in the event of AC power loss, the mid-plane provides support for a battery backup unit. Depending on DIMM capacity, the battery backup unit will provide 48 to 72 hours of battery backup power to allow data stored in the RAID cache to be processed. A 2x10 connector (J9A2) is used to attach the battery backup unit to the mid-plane. See Table 25. Active Mid-plane SAS RAID Battery Backup Connector Pin-out for details.

5.4.2.1.6 *X4 PCIe card edge interfaces*

Two X4 PCIe card edges are used to connect the active mid-plane to the hot-swap backplane. See Table 23. Mid-plane-to-Backplane Card Edge Connector #1 Pin-out and Table 24. Mid-plane-to-Backplane Card Edge Connector #2 Pin-out for details. The use of card edge connectors to the back plane eliminates all hard drive cabling.

5.4.2.2 Architectural Overview

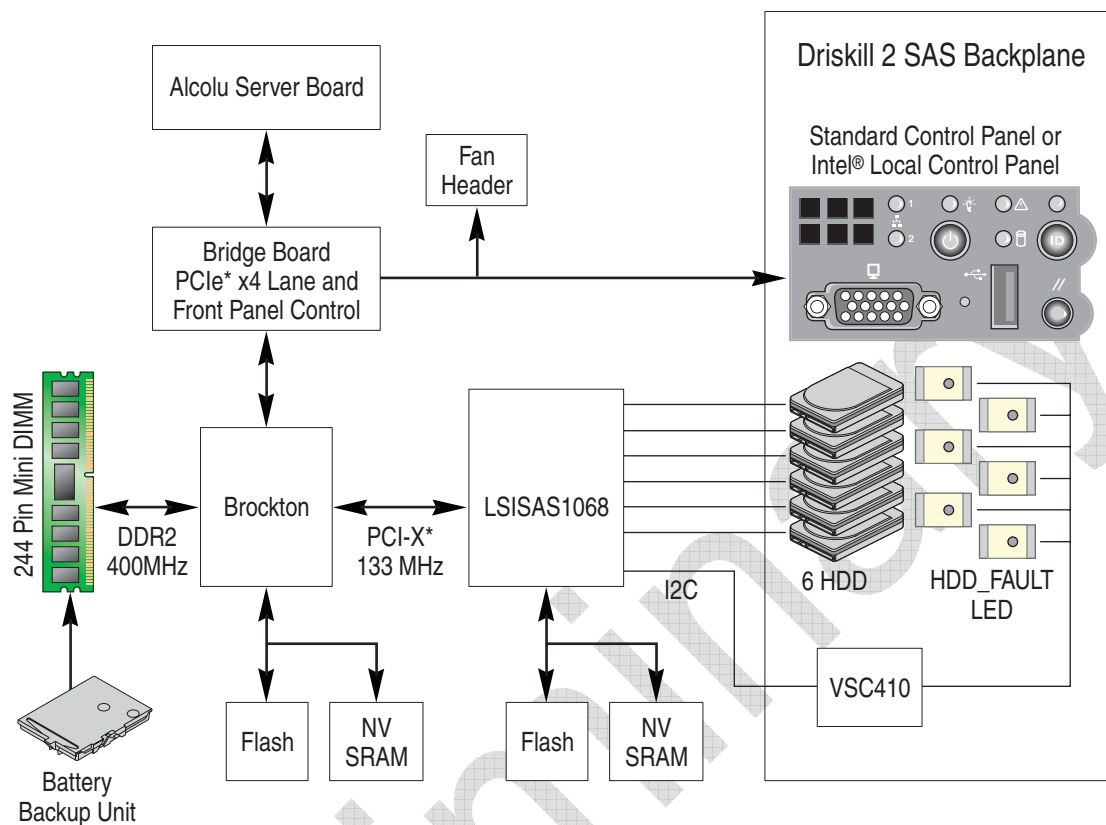

AF000041

Figure 35. Architecture Overview

The LSI LSISAS1068 resides on the PCIX "A" bus of the Intel 80333. This allows 1068 access 80333's local memory through Address Translation Unit which interfaces with 80333 internal bus and PCIX "A" bus. RAID firmware is kept in the 4MB flash connected to the peripheral bus interface (PBI) of 80333. 80333 boots off the flash and downloads a portion of the firmware to 1068. RAID configuration settings are stored in NVRAM also connected to the PBI of 80333. In order to preserve the dirty cache under power failure, an intelligent battery backup unit (BBU) is attached to the mid plane. The BBU contains a Gas Gauge IC which monitors capacity and other critical battery parameters for the rechargeable battery. The Gas Gauge IC communicates data with 80333 using SM bus. The charger circuitry for the battery is on the mid plane. To enable the Full RAID function, the mid plane includes the IBUTTON which is the serial EEPROM that include the validation code. For the SAS only modes the LSISAS1068 controller will have own option ROM and the NVSRAM for the RAID 1 (limited RAID).


5.5 Hot-Swap SAS/SATA Backplane

The chassis supports a multifunctional SAS/SATA backplane with the following features:

- Vitesse* VSC410 enclosure management controller
 - External non-volatile Flash ROM
 - Four I²C interfaces
 - Compliance with SCSI Accessed Fault Tolerant Enclosures (SAF-TE) specification
 - Compliance with Intelligent Platform Management Interface (IPMI)
- Five SAS/SATA compatible hot-swap hard drive connectors
- Designed to support an optional 6th hard drive, or power for a tape drive.
- Hard Drive Status and Fault LEDs for each hard drive connector
- Card edge connectors for most interconnects, including:
 - Mid-plane
 - Control Panel
 - Slim-line IDE Optical Drive
- Temperature Sensor
- FRU EEPROM
- One 2x4-pin Power Connector

5.5.1 SAS/SATA Backplane Layout

The hot-swap backplane installs on the back side of the hot-swap drive bay inside the chassis. Alignment features on the chassis and backplane assembly make for easy tool-less installation. The following diagram shows the layout of components and connectors found on the board.

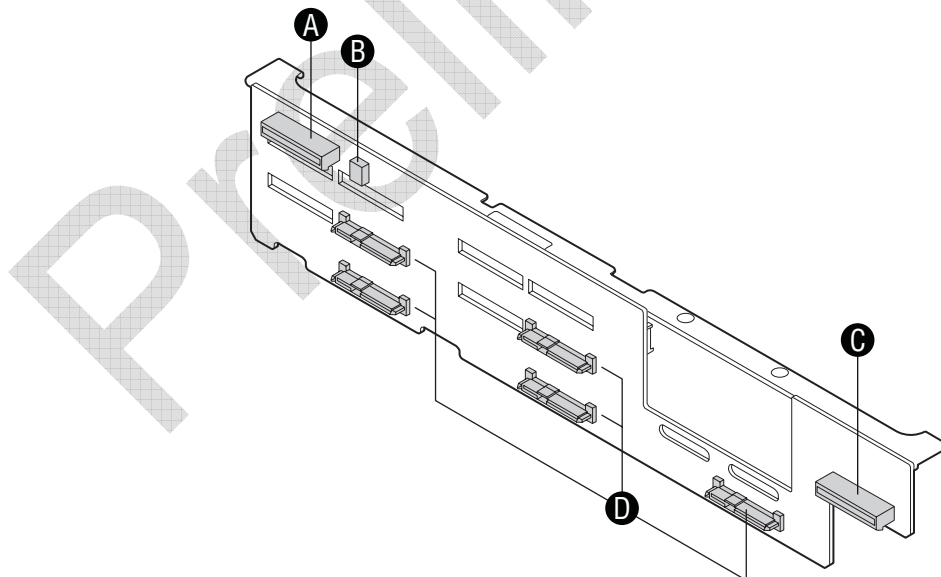

AF000045

Figure 36. Hot-swap SAS/SATA Backplane (Front Side View)

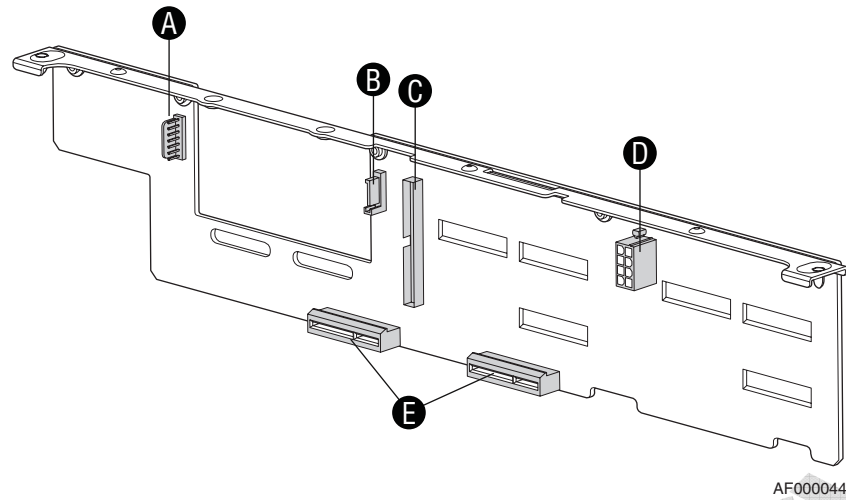



Figure 37. Hot-swap SAS/SATA Backplane (Back Side View)

Notes: To prevent the backplane from flexing when installing or removing hard drives from the drive bay, make sure the mid-plane is securely fastened and the system top cover is in place.

Make sure all system boards, peripherals, and cables are detached from the backplane before removing the backplane from the system. Failure to detach components from the backplane before removal may result in component damage.

5.5.2 SAS/SATA Backplane Functional Architecture

The figure below shows the functional blocks of the SAS/SATA backplane.

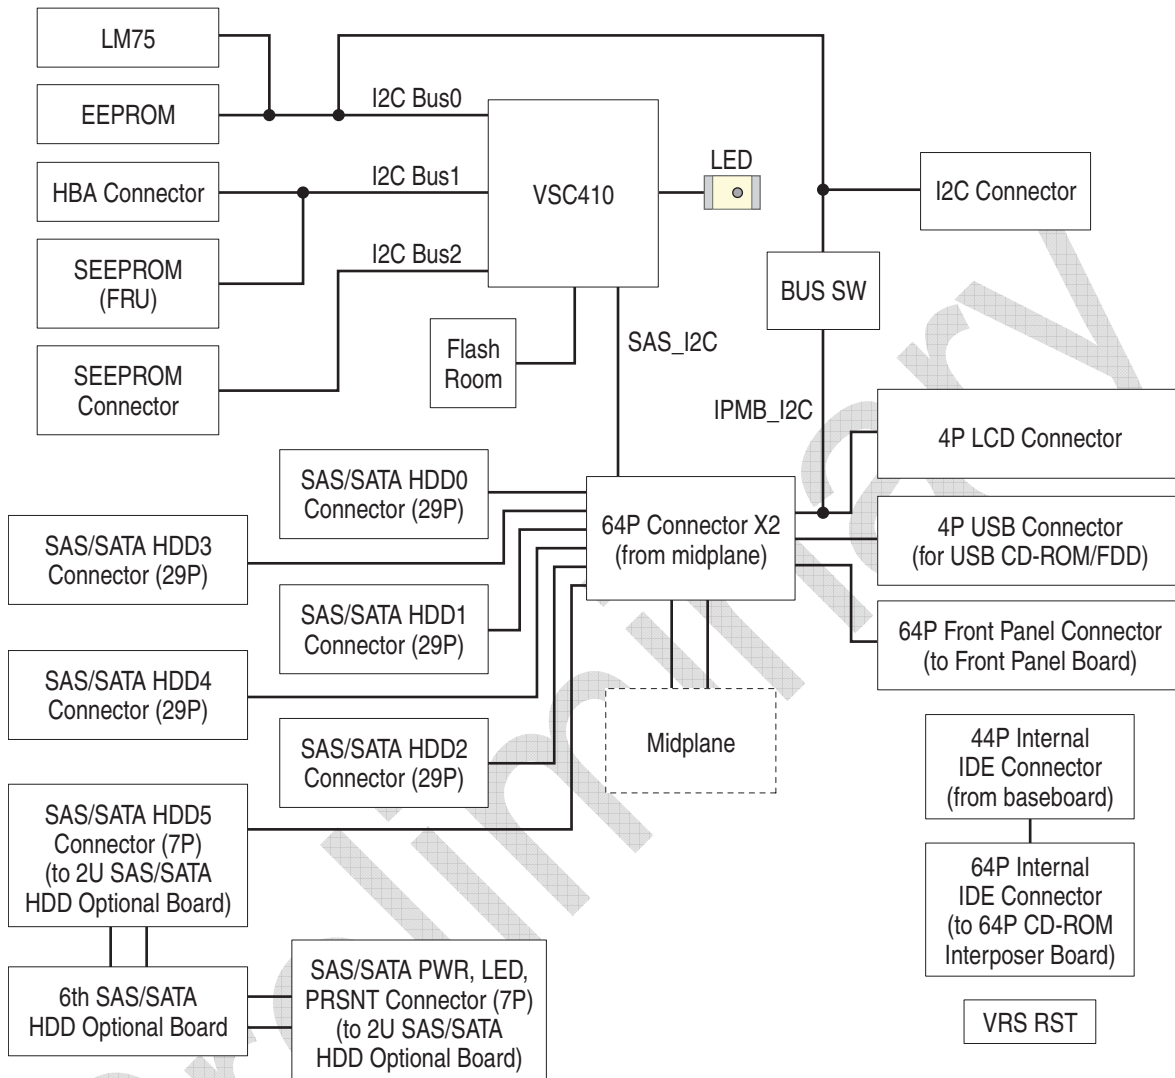

AF000040

Figure 38. SAS/SATA Backplane Functional Block Diagram

5.5.2.1 Enclosure Management Controller

The backplane utilizes the features of the Vitesse* VSC410 to implement several enclosure management functions. The chip provides in-band SAF-TE and SES management and utilizes the four I²C interfaces listed below.

1. I2C bus 0 is connected to an EEPROM which stores configuration and FRU data
2. I2C bus 1 is connected to an LM75 temperature sensor
3. I2C bus 2 is connected to an IPMB bus from the server board.
4. I2C bus 3 is connected to the LSISAS1068 SAS controller.

5.5.2.2 Hard Drive Activity and Fault LEDs

The backplane provides a green ACTIVITY LED and an amber FAULT LED for each of the five drive connectors. The ACTIVITY LED is driven by the VSC410 or, for drives that support the feature, by the hard drive itself, whenever the drive gets accessed. The FAULT LED is driven by the VSC410 controller whenever an error condition is detected.

Table 41. Hard Drive LED Function Definitions

| STATUS LED | DEFINITION |
|----------------|---------------------|
| GREEN ON | HDD Activity |
| AMBER ON | HDD Fault |
| AMBER Blinking | Rebuild in Progress |


5.5.2.3 Optional 6th Hard Drive

The backplane is capable of supporting a 6th hot-swap SAS/SATA hard drive with the addition of an optionally installed backplane add-in board. The 6th drive add-in board assembly consists of a PCB with power and interface connectors, and a mounting bracket allowing for the add-in card to slide into a fitted cut out on the existing backplane.

6. Standard Control Panel

The standard control panel supports several push buttons and status LEDs, along with USB and video ports to centralize system control, monitoring, and accessibility to within a common compact design.

The control panel assembly comes pre-assembled and is modular in design. The control panel assembly module slides into a slot on the front of the chassis and is blind mated with a slot connector on the backplane.

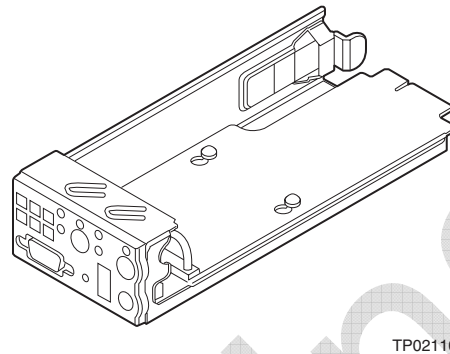


TP02110

Figure 39. Standard Control Panel Assembly Module

6.1 Control Panel Buttons

The standard control panel assembly houses several system control buttons. Each of their functions is listed in the table below.

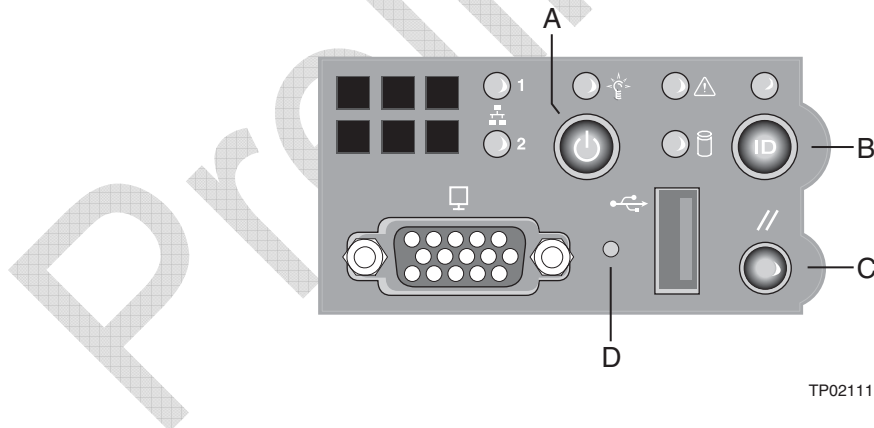

TP02111


Figure 40. Control Panel Buttons

Table 42. Control Button and Intrusion Switch Functions

| Reference | Feature | Function |
|-----------|----------------------|--|
| A | Power / Sleep Button | Toggles the system power on/off. This button also functions as a Sleep Button if enabled by an ACPI-compliant operating system. |
| B | ID Button | Toggles the front panel ID LED and the server board ID LED on/off. The server board ID LED is visible through the rear of the chassis and allows you to locate the server you're working on from behind a rack of servers. |
| C | Reset Button | Reboots and initializes the system. |
| D | NMI Button | Pressing the recessed button with a paper clip or pin puts the server in a halt state for diagnostic purposes and allows you to issue a non-maskable interrupt. After issuing the interrupt, a memory download can be performed to determine the cause of the problem. |

6.2 Control Panel LED Indicators

The control panel houses six LEDs, which are viewable with or without the front bezel to display the system's operating state.

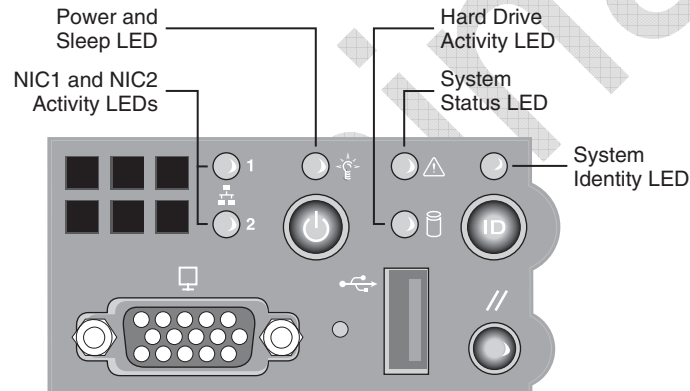

TP02112

Figure 41. Control Panel LEDs

The following table identifies each LED and describes their functionality.

Table 43. Control Panel LED Functions

| LED | Color | State | Description |
|----------------------------------|-------|----------------------|--|
| NIC1 / NIC2 Activity | Green | On | NIC Link |
| | Green | Blink | NIC Activity |
| Power / Sleep (on standby power) | Green | On | Legacy power on / ACPI S0 state |
| | | Blink ^{1,4} | Sleep / ACPI S1 state |
| | Off | Off | Power Off / ACPI S4 or S5 state |
| System Status (on standby power) | Green | On | Running / normal operation |
| | | Blink ^{1,2} | Degraded |
| | Amber | On | Critical or non-recoverable condition. |
| | | Blink ^{1,2} | Non-critical condition. |
| Off | Off | POST / system stop. | |
| Disk Activity | Green | Random blink | Provides an indicator for disk activity. |
| | Off | Off ³ | No hard disk activity |
| System Identification | Blue | Blink | Identify active via command or button. |
| | Off | Off | No Identification. |

Notes:

1. Blink rate is ~1 Hz with at 50% duty cycle.
2. The amber status takes precedence over the green status. When the amber LED is on or blinking, the green LED is off.
3. Also off when the system is powered off (S4/S5) or in a sleep state (S1).
4. The power LED sleep indication is maintained on standby by the chipset. If the system is powered down without going through BIOS, the LED state in effect at the time of power off will be restored when the system is powered on until the BIOS clears it. If the system is not powered down normally, it is possible that the Power LED will be blinking at the same time that the system status LED is off due to a failure or configuration change that prevents the BIOS from running.

The current limiting resistors for the power LED, the system fault LED, and the NIC LEDs are located on the server board.

6.2.1 Power / Sleep LED

Table 44. SSI Power LED Operation

| State | Power Mode | LED | Description |
|-----------|------------|--------------|--|
| Power Off | Non-ACPI | Off | System power is off, and the BIOS has not initialized the chipset. |
| Power On | Non-ACPI | On | System power is on, but the BIOS has not yet initialized the chipset. |
| S5 | ACPI | Off | Mechanical is off, and the operating system has not saved any context to the hard disk. |
| S4 | ACPI | Off | Mechanical is off. The operating system has saved context to the hard disk. |
| S3-S1 | ACPI | Slow blink 1 | DC power is still on. The operating system has saved context and gone into a level of low-power state. |
| S0 | ACPI | Steady on | System and the operating system are up and running. |

Notes:

1. Blink rate is ~ 1Hz with at 50% duty cycle.

6.2.2 System Status LED

6.2.2.1 Critical Conditions

A critical condition is any critical or non-recoverable threshold crossing associated with the following events:

- Temperature, voltage, or fan critical threshold crossing.
- Power subsystem failure. The BMC asserts this failure whenever it detects a power control fault (e.g., the BMC detects that the system power is remaining ON even though the BMC has deserted the signal to turn off power to the system).
- A hot-swap backplane would use the Set Fault Indication command to indicate when one or more of the drive fault status LEDs are asserted on the hot-swap backplane.
- The system is unable to power up due to incorrectly installed processor(s), or processor incompatibility.
- Satellite controller sends a critical or non-recoverable state, via the Set Fault Indication command to the BMC.
- Critical event logging errors, including: System Memory Uncorrectable ECC error, and fatal / uncorrectable bus errors such as PCI SERR and PERR.

6.2.2.2 Non-Critical Conditions

A non-critical condition is threshold crossing associated with the following events:

- Temperature, voltage, or fan non-critical threshold crossing
- Chassis intrusion
- Satellite controller sends a non-critical state, via the Set Fault Indication command, to the BMC.
- Set Fault Indication command from system BIOS. The BIOS may use the Set Fault Indication command to indicate additional 'non-critical' status such as a system memory or CPU configuration changes.

6.2.2.3 Degraded Conditions

A degraded condition is associated with the following events:

- Non-redundant power supply operation. This applies only when the BMC is configured for a redundant power subsystem.
- One or more processors are disabled by Fault Reliant Booting (FRB) or BIOS.
- BIOS has disabled or mapped out some of the system memory.

6.2.3 Drive Activity LED

The drive activity LED on the front panel indicates drive activity from the onboard hard disk controllers. The server board SE7520JR2 also provides a header giving access to this LED for add-in controllers.

6.2.4 System Identification LED

The blue system identification LED is used to help identify a system for servicing. This is especially useful when the system is installed when in a high density rack or cabinet that is populated with several similar systems. The system ID LED will blink when the System ID button on the control panel is pressed or it can be illuminated remotely through server management software.

6.3 Control Panel Connectors

The control panel has two external I/O connectors:

- One USB port
- One VGA video port

The following tables provide the pin-outs for each connector.

Table 45. External USB Connectors (J1B1)

| Pin # | Description |
|-------|--------------|
| 1 | PWR_FP_USB2 |
| 2 | USB_DN2_FP_R |
| 3 | USB_DP2_FP_R |
| 4 | GND |
| 5 | GND |
| 6 | GND |
| 7 | GND |


Table 46. Video Connector (J1A1)

| Description | Pin # | Pin # | Description |
|-------------|-------|-------|-------------|
| VGA_RED | 1 | 9 | GND |
| VGA_GREEN | 2 | 10 | GND |
| VGA_BLUE | 3 | 11 | Unused |
| Unused | 4 | 12 | VGA_DDCDAT |
| GND | 5 | 13 | VGA_HSYNC_L |
| GND | 6 | 14 | VGA_VSYNC_L |
| VGA_INUSE_L | 7 | 15 | VGA_DDCCLK |
| GND | 8 | 16 | GND |
| | | 17 | GND |

If a monitor is connected to the control panel video connector, the rear video port on the server board will be disabled and the control panel video will be enabled. The video source is the same for both connectors and is switched between the two, with the control panel having priority over the rear video. This provides for easy front accessibility to the server.

6.4 Internal Control Panel Interconnect

All control panel signals are directed through a single 64-pin card edge connector eliminating the need for any cables. When installed into the chassis control panel bay, the control panel card edge connector is blind mated with a slot connector on the backplane.

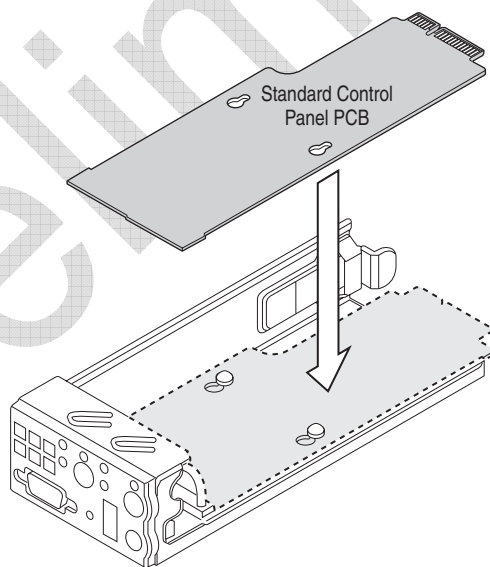

AF000039

Figure 42. Standard Control Panel PCB


The following table defines the pin-out for the 64-pin edge connector.

Table 47. 64-pin Control Panel Connector (J6B1)

| PIN | SIGNAL NAME | PIN | SIGNAL NAME |
|------------|--------------------|------------|---------------------|
| A1 | GND | B1 | 1_WIRE_BUS |
| A2 | VGA_VSYNC_FP_L | B2 | P5V |
| A3 | GND | B3 | P5V |
| A4 | VGA_HSYNC_FP_L | B4 | P5V |
| A5 | GND | B5 | VGA_INUSE_L |
| A6 | VGA_BLUE_FP | B6 | GND |
| A7 | GND | B7 | P5V_STBY |
| A8 | VGA_GREEN_FP | B8 | GND |
| A9 | GND | B9 | FAULT_LED_5VSB |
| A10 | VGA_RED_FP | B10 | GND |
| A11 | GND | B11 | FP_SYS_FLT_LED1_R_L |
| A12 | GND | B12 | FP_ID_SW_L |
| A13 | FP_RST_BTN_L | B13 | FP_ID_LED_R_L |
| A14 | GND | B14 | NC_IPMB_5VSB_SDA |
| A15 | NC_FP_CHASSIS_L | B15 | NC_IPMB_5VSB_SCL |
| A16 | GND | B16 | GND |
| A17 | BP_I2C_5V_SDA | B17 | NIC1_ACT_LED_L |
| A18 | BP_I2C_5V_SCL | B18 | NIC1_LINK_LED_R_L |
| A19 | GND | B19 | FP_PWR_BTN_L |
| A20 | FP_NMI_BTN_L | B20 | PWR_LED_5VSB |
| A21 | GND | B21 | HDD_LED_P3V3_A |
| A22 | USB_DP2_FP | B22 | GND |
| A23 | USB_DN2_FP | B23 | GND |
| A24 | GND | B24 | NIC2_ACT_LED_L |
| A25 | GND | B25 | NIC2_LINK_LED_R_L |
| A26 | PWR_FP_USB2 | B26 | HDD_FAULT_LED_R_L |
| A27 | PWR_FP_USB3 | B27 | HDD_LED_ACT_R_L |
| A28 | GND | B28 | FP_PWR_LED_R_L |
| A29 | GND | B29 | FP_SYS_FLT_LED2_R_L |
| A30 | USB_DP3_FP | B30 | GND |
| A31 | USB_DN3_FP | B31 | GND |
| A32 | GND | B32 | NC_RST_P6_PWRGOOD |

7. Intel® Local Control Panel


The Intel® Local Control Panel utilizes a combination of control buttons, LEDs, and LCD display to provide system accessibility, monitoring, and control functions. The pre-assembled module slides into a slot on the front of the chassis where a card edge connector is blind mated to a matching slot edge connector on the backplane eliminating any cable attachments. The Intel® Local Control Panel module is designed so that it can be adjusted for use with or without an outer front bezel.

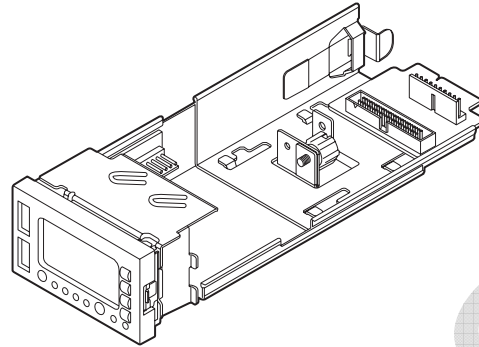

TP02113

Figure 43. Intel® Local Control Panel Assembly Module

The following diagram provides an overview of the control panel features.

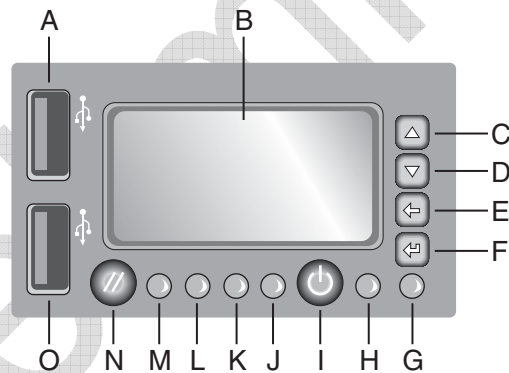

TP02099

Figure 44. Intel® Local Control Panel Overview

| | | | |
|---|---|---|----------------------------|
| A | LCD Display | I | System Status LED |
| B | LCD Menu Control Button – Up | J | NIC 2 Activity LED |
| C | LCD Menu Control Button – Down | K | NIC 1 Activity LED |
| D | LCD Menu Control Button – Previous Option | L | Hard Drive Activity LED |
| E | LCD Menu Control Button – Previous Page | M | System Reset Button |
| F | ID LED | N | USB 2.0 Port |
| G | Power LED | O | NMI Button (Tool Required) |
| H | System Power Button | P | USB 2.0 Port |

7.1 LED Functionality

The following table identifies each LED and describes their functionality.

Table 48. Control Panel LED Functions

| LED | Color | State | Description |
|----------------------------------|-------|----------------------|--|
| NIC1 / NIC2 Activity | Green | On | NIC Link |
| | Green | Blink | NIC Activity |
| Power / Sleep (on standby power) | Green | On | Legacy power on / ACPI S0 state |
| | | Blink ^{1,4} | Sleep / ACPI S1 state |
| | Off | Off | Power Off / ACPI S4 or S5 state |
| System Status (on standby power) | Green | On | Running / normal operation |
| | | Blink ^{1,2} | Degraded |
| | Amber | On | Critical or non-recoverable condition. |
| | | Blink ^{1,2} | Non-critical condition. |
| Off | Off | POST / system stop. | |
| Disk Activity | Green | Random blink | Provides an indicator for disk activity. |
| | Off | Off ³ | No hard disk activity |
| System Identification | Blue | Blink | Identify active via command or button. |
| | Off | Off | No Identification. |

Notes:

1. Blink rate is ~1 Hz with at 50% duty cycle.
2. The amber status takes precedence over the green status. When the amber LED is on or blinking, the green LED is off.
3. Also off when the system is powered off (S4/S5) or in a sleep state (S1).
4. The power LED sleep indication is maintained on standby by the chipset. If the system is powered down without going through BIOS, the LED state in effect at the time of power off will be restored when the system is powered on until the BIOS clears it. If the system is not powered down normally, it is possible that the Power LED will be blinking at the same time that the system status LED is off due to a failure or configuration change that prevents the BIOS from running.

The current limiting resistors for the power LED, the system fault LED, and the NIC LEDs are located on the Intel® Server Board S5000PAL.

7.1.1 Power / Sleep LED

Table 49. SSI Power LED Operation

| State | Power Mode | LED | Description |
|-----------|------------|--------------|--|
| Power Off | Non-ACPI | Off | System power is off, and the BIOS has not initialized the chipset. |
| Power On | Non-ACPI | On | System power is on, but the BIOS has not yet initialized the chipset. |
| S5 | ACPI | Off | Mechanical is off, and the operating system has not saved any context to the hard disk. |
| S4 | ACPI | Off | Mechanical is off. The operating system has saved context to the hard disk. |
| S3-S1 | ACPI | Slow blink 1 | DC power is still on. The operating system has saved context and gone into a level of low-power state. |
| S0 | ACPI | Steady on | System and the operating system are up and running. |

Notes:

1. Blink rate is ~ 1Hz with at 50% duty cycle.

7.1.2 System Status LED

7.1.2.1 Critical Conditions

A critical condition is any critical or non-recoverable threshold crossing associated with the following events:

- Temperature, voltage, or fan critical threshold crossing.
- Power subsystem failure. The BMC asserts this failure whenever it detects a power control fault (e.g., the BMC detects that the system power is remaining ON even though the BMC has deserted the signal to turn off power to the system).
- A hot-swap backplane would use the Set Fault Indication command to indicate when one or more of the drive fault status LEDs are asserted on the hot-swap backplane.
- The system is unable to power up due to incorrectly installed processor(s), or processor incompatibility.
- Satellite controller sends a critical or non-recoverable state, via the Set Fault Indication command to the BMC.
- Critical event logging errors, including: System Memory Uncorrectable ECC error, and fatal / uncorrectable bus errors such as PCI SERR and PERR.

7.1.2.2 Non-Critical Conditions

A non-critical condition is threshold crossing associated with the following events:

- Temperature, voltage, or fan non-critical threshold crossing
- Chassis intrusion
- Satellite controller sends a non-critical state, via the Set Fault Indication command, to the BMC.
- Set Fault Indication command from system BIOS. The BIOS may use the Set Fault Indication command to indicate additional 'non-critical' status such as a system memory or CPU configuration changes.

7.1.2.3 Degraded Conditions

A degraded condition is associated with the following events:

- Non-redundant power supply operation. This applies only when the BMC is configured for a redundant power subsystem.
- One or more processors are disabled by Fault Reliant Booting (FRB) or BIOS.
- BIOS has disabled or mapped out some of the system memory.

7.1.3 Drive Activity LED

The drive activity LED on the front panel indicates drive activity from the onboard hard disk controllers. The Intel® Server Board S5000PAL also provides a header giving access to this LED for add-in controllers.

7.1.4 System Identification LED

The blue system identification LED is used to help identify a system for servicing. This is especially useful when the system is installed when in a high density rack or cabinet that is populated with several similar systems. The system ID LED will blink when the System ID button on the control panel is pressed or it can be illuminated remotely through server management software.

7.2 Intel® Local Control Panel Interconnects

The Intel® Local Control Panel module includes the control panel interface board and an interposer board. Connectors on the control panel interface board are cabled to matching connectors on the interposer board. When the pre-assembled control panel module is installed into the chassis, a card edge connector on the interposer card is blind mated with a slot edge connector on the backplane. This section will define the pin-out for each connector and header found on both the control panel interface board and interposer board.

- A 64-pin card edge connector on the interposer board is used to route signals to/from the backplane to the control panel interface board. The backplane is used as a conduit for communication to the server board.
- Signals from the card edge connector are routed to control panel interface board through matching 50-pin connectors on the interposer board and control panel interface board. The 50-pin connectors are attached using a small 50-pin flat cable.
- USB signals from the card edge connector are routed to the control panel interface board through matching 10-pin connectors on the interposer board and control panel interface board. The 10-pin connectors are attached using a small 10-pin round cable.
- A 4-pin IPMI header (not used).
- A 4-pin NMI/Temp Sensor header.

The following tables provide the pin-outs for each connector.

Table 50. 64-pin Card Edge Connector Pin-out (TBD)

| | |
|--|--|
| | |
| | |
| | |

Table 51. 50-pin Control Panel Connector

| PIN | SIGNAL NAME | PIN | SIGNAL NAME |
|-----|-----------------|-----|---------------------|
| A1 | GND | B1 | 1_WIRE_BUS |
| A2 | VGA_VSYNC_FP_L | B2 | P5V |
| A3 | GND | B3 | P5V |
| A4 | VGA_HSYNC_FP_L | B4 | P5V |
| A5 | GND | B5 | VGA_INUSE_L |
| A6 | VGA_BLUE_FP | B6 | GND |
| A7 | GND | B7 | P5V_STBY |
| A8 | VGA_GREEN_FP | B8 | GND |
| A9 | GND | B9 | FAULT_LED_5VSB |
| A10 | VGA_RED_FP | B10 | GND |
| A11 | GND | B11 | FP_SYS_FLT_LED1_R_L |
| A12 | GND | B12 | FP_ID_SW_L |
| A13 | FP_RST_BTN_L | B13 | FP_ID_LED_R_L |
| A14 | GND | B14 | NC_IPMB_5VSB_SDA |
| A15 | NC_FP_CHASSIS_L | B15 | NC_IPMB_5VSB_SCL |
| A16 | GND | B16 | GND |
| A17 | BP_I2C_5V_SDA | B17 | NIC1_ACT_LED_L |
| A18 | BP_I2C_5V_SCL | B18 | NIC1_LINK_LED_R_L |
| A19 | GND | B19 | FP_PWR_BTN_L |
| A20 | FP_NMI_BTN_L | B20 | PWR_LED_5VSB |
| A21 | GND | B21 | HDD_LED_P3V3_A |
| A22 | USB_DP2_FP | B22 | GND |
| A23 | USB_DN2_FP | B23 | GND |
| A24 | GND | B24 | NIC2_ACT_LED_L |
| A25 | GND | B25 | NIC2_LINK_LED_R_L |
| A26 | PWR_FP_USB2 | B26 | HDD_FAULT_LED_R_L |
| A27 | PWR_FP_USB3 | B27 | HDD_LED_ACT_R_L |
| A28 | GND | B28 | FP_PWR_LED_R_L |
| A29 | GND | B29 | FP_SYS_FLT_LED2_R_L |
| A30 | USB_DP3_FP | B30 | GND |
| A31 | USB_DN3_FP | B31 | GND |
| A32 | GND | B32 | NC_RST_P6_PWRGOOD |

Table 52. Internal USB Header

| Pin # | Description |
|-------|-------------|
| 1 | PWR_FP_USB2 |
| 2 | PWR_FP_USB3 |
| 3 | USB_DP2_FP |
| 4 | USB_DN2_FP |
| 5 | USB_DP3_FP |
| 6 | USB_DN3_FP |
| 7 | GND |
| 8 | GND |
| 9 | TP_USB0_P9 |
| 10 | TP_USB0_P10 |

Table 53. Internal NMI/Temp Sensor Header

| Pin # | Description |
|-------|-------------|
| 1 | TBD |
| 2 | TBD |
| 3 | TBD |
| 4 | TBD |

8. PCI Riser Cards and Assembly

The chassis supports different riser card options depending on the add-in card configuration desired. The riser assembly for the chassis is tool-less. Stand-offs on the bracket allow the riser cards to slide onto the assembly where a latching mechanism then holds each riser in place. Holding down the latch releases the risers for easy removal.

When re-inserting the riser assembly into the chassis, tabs on the back of the assembly should be aligned with slots on the back edge of the chassis. The tabs fit into the slots securing the riser assembly to the chassis when the top cover is in place.

The riser assembly provides two extraction levers to assist with riser assembly removal from the riser slots.

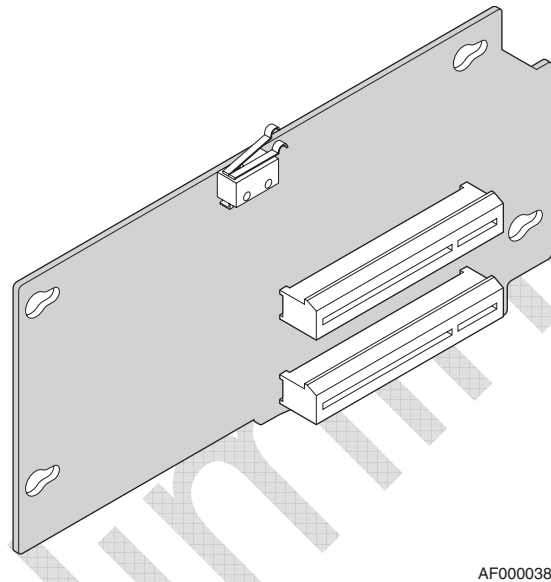


Figure 45. Low Profile PCIe* Riser

8.1 Riser Card Options

The Intel® Server Board S5000PAL has two riser slots capable of supporting riser cards for both 1U and 2U system configurations. Because of board placement resulting in different pin orientations, and expanded technology support associated with the full-height riser, the riser slots are not the same and require different riser cards.

The low profile riser slot (J5B1) utilizes a 98-pin connector. It is capable of supporting up to two low profile PCIe add-in cards. The X8 PCIe bus can support bus speeds of up to 20Gb/S. The following table provides the supported bus throughput for the given riser card used and the number of add-in cards installed.

| Low Profile Riser | 1 add-in card | 2 add-in cards |
|-------------------|---------------|----------------|
| 2U | X8 or X4 | X4 |

Note: There are no population rules for installing a single low profile add-in card in the 2U LP riser card; a single add in card can be installed in either PCIe slot.

The full height riser slot (J4F1) implements Intel® Adaptive Slot Technology. This 280-pin connector is capable of supporting riser cards that meet either the PCI-X* or PCI Express* technology specifications. The following tables show the maximum bus speed supported with different add-in card populations.

| Full Height Riser PCI-X (Passive) | 1 add-in card | 2 add-in cards | 3 add-in cards |
|--------------------------------------|------------------------------|---|----------------|
| 2U | Up to 133MHz in top PCI slot | Up to 100MHz using top and middle slots | 66MHz |

Note: For the 2U PCI-X (passive) riser card, add-in cards can be populated in any order. However, for best performance and signal integrity, add-in cards should be installed starting with the top slot first, followed by the middle, and then the bottom. Any add-in card populated in the bottom PCI slot will cause the bus to operate at 66MHz.

| Full Height Riser PCI-X (Active) | 1 add-in card | 2 add-in cards | 3 add-in cards |
|-------------------------------------|---------------|----------------|----------------|
| 2U | Up to 133MHz | Up to 133MHz | Up to 133MHz |

Note: Each PCI slot on the 2U PCI-X (active) riser card operates on an independent PCI bus. Therefore, using an add-in card that operates below 133MHz will not affect the bus speed of the other PCI slots.

| Full Height Riser PCI Express* | 1 add-in card | 2 add-in cards | 3 add-in cards |
|-----------------------------------|--|--|---|
| 2U | Single PCIe X4 or X8 Or PCI-X – Up to 133MHz | Single PCIe – X4 or X8 and PCI-X – Up to 133MHz Or Dual PCIe – X4 | Dual PCIe – X4 And PCI-X – Up to 133MHz |

8.2 PCI Riser Card Mechanical Drawings


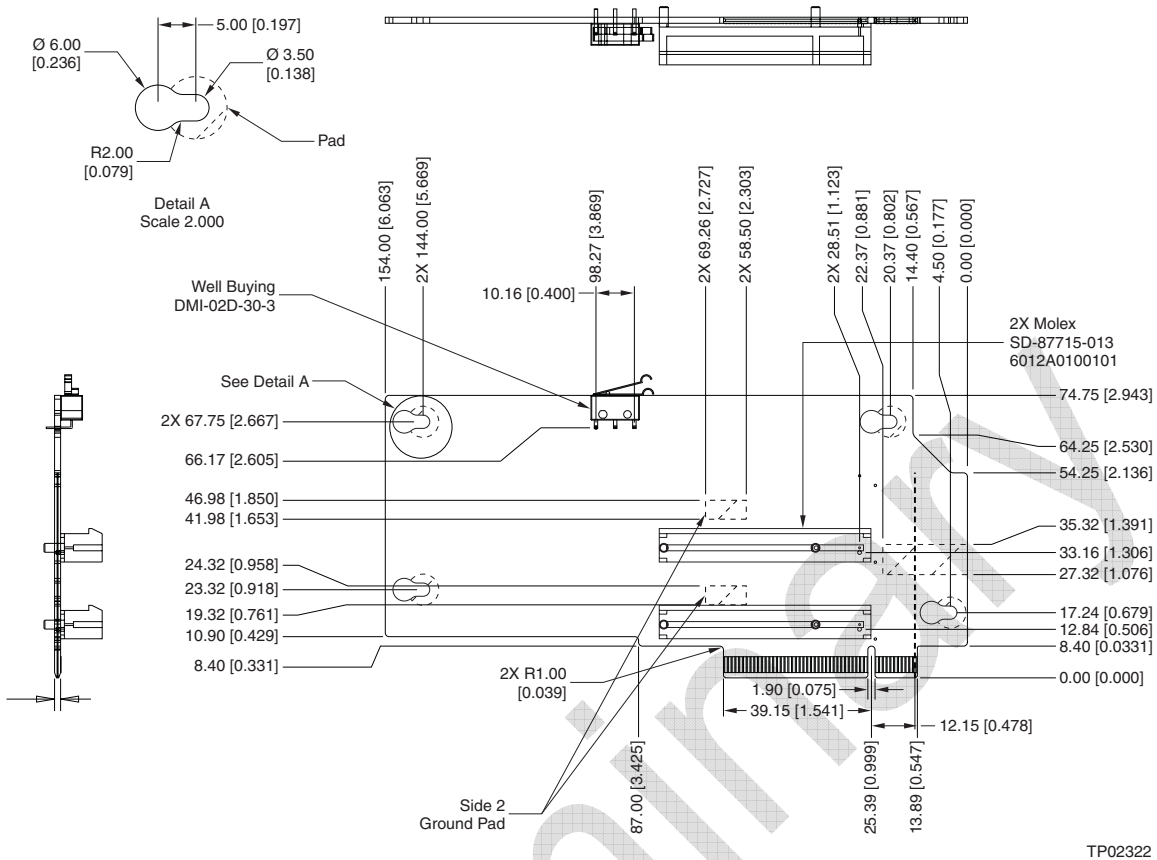


Figure 46. Low Profile Passive PCI Express* Riser Card

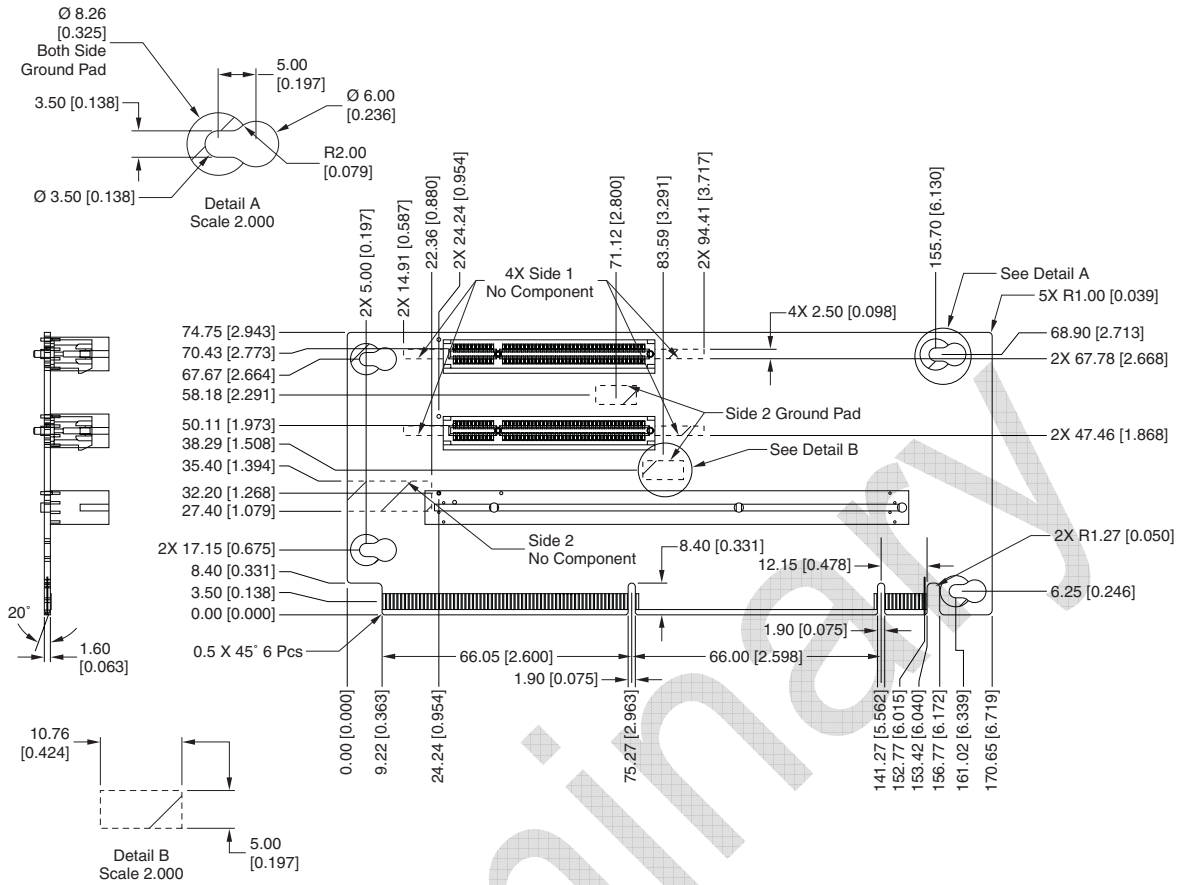


Notes:

1. PCB tolerance:
 - A: 62 mil (1.58 mm) ± 7 mil
 - B: 93 mil (2.36 mm) ± 9 mil
 - C: 98 mil (2.49 mm) ± 9 mil
2. If there is needed:
 - sheet 1: Board profile and mounting hole
 - 2: Pin location
 - 3: Constrain area on both sides
3. No indicated radii should be 2.00 mm

TP02320

Figure 47. Full Height PCI Express* Riser Card

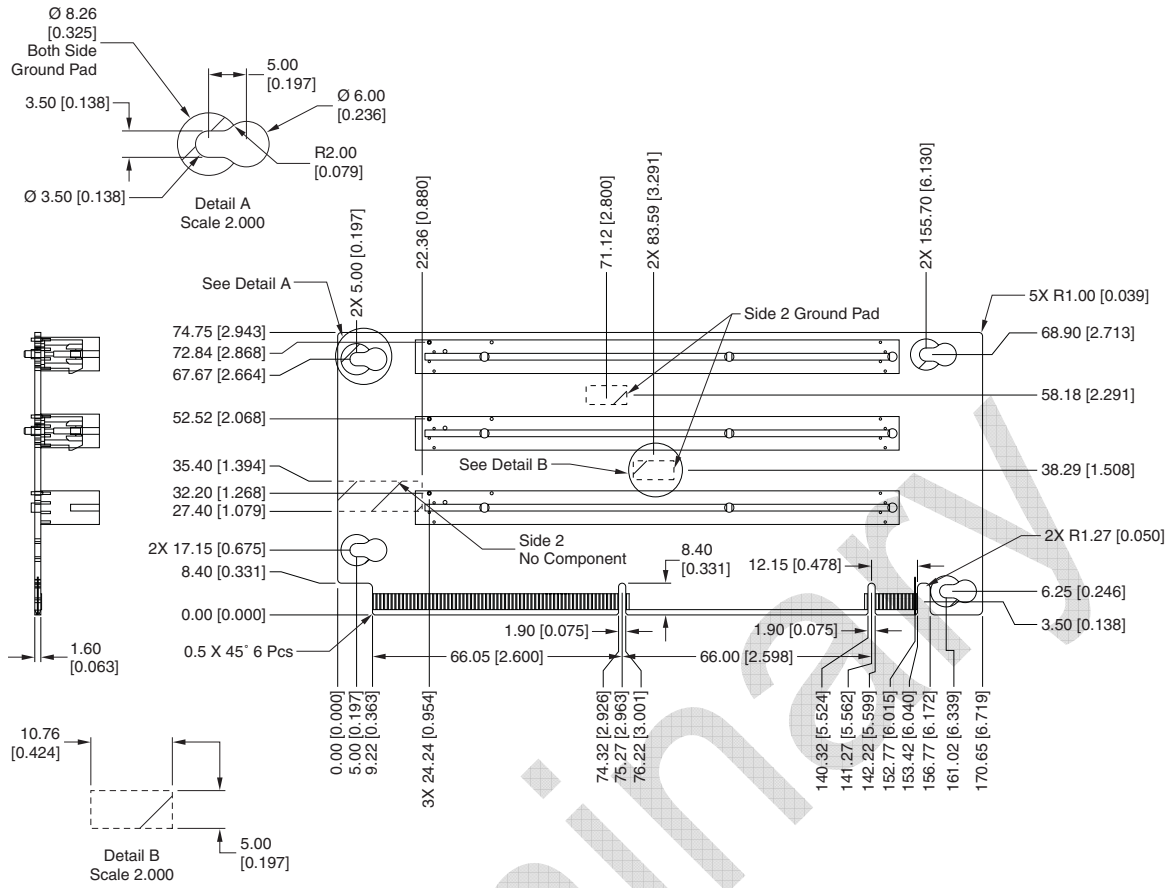

Notes:

1. PCB tolerance:
 - A: 62 mil (1.58 mm) ± 7 mil
 - B: 93 mil (2.36 mm) ± 9 mil
 - C: 98 mil (2.49 mm) ± 9 mil
2. If there is needed:
 - sheet 1: Board profile and mounting hole
 - 2: Pin location
 - 3: Constrain area on both sides
3. No indicated radii should be 2.00 mm

TP02321

Figure 48. Full Height Passive PCI-X* Riser Card

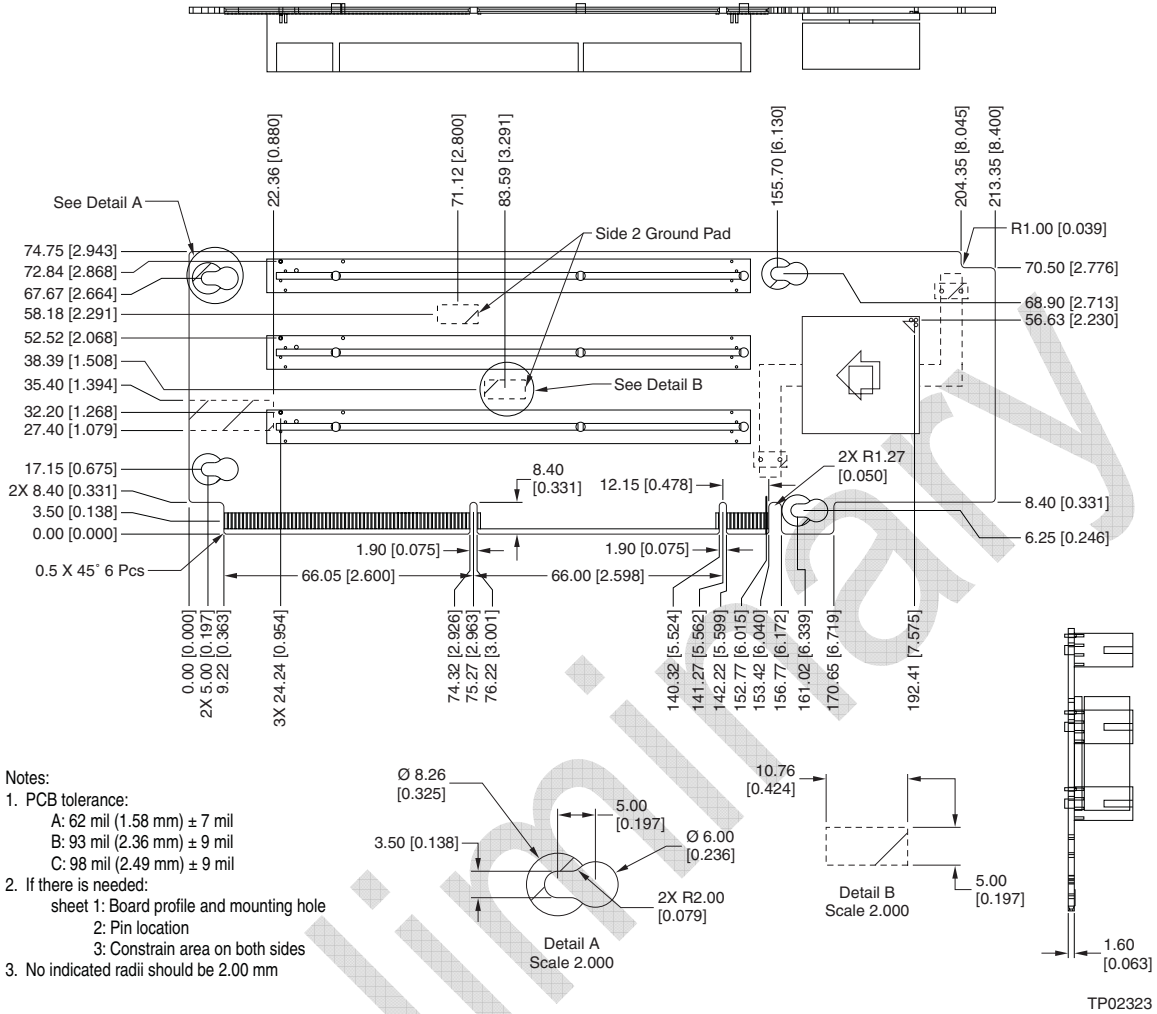


Figure 49. Full Height Active PCI-X* Riser Card

9. Supported Intel® Server Boards

The chassis is mechanically and functionally designed to support the Intel® Server Board S5000PAL. The following sections provide an overview of the server board feature sets. The Technical Product Specification for the server board should be referenced for more detailed information.

9.1 Intel® Server Board S5000PAL

The Intel® Server Board S5000PAL is a monolithic printed circuit board with features that were designed to support the high-density 1U and 2U server markets.


| Feature | Description |
|--|---|
| Processors | 771-pin LGA sockets supporting one or 2 Dual-Core Intel® Xeon® processors 5000 sequence, with system bus speeds of 667 MHz, 1066 MHz, or 1333 MHz. |
| Memory | 8 DIMM slots supporting fully buffered DIMM technology (FBDIMM) memory. 240-pin DDR2-533 and DDR2-677 FBDIMMs can be used. |
| Chipset | Intel® 5000 Chipset Family which includes the following components: Intel® 5000P Memory Controller Hub Intel® ESB2-E I/O Controller Note: Intel will make available an OEM SKU of this server board using the Intel 5000X Memory Controller Hub |
| I/O Control | External connections: Stacked PS/2* ports for keyboard and mouse RJ45 Serial B port Two RJ45 NIC connectors for 10/100/1000 Mb connections Two USB 2.0 ports One USB port header, which supports two USB ports One DH10 Serial A header Six SATA-150 (150MB/s) connectors with integrated RAID 0/1 support One ATA/100 44pin connector for optical drive support. SSI-compliant front panel header SSI-compliant 24-pin main power connector, supporting the ATX-12V standard on the first 20 pins. |
| Add-in PCI, PCI-X*, PCI Express* Cards | One low profile riser slot supporting 1U or 2U PCIe* riser cards One full height riser slot supporting 1U or 2U PCI-X* and PCIe riser cards |
| Video | On-board ATI* ES1000 video controller with 16MB DDR SDRAM |
| Hard Drive | Support for Six SATA-150 |
| LAN | Two 10/100/1000 Intel 82563EB PHYs supporting Intel® I/O Acceleration Technology |
| Fans | Support for two CPU, two I/O and two Memory Fans. |
| System Management | Support for Intel® System Management Software |



TP02107

Figure 50. Intel® Server Board S5000PAL

Preliminary

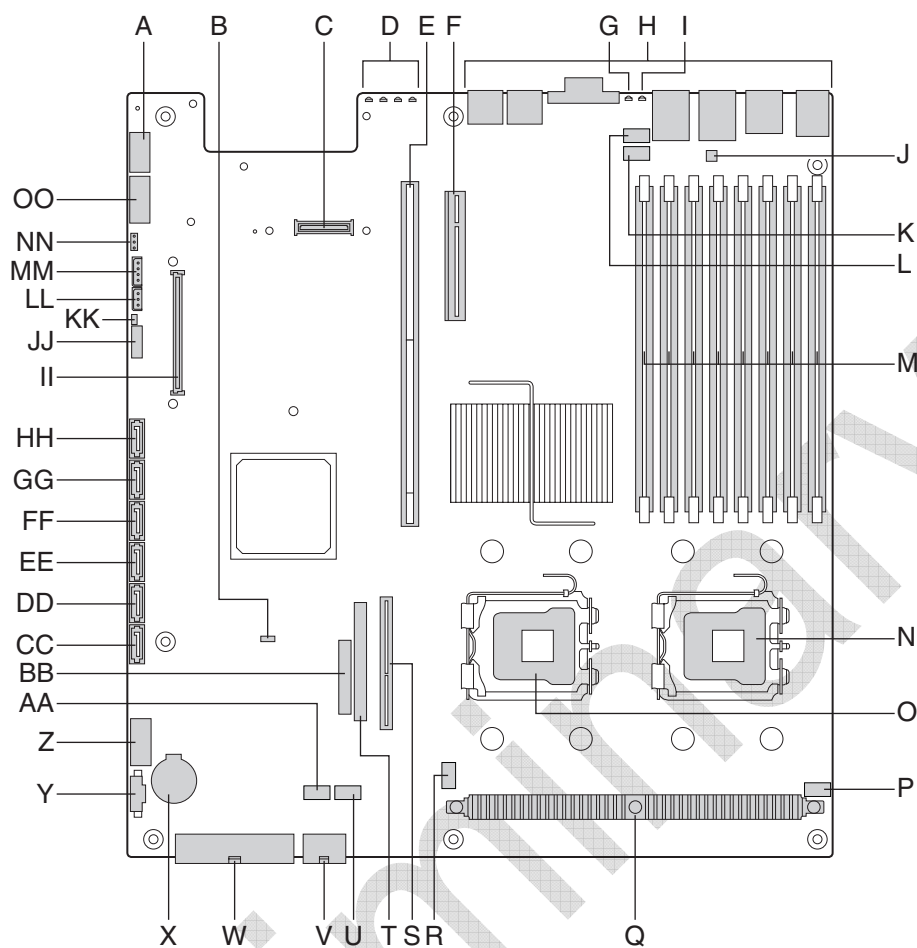

TP02116

Figure 51. Intel® Server Board S500PAL Components

| Description | | Description | |
|-------------|-------------------------------------|-------------|----------------------------------|
| A | Not populated at production**** | U | +12V processor power |
| B | ESB2 South Bridge Chipset Component | V | 24-pin SSI power connector |
| C | I/O Module Connector | W | Battery |
| D | POST Progress LEDs | X | Power supply signal cable |
| E | Full Height Riser Slot | Y | USB 2 Header |
| F | Low Profile Riser Slot | Z | I/O Fan 1 Header |
| G | System Identifier (ID) LED | AA | 24 pin SSI front panel connector |
| H | Back panel I/O ports | BB | SATA Port 1 |
| I | System Status LED | CC | SATA Port 2 |
| J | Memory Fan 2 Header | DD | SATA Port 3 |
| K | Memory Fan 1 Header | EE | SATA Port 4 |
| L | DIMM sockets | FF | SATA Port 5 |
| M | Processor 1 Socket | GG | SATA Port 6 |
| N | Processor 2 Socket | HH | ASMI Connector |
| O | Processor Fan 1 Header | II | System configuration jumpers |
| P | VR11 FET Heatsink | JJ | Chassis Intrusion Header |
| Q | Processor Fan 2 Header | KK | OEM IPMB Header |
| R | Bridge Board Connector | LL | LCP/AUX IPMB Header |
| S | 44 Pin IDE ATA-100 Connector | MM | RAID Key Connector |
| T | I/O Fan 2 Header | NN | Serial Port A |

10. Environmental and Regulatory Specifications

10.1 System Level Environmental Limits

The table below defines the system level operating and non-operating environmental limits

Table 54. System Environmental Limits Summary

| Parameter | Limits |
|--------------------------------------|--|
| Operating Temperature | +10°C to +35°C with the maximum rate of change not to exceed 10°C per hour |
| Non-Operating Temperature | -40°C to +70°C |
| Non-Operating Humidity | 90%, non-condensing @ 35°C |
| Acoustic noise | Sound Pressure: 55 dBA (Rackmount) in an idle state at typical office ambient temperature. (23 +/- degrees C) Sound Power: 7.0 BA in an idle state at typical office ambient temperature. (23 +/- 2 degrees C) |
| Shock, operating | Half sine, 2 g peak, 11 mSec |
| Shock, unpackaged | Trapezoidal, 25 g, velocity change 136 inches/sec (≥ 40 lbs to > 80 lbs) |
| Shock, packaged | Non-palletized free fall in height 24 inches (≥ 40 lbs to > 80 lbs) |
| Vibration, unpackaged | 5 Hz to 500 Hz, 2.20 g RMS random |
| Shock, operating | Half sine, 2 g peak, 11 mSec |
| ESD | +/-15kV except I/O port +/-8KV per Intel Environmental test specification |
| System Cooling Requirement in BTU/Hr | 1826 BTU/hour |

10.2 Product Regulatory Compliance

10.2.1 Product Safety Compliance

The Intel® Server Chassis SR2500 complies with the following safety requirements:

- UL60950 – CSA 60950(USA / Canada)
- EN60950 (Europe)
- IEC60950 (International)
- CB Certificate & Report, IEC60950 (report to include all country national deviations)
- GS License (Germany)
- GOST R 50377-92 - License (Russia)
- Belarus License (Belarus)
- Ukraine License (Ukraine)
- CE - Low Voltage Directive 73/23/EEE (Europe)
- IRAM Certification (Argentina)
- GB4943- CNCA Certification (China)









10.2.2 Product EMC Compliance

The Intel® Server Chassis SR2500 has been tested and verified to comply with the following electromagnetic compatibility (EMC) regulations when installed a compatible Intel host system. For information on compatible host system(s) refer to Intel's Server Builder website or contact your local Intel representative.

- FCC (Class A Verification) – Radiated & Conducted Emissions (USA)
- CISPR 22 – Emissions (International)
- EN55022 - Emissions (Europe)
- EN55024 - Immunity (Europe)
- EN61000-3-2 - Harmonics (Europe)
- EN61000-3-3 - Voltage Flicker (Europe)
- CE – EMC Directive 89/336/EEC (Europe)
- VCCI Emissions (Japan)
- AS/NZS 3548 Emissions (Australia / New Zealand)
- BSMI CNS13438 Emissions (Taiwan)
- GOST R 29216-91 Emissions (Russia)
- GOST R 50628-95 Immunity (Russia)
- Belarus License (Belarus)
- Ukraine License (Ukraine)
- RRL MIC Notice No. 1997-41 (EMC) & 1997-42 (EMI) (Korea)
- GB 9254 - CNCA Certification (China)
- GB 17625 - (Harmonics) CNCA Certification (China)

10.2.3 Product Regulatory Compliance Markings

This product is provided with the following Product Certification Markings.

| Regulatory Compliance | Country | Marking |
|---|-------------------------|---|
| cULus Listing Marks | USA/Canada |  |
| GS Mark | Germany |  |
| CE Mark | Europe |  |
| FCC Marking (Class A) | USA | This device complies with Part 15 of the FCC Rules. Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Manufactured by Intel Corporation |
| EMC Marking (Class A) | Canada | CANADA ICES-003 CLASS A CANADA NMB-003 CLASSE A |
| C-Tick Mark | Australia / New Zealand |  |
| VCCI Marking (Class A) | Japan | この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。VCCI-A |
| BSMI Certification Number & Class A Warning | Taiwan |  |
| | | 警告使用者： 這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策 |
| GOST R Marking | Russia |  |
| RRL MIC Mark | Korea |  |
| China Compulsory Certification Mark | China |  |

10.3 Electromagnetic Compatibility Notices

10.3.1 USA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For questions related to the EMC performance of this product, contact:

Intel Corporation
5200 N.E. Elam Young Parkway
Hillsboro, OR 97124
1-800-628-8686

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit other than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment. The customer is responsible for ensuring compliance of the modified product.

Only peripherals (computer input/output devices, terminals, printers, etc.) that comply with FCC Class B limits may be attached to this computer product. Operation with noncompliant peripherals is likely to result in interference to radio and TV reception.

All cables used to connect to peripherals must be shielded and grounded. Operation with cables, connected to peripherals, that are not shielded and grounded may result in interference to radio and TV reception.

10.3.2 FCC Verification Statement

Product Type: Intel® Server Chassis SR2500; Intel® Server Board S5000PAL

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For questions related to the EMC performance of this product, contact:

Intel Corporation
5200 N.E. Elam Young Parkway
Hillsboro, OR 97124-6497

Phone: 1 (800)-INTEL4U or 1 (800) 628-8686

10.3.3 ICES-003 (Canada)

Cet appareil numérique respecte les limites bruits radioélectriques applicables aux appareils numériques de Classe A prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques", NMB-003 édictée par le Ministre Canadien des Communications.

(English translation of the notice above) This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Canadian Department of Communications.

10.3.4 Europe (CE Declaration of Conformity)

This product has been tested in accordance too, and complies with the Low Voltage Directive (73/23/EEC) and EMC Directive (89/336/EEC). The product has been marked with the CE Mark to illustrate its compliance.

10.3.5 Japan EMC Compatibility

Electromagnetic Compatibility Notices (International)


この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

English translation of the notice above:

This is a Class A product based on the standard of the Voluntary Control Council For Interference (VCCI) from Information Technology Equipment. If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

10.3.6 BSMI (Taiwan)

The BSMI Certification number and the following warning is located on the product safety label which is located on the bottom side (pedestal orientation) or side (rack mount configuration).

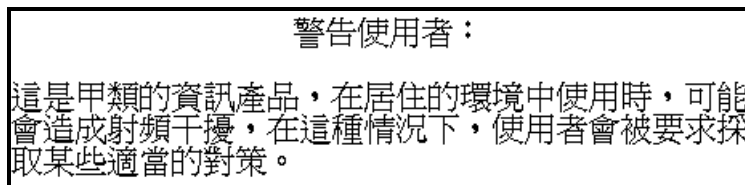

10.3.7 Korean RRL Compliance



1. 기기의 명칭(모델명) :
2. 인증번호 :
3. 인증받은 자의 상호 :
4. 제조년월일 :
5. 제조자/제조국가 :

English translation of the notice above:

1. Type of Equipment (Model Name): On License and Product
2. Certification No.: On RRL certificate. Obtain certificate from local Intel representative
3. Name of Certification Recipient: Intel Corporation
4. Date of Manufacturer: Refer to date code on product
5. Manufacturer/Nation: Intel Corporation/Refer to country of origin marked on product

10.3.8 CNCA (CCC-China)

The CCC Certification Marking and EMC warning is located on the outside rear area of the product.

声明

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取可行的措施。

10.4 Replacing the Back up Battery

The lithium battery on the server board powers the real time clock (RTC) for up to 10 years in the absence of power. When the battery starts to weaken, it loses voltage, and the server settings stored in CMOS RAM in the RTC (for example, the date and time) may be wrong. Contact your customer service representative or dealer for a list of approved devices.



WARNING

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.



ADVARSEL!

Lithiumbatteri - Eksplosionsfare ved fejlagtig håndtering. Udskiftning må kun ske med batteri af samme fabrikat og type. Levér det brugte batteri tilbage til leverandøren.



ADVARSEL

Lithiumbatteri - Eksplosjonsfare. Ved utskifting benyttes kun batteri som anbefalt av apparatfabrikanten. Brukt batteri returneres apparatleverandøren.



VARNING

Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion.



VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

10.5 Serviceability and Availability

The system is designed to be serviced by qualified technical personnel only.

The desired Mean Time To Repair (MTTR) of the system is 30 minutes including diagnosis of the system problem. To meet this goal, the system enclosure and hardware have been designed to minimize the MTTR.

Following are the maximum times that a trained field service technician should take to perform the listed system maintenance procedures, after diagnosis of the system and having identified the failed component.

| Activity | Time Estimate |
|---|---------------|
| Remove cover | TBD |
| Remove and replace hard disk drive | TBD |
| Remove and replace power supply module | TBD |
| Remove and replace system fan | TBD |
| Remove and replace backplane board | TBD |
| Remove and replace control panel module | TBD |
| Remove and replace server board | TBD |

10.6 Restriction of Hazardous Substances (RoHS) Compliance

Intel has a system in place to restrict the use of banned substances in accordance with the European Directive 2002/95/EC. Compliance is based on declaration that materials banned in the RoHS Directive are either (1) below all applicable substance threshold limits or (2) an approved/pending RoHS exemption applies.

Note: RoHS implementing details are not fully defined and may change.

Threshold limits and banned substances are noted below.

- Quantity limit of 0.1% by mass (1000 PPM) for:
 - Lead
 - Mercury
 - Hexavalent Chromium
 - Polybrominated Biphenyls Diphenyl Ethers (PBDE)
- Quantity limit of 0.01% by mass (100 PPM) for:
 - Cadmium

10.7 Regulated Specified Components

To maintain the UL listing and compliance to other regulatory certifications and/or declarations, the following regulated components must be used and conditions adhered to. Interchanging or use of other component will void the UL listing and other product certifications and approvals.

Updated product information for configurations can be found on the Intel Server Builder Web site at the following URL: <http://channel.intel.com/go/serverbuilder>
 If you do not have access to Intel's Web address, please contact your local Intel representative.

Server Chassis (base chassis is provided with power supply and fans)—UL listed.

Server board—you must use an Intel server board—UL recognized.

Add-in boards—must have a printed wiring board flammability rating of minimum UL94V-1. Add-in boards containing external power connectors and/or lithium batteries must be UL recognized or UL listed. Any add-in board containing modem telecommunication circuitry must be UL listed. In addition, the modem must have the appropriate telecommunications, safety, and EMC approvals for the region in which it is sold.

Peripheral Storage Devices—must be UL recognized or UL listed accessory and TUV or VDE licensed. Maximum power rating of any one device is 19 watts. Total server configuration is not to exceed the maximum loading conditions of the power supply.

Preliminary

< This page intentionally left blank >

Preliminary

Appendix A: Chassis Integration and Usage Tips

This appendix provides a list of useful information that is unique to the Intel® Server Chassis SR2500 and should be kept in mind while integrating and configuring your system.

- You must run the FRUSDR utility to load the proper Sensor Data Records for this chassis on to the server board. Failure to do so may result in possible false errors being reported to the System Event Log. It is best to download the latest FRUSDR Utility for your particular server board from the following web site: <http://support.intel.com/support/motherboards/server>
- To ensure proper cooling of your server, all air baffles and air ducts must be in place. In addition, all drive bays must be populated with either a drive or a drive blank.
- Processor fans are not supported and are not needed in the Intel® Server Chassis SR2500.

Glossary

| Word / Acronym | Definition |
|----------------|---|
| ACA | Australian Communication Authority |
| ANSI | American National Standards Institute |
| BMC | Baseboard Management Controller |
| CMOS | Complementary Metal Oxide Silicon |
| D2D | DC-to-DC |
| EMP | Emergency Management Port |
| FP | Front Panel |
| FRB | Fault Resilient Boot |
| FRU | Field Replaceable Unit |
| LCD | Liquid Crystal Display |
| LPC | Low-Pin Count |
| MTBF | Mean Time Between Failure |
| MTTR | Mean Time to Repair |
| OTP | Over-temperature Protection |
| OVP | Over-voltage Protection |
| PFC | Power Factor Correction |
| PSU | Power Supply Unit |
| RI | Ring Indicate |
| SCA | Single Connector Attachment |
| SDR | Sensor Data Record |
| SE | Single-Ended |
| UART | Universal Asynchronous Receiver Transmitter |
| USB | Universal Serial Bus |
| VCCI | Voluntary Control Council for Interference |